




STAND-ON SPREADER SPRAYER

Model No. SSS270CSB00000—Serial No. 400000000 and Up

Picture below may not reflect actual product.

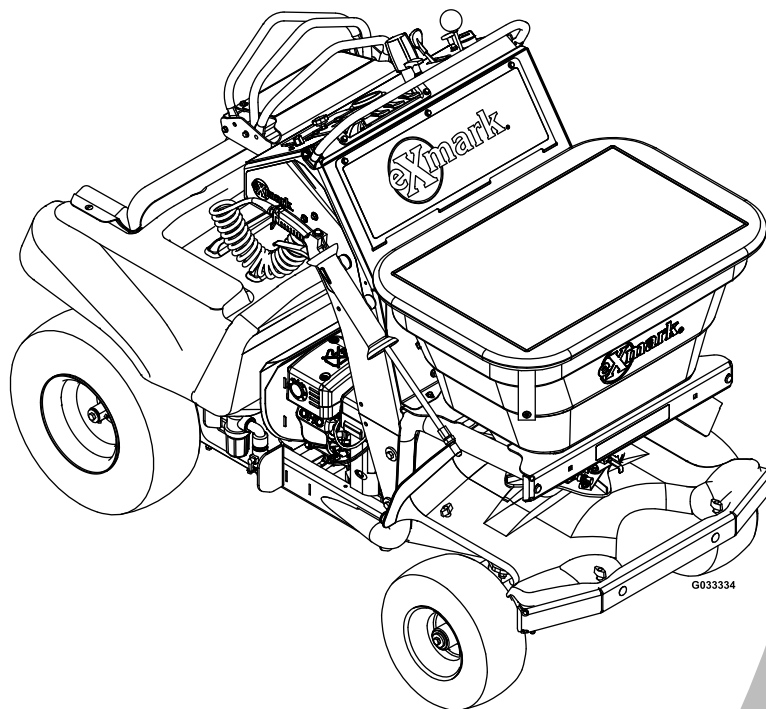

Parts Manual

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Touch Up Paint

Exmark black touch up spray paint – gloss black.

Exmark red touch up paint (spray paint – P/N 1-850337 - .6 oz liquid bottle – P/N 103-9140).




If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE Guaranteed!! (Some restrictions apply. See your participating Exmark Dealer for details.)

Contents

Frame Assembly	4
Control Tower W/Decals	6
Knee Pad Assembly	8
Steering Assembly	10
Steering Linkage Assembly	12
Spray System Assembly	14
Sprayer Tank Assembly	16
Control Valve Manifold Assembly	18
Control Valve Manifold Assembly (cont.)	20
Hose Assembly No. 126-2250	22
Hose Assembly No. 126-7304	24
Strainer Assembly	26
Left Nozzle Assembly No. 126-3667	28
Center Nozzle Assembly No. 126-3668	30
Right Nozzle Assembly No. 126-3669	32
Spreader Assembly	34
Side Deflector Assembly	36
Hopper Assembly	38
Spreader Motor Assembly	40
Ground Drive Assembly	42
Transaxle Cover Assembly No. 126-1462	44
Engine Assembly	46
Electrical Assembly	48

Frame Assembly

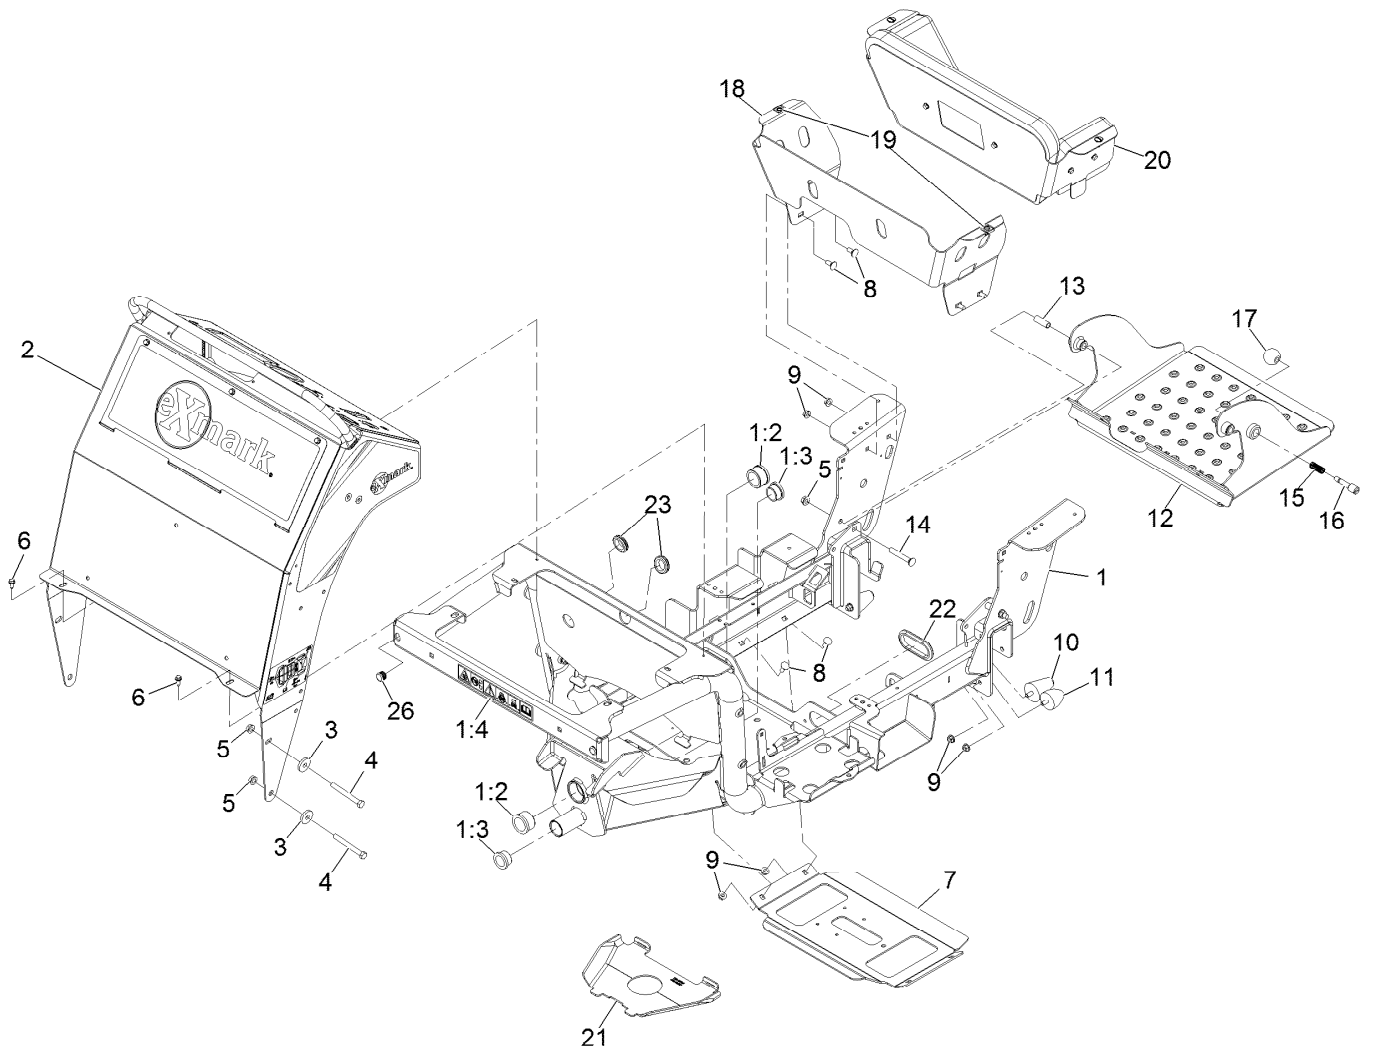


Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-0198	1	Frame ASM	11	114-1926	2	Bumper-Rubber
1:2	126-3008	2	Bearing-Flanged	12	126-0435	1	Operator Platform ASM
1:3	126-3002	2	Bearing-Flanged	13	126-0434	2	Bushing-Pivot, Platform
1:4	126-4994	1	Decal-Tie Down	14	126-0702	2	Screw-CARR
2	126-6398	1	Control Tower ASM	15	114-5348	1	Spring
3	126-3875	4	Washer	16	119-8650	1	Pin-Latch
4	126-2661	4	Screw-HH	17	1-603175	1	Knob-Ball
5	126-2233	6	Nut-Hex Flg 3/8-16 Nyloc SS	18	126-1234-03	1	Mount-Pad, Knee
6	32144-10	2	Screw-HWH 1/4-20 X .62	19	119-1730	2	Receptacle-Clip, Mini
7	126-1415	1	Guard-Lower	20		1	Knee Pad ASM ●
8	126-0695	8	Screw-CARR	21	126-2567	1	Shield-Dust
9	126-2232	12	Nut-Nyloc 5/16-18 SS	22	237-164	2	Grommet
10	114-1925	2	Bumper-Rubber	23	240-5	2	Grommet
				26	126-5147	2	Plug-Tube

● Not serviced separately


Control Tower W/Decals

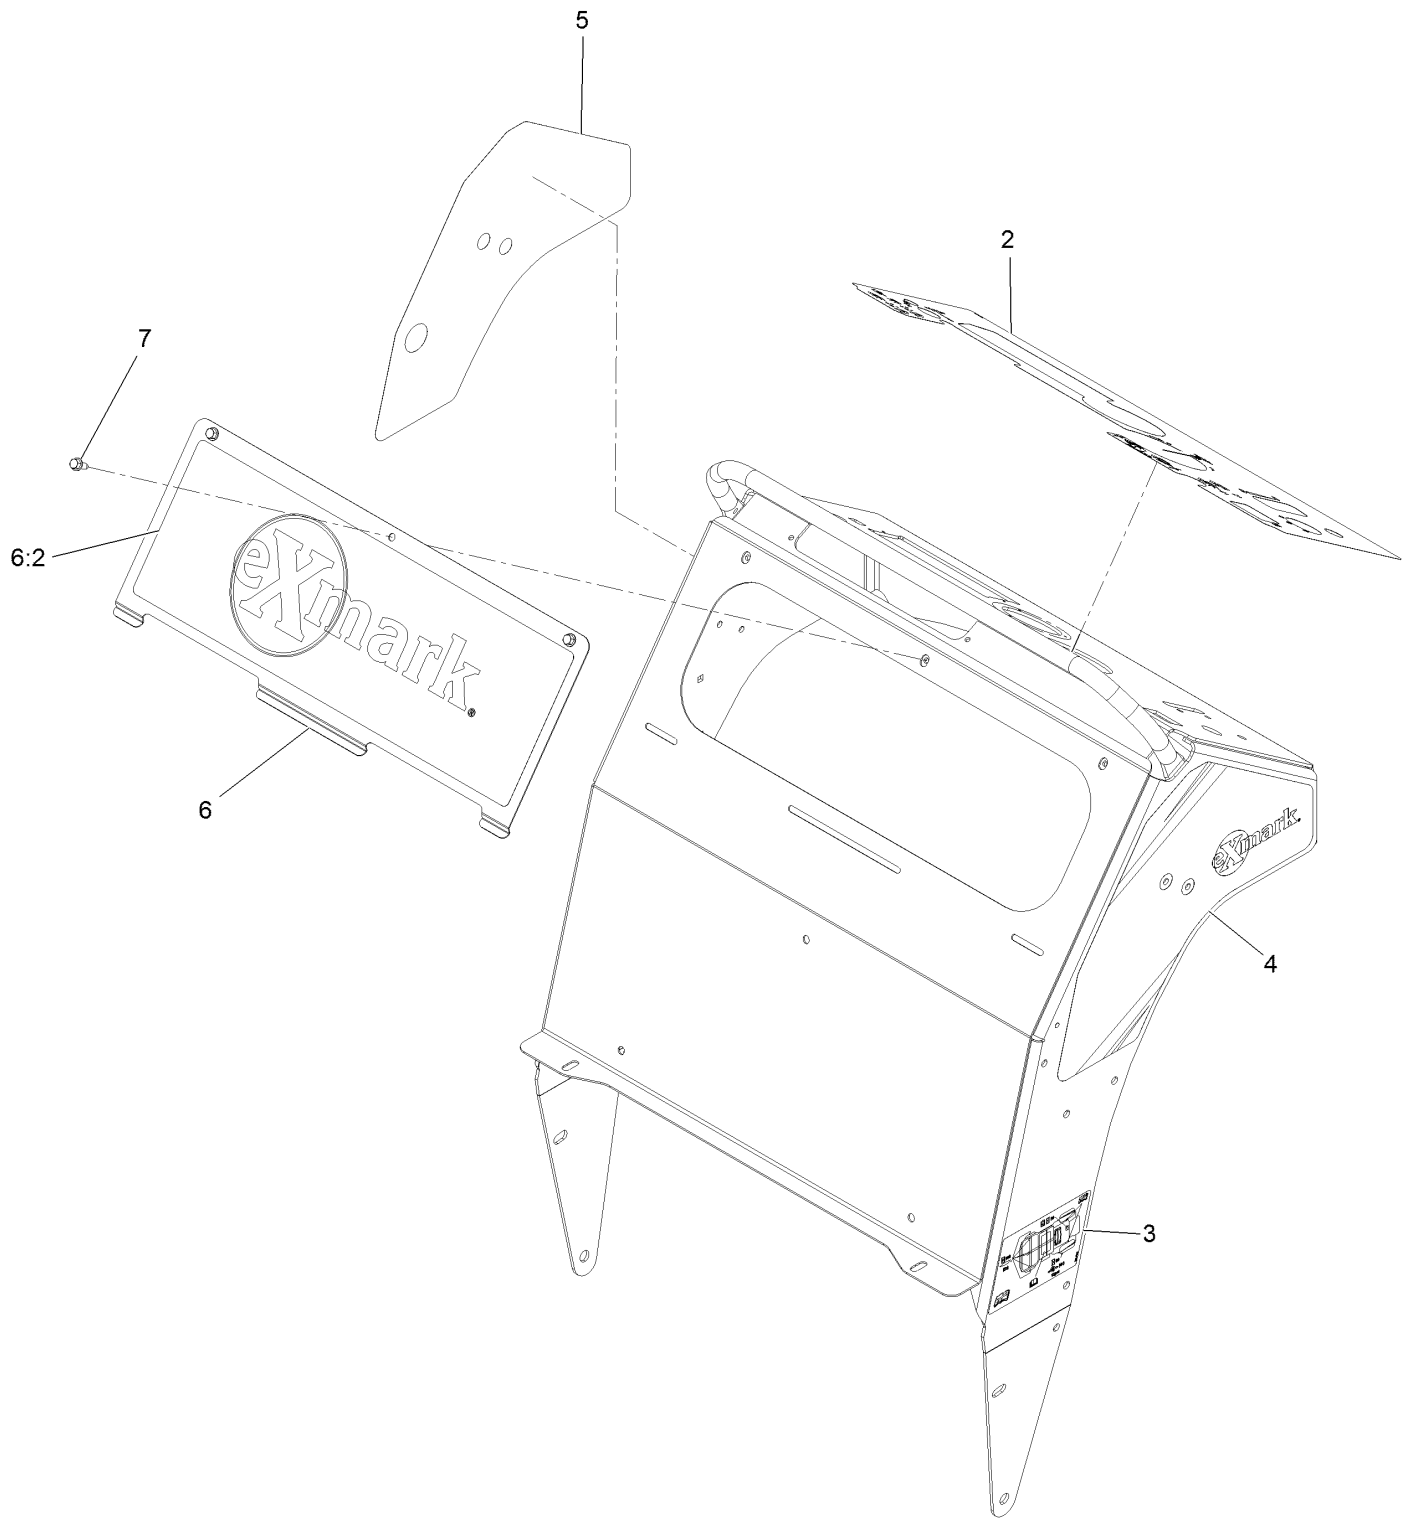

Control Tower W/Decals (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	126-9655	1	Decal-Control	6	126-7215	1	Access Panel W/ Decal
3	126-5186	1	Decal-Service Aid	6:2	126-7206	1	Decal-Exmark Front Panel
4	126-7207	1	Decal-LH Side Panel	7	32144-10	3	Screw-HWH 1/4-20 X .62
5	126-7208	1	Decal-RH Side Panel				


Knee Pad Assembly

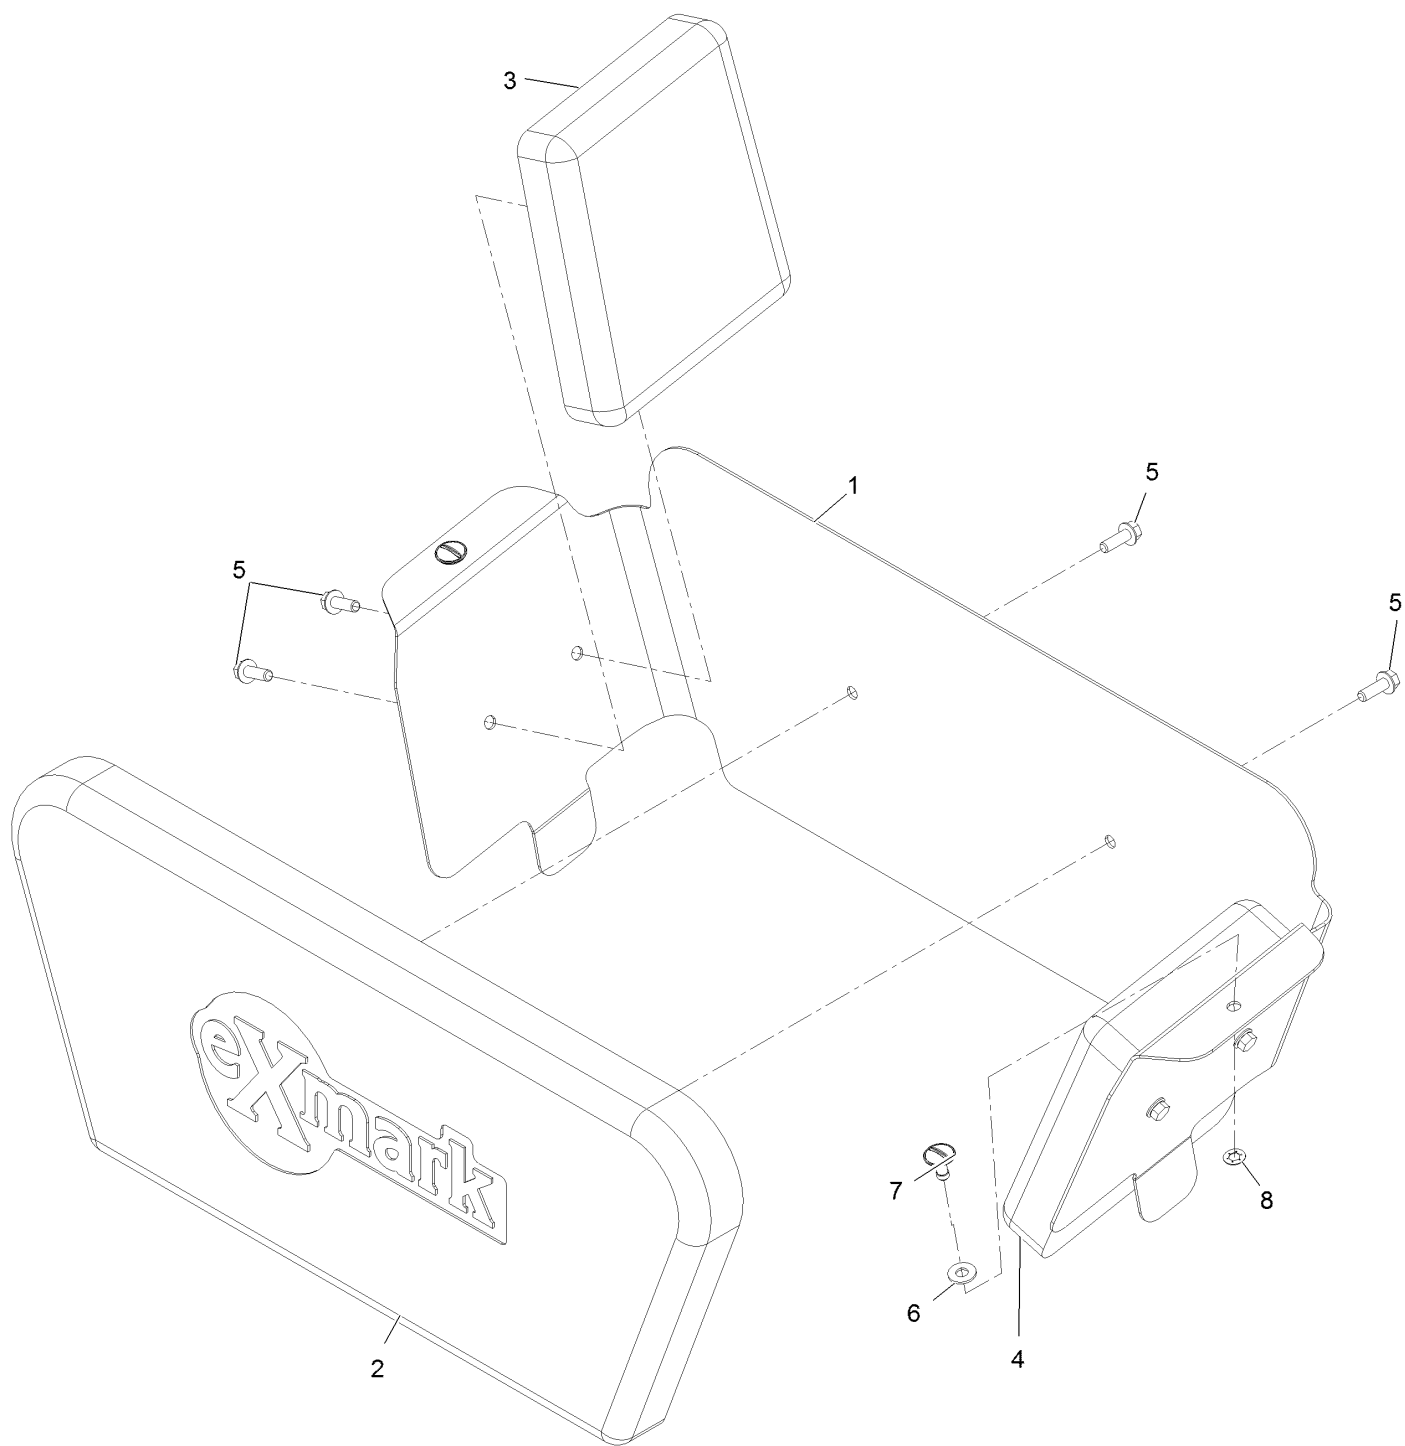

Knee Pad Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-1244-03	1	Bracket-Pad, Knee	6	360-0140	2	Washer-Flat
2	126-1249	1	Pad-Knee, Center	7	119-1728	2	Stud-1/4 Turn
3	126-1250	1	Pad-Knee, LH Side	8	119-1729	2	Retainer-Stud
4	126-2773	1	Pad-Knee, RH Side				
5	117-8304	6	Screw-Hex Flange 1/4-20 X 3/4				


Steering Assembly

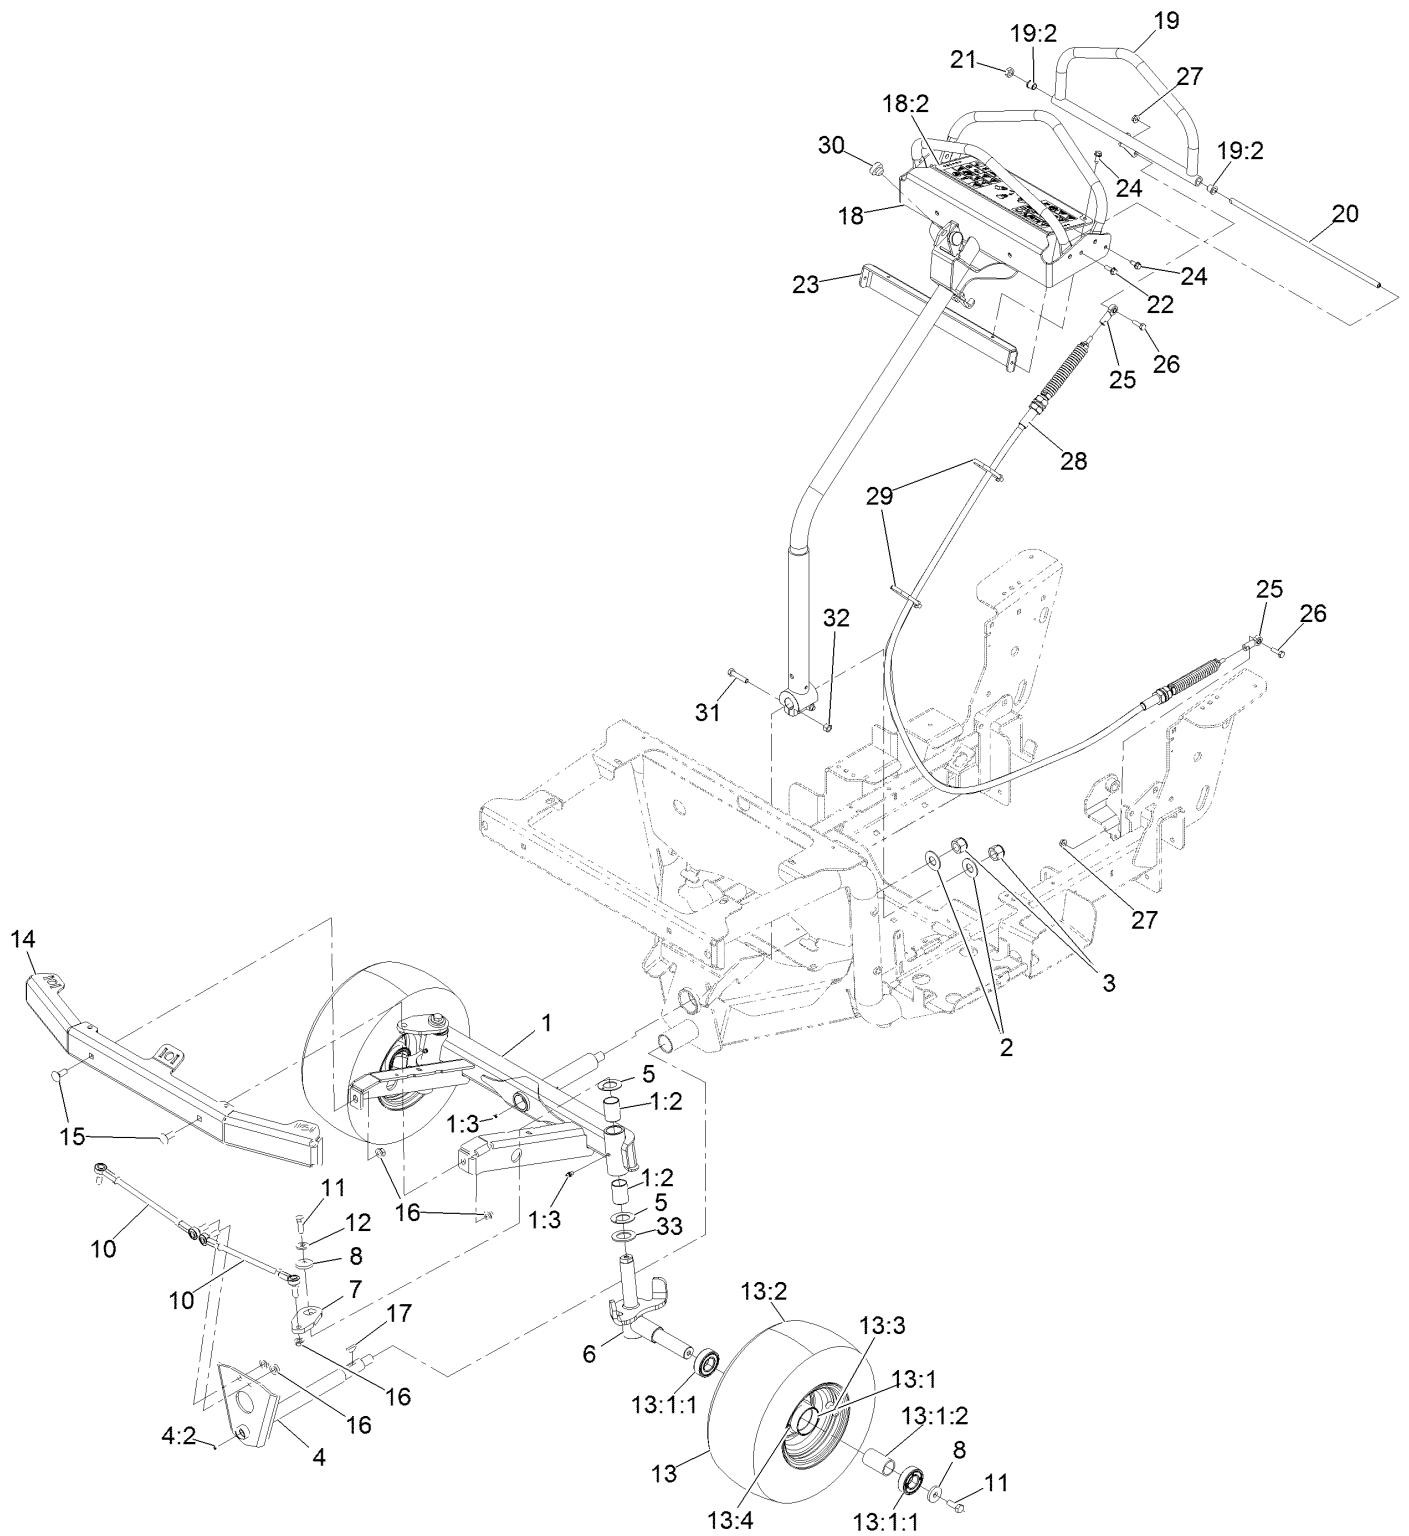

Steering Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-7045	1	Front Axle ASM	16	126-2233	6	Nut-Hex Flg 3/8-16 Nyloc SS
1:2	126-7048	4	Bearing-Sleeve	17	3257-7	1	Key-Woodruff
1:3	126-1375	3	Zerk-Grease	18	126-1614	1	Motion Handle ASM
2	126-0656	2	Washer-Flat	18:2	126-2612	1	Decal-Warning
3	126-3841	2	Nut-Hex Nyloc 5/8-11 SS	19	126-1598	1	Motion Handle ASM
4	126-6048	1	Steering Shaft ASM	19:2	103-9928	2	Bearing
4:2	126-1375	1	Zerk-Grease	20	126-0496	1	Shaft-Pivot, Speed Control
5	126-7044	4	Washer-Thrust	21	116-4198	1	Spacer-Shaft, Drive Lever
6	126-6733	2	Front Axle ASM	22	117-8304	2	Screw-Hex Flange 1/4-20 X 3/4
7	126-7069	2	Arm-Steering	23	126-1604-03	1	Panel-Rear, Steering
8	126-3875	4	Washer	24	32144-10	4	Screw-HWH 1/4-20 X .62
10	126-7185	2	Steering Linkage ASM	25	2411-41	2	Rod End-Ball Joint
11	3235-22	4	Screw-HH, Lock	26	126-0498	2	Screw-HH 1/4-20 X 7/8 SS
12	98-5975	2	Washer-Spring Disc 3/8	27	126-2231	2	Nut-Nyloc 1/4-20 SS
13	126-7220	2	Wheel And Tire ASM	28	126-2169	1	Cable-Motion
13:1	126-7258	1	Wheel ASM	29	1-303335	2	Tie-Cable 7 15/16 (Large)
13:1:1	116-0720	2	Bearing-Ball	30	104-1412	2	Bumper-Rubber
13:1:2	126-7260	1	Spacer	31	3210-8	2	Screw-HH 5/16-24 X 1 1/2
13:2	126-1509	1	Tire	32	32152-5	2	Nut-Hex 5/16-24
13:3	232-27	1	Stem-Valve	33	126-7050	2	Spacer-Relief
13:4	302-62	1	Fitting-Grease				
14	116-9789	1	Bumper-Front				
15	126-0980	2	Screw-Carriage 3/8-16 X 1 SS				

Steering Linkage Assembly

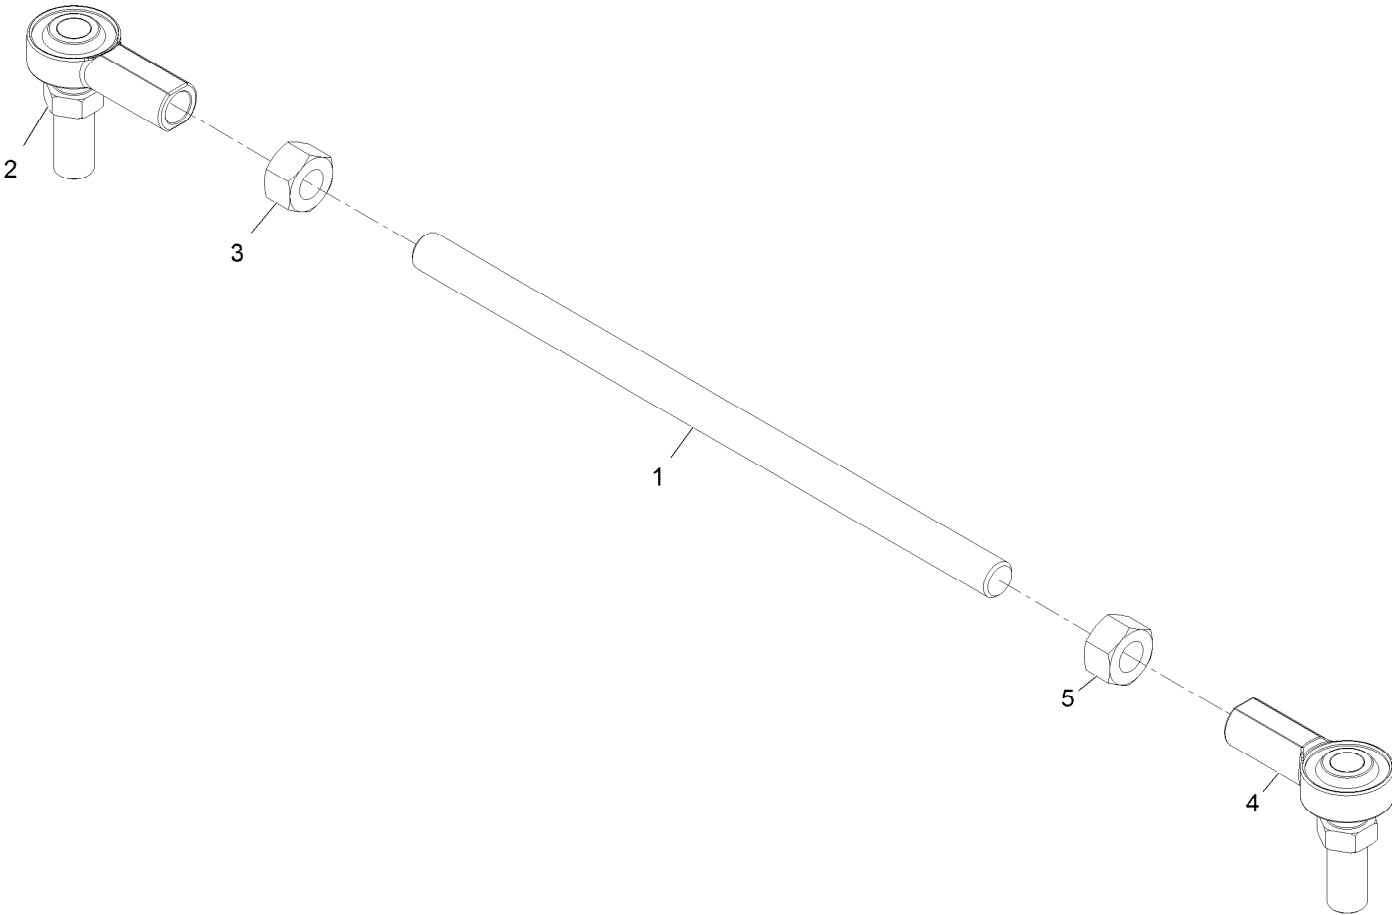


Steering Linkage Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-7183	1	Rod-Linkage, Steering
2	126-7181	1	Rod-End, RH
3	126-0687	1	Nut-Hex

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	126-7182	1	Rod-End, LH
5	126-0688	1	Nut-Hex, LH

Spray System Assembly

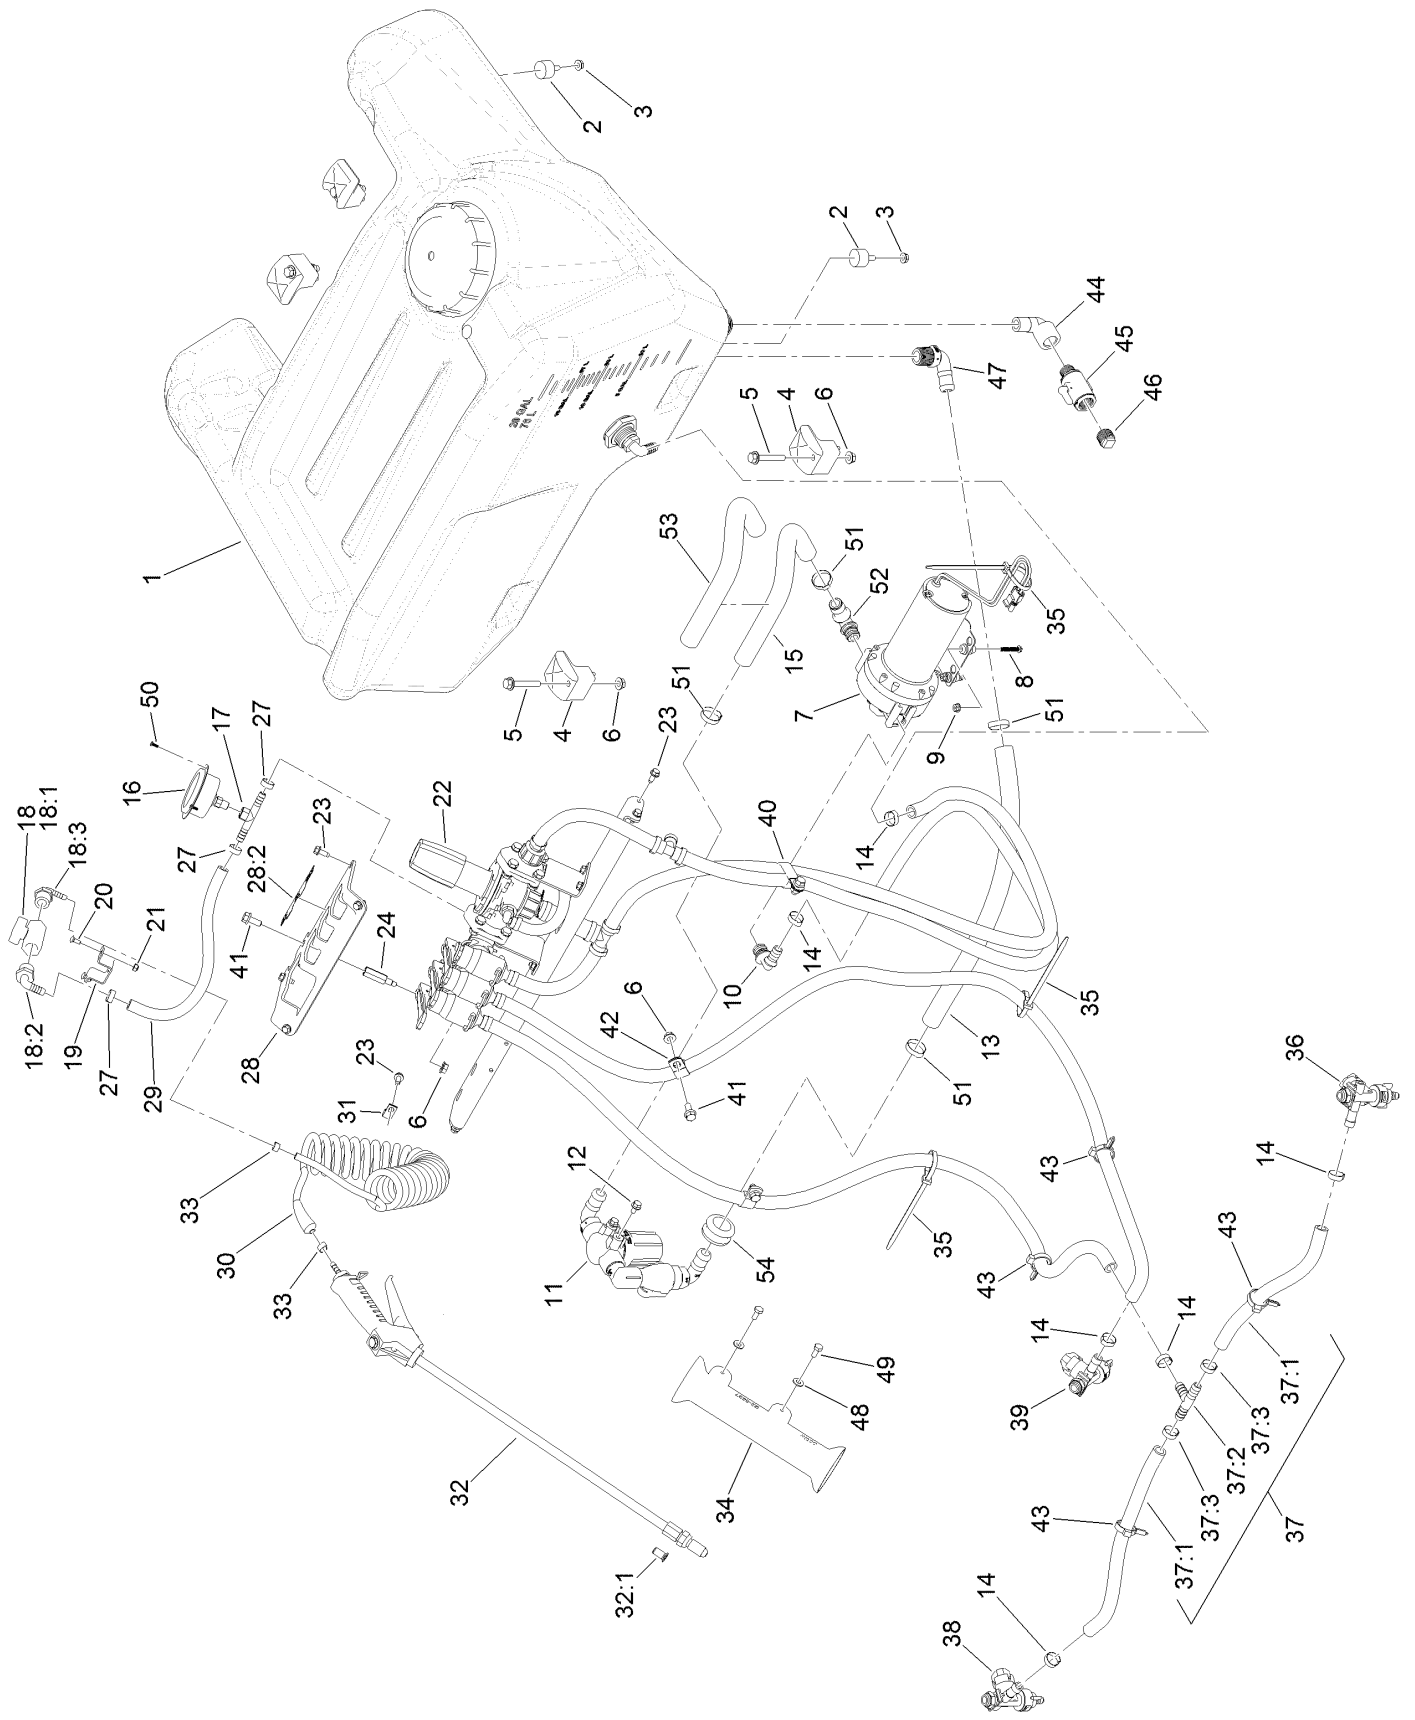


Spray System Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-0286	1	Tank-Sprayer	29	126-5847	1	Hose-Water, 3/8 Pvc Red
2	116-6380	4	Bumper-Rubber (W/ Stud)	30	126-1493	1	Hose-Coiled
3	126-2231	5	Nut-HF	31	2412-89	1	Clamp-R
4	107-4543	4	Clamp	32	126-8000	1	Spray Wand ASM
5	126-2711	4	Screw-HHF	32:1	126-3943	1	Strainer-Nozzle, 50M 5PSI
6	126-2232	7	Nut-HF				Check
7	126-4839	1	Pump-Diaphragm, 3.8 GPM	33	126-2707	2	Clamp
8	692501	4	Screw-SHWH	34	126-3987	1	Holder-Wand
9	126-2645	4	Nut-HF	35	1-303335	5	Tie-Plastic
10	126-0961	1	Fitting-Elbow, Barbed	36	126-3667	1	Left Nozzle Sub ASM
11	126-4358	1	Strainer ASM	37	126-2252	1	Hose ASM
12	126-2713	2	Screw-HHF	37:1	126-2264	2	Hose-Water
13	126-4422	1	Hose-Water	37:2	126-0968	1	Fitting-Tee
14	126-4778	6	Clamp	37:3	126-4778	2	Clamp
15	126-4637	1	Hose-Water	38	126-3669	1	Right Nozzle Sub ASM
16	126-4110	1	Gauge-Pressure	39	126-3668	1	Center Nozzle Sub ASM
17	126-2348	1	Fitting-Tee	40	120-1959	1	Clamp-R, Double
18		1	Wand Control ASM ●	41	126-2712	4	Screw-HHF
18:1	126-0242	1	Valve-Ball	42	1-633396	2	Clip-Loom
18:2	126-4992	1	Fitting-Elbow-90	43	105-1853	4	Clamp-Hose
18:3	126-4993	1	Fitting-Elbow-90	44	108-3573	1	Elbow-90 DEG
19	126-0239-03	1	Bracket-Valve	45	126-1494	1	Microvalve
20	1-807513	2	Bolt-CARR	46	363-3125	1	Plug
21	3296-2	2	Nut-Lock, NI	47	119-0490	1	Elbow-Hosebarb
22		1	Control Valve Manifold ASM ●	48	360-0140	2	Washer-Flat
23	32144-10	9	Screw-HWH	49	126-1290	2	Screw-HH
24	126-4914	1	Spacer-Mount, Manifold	50	363-8552	3	Screw-TAP
27	126-3749	3	Clamp	51	126-4779	6	Clamp
28	126-4180	1	Cover-Controls	52	126-4420	1	Fitting-Elbow
28:2	126-4161	1	Decal-Control, Lever	53	126-5065	1	Sleeve-Corrugated, Split
				54	126-7410	1	Grommet

● Not serviced separately

Sprayer Tank Assembly

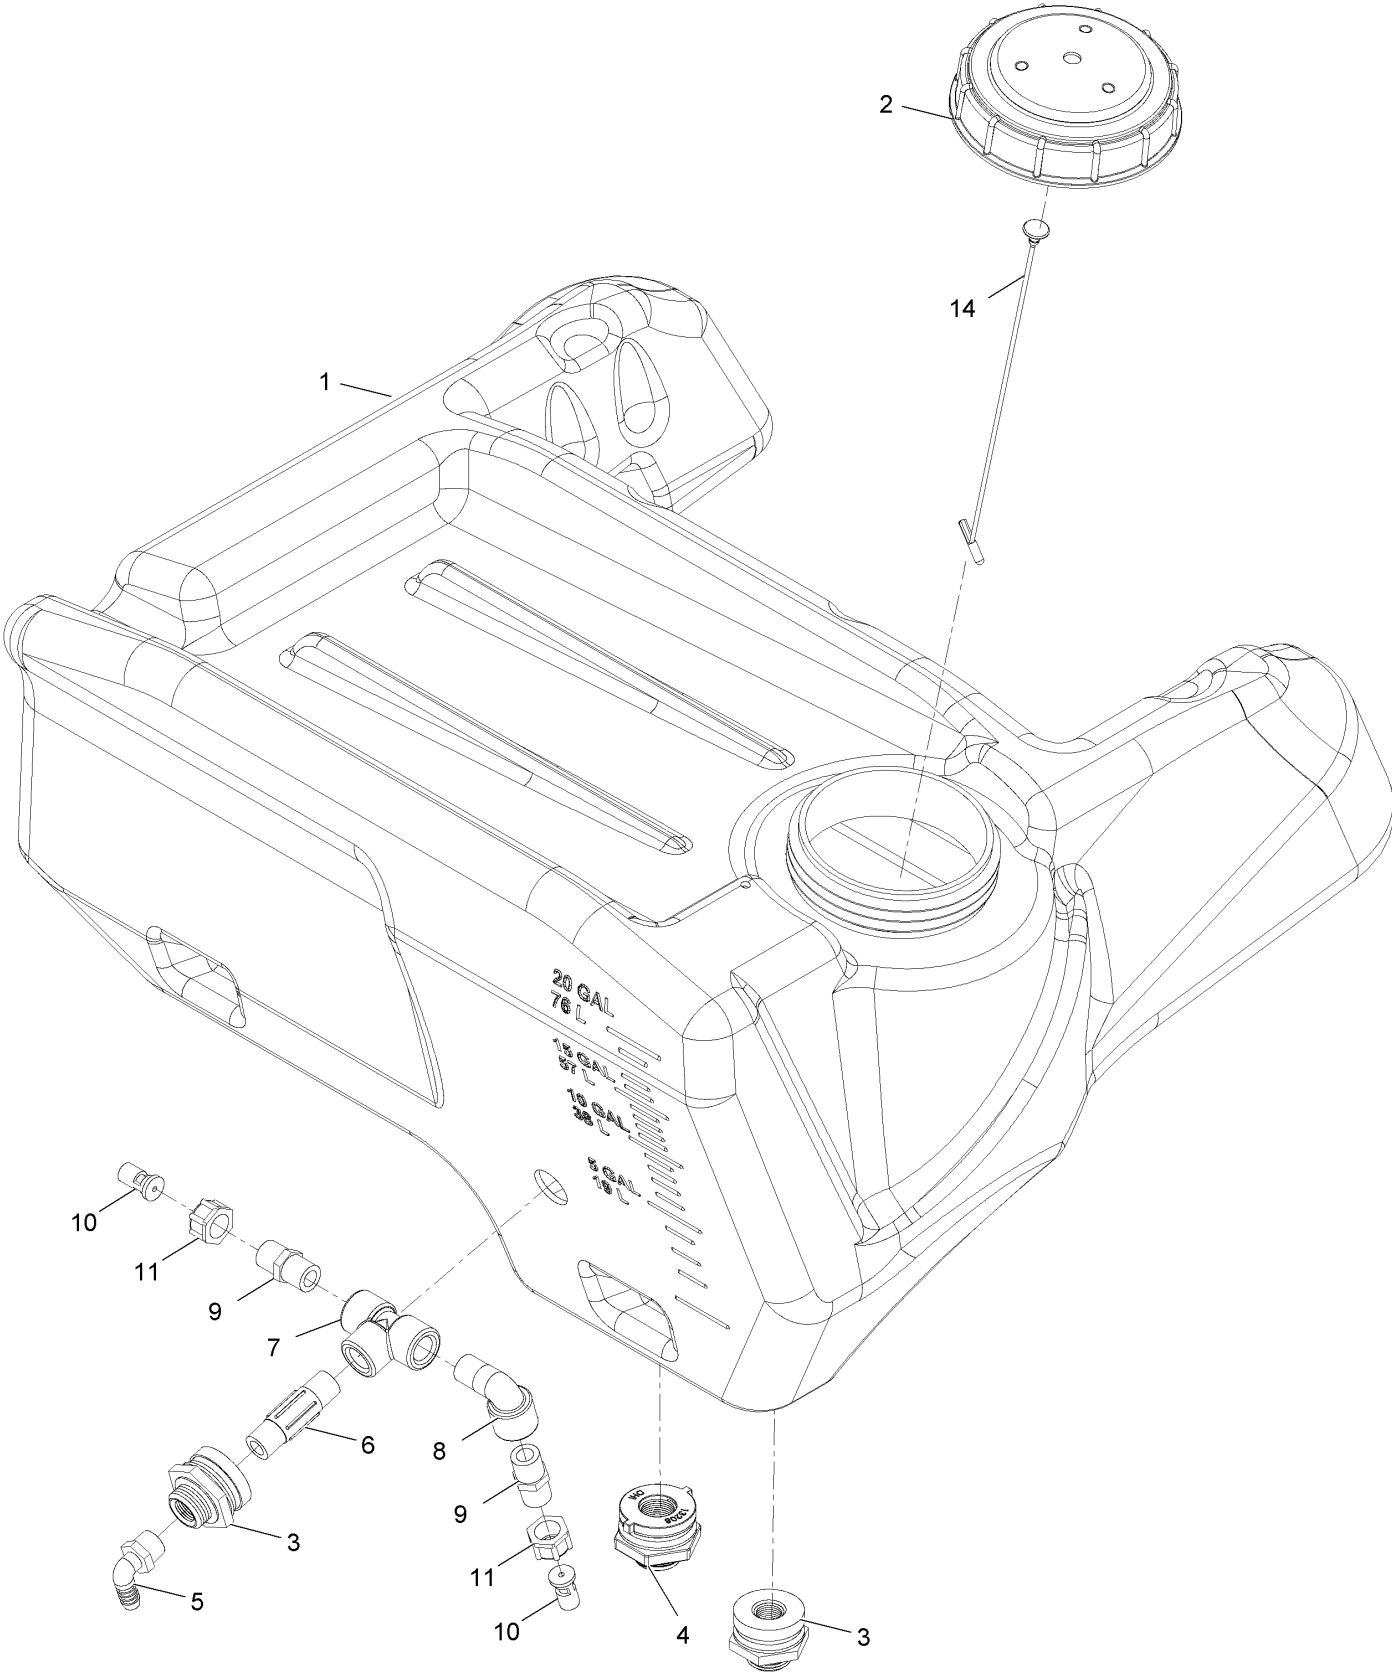


Sprayer Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Tank-Sprayer ●	8	108-3573	1	Elbow-90 DEG
2	126-0285	1	Cap-Water, 5 Inch Vent	9	108-3574	2	Nipple-Short
3	126-0400	2	Fitting-Bulkhead	10	100-6705	2	Nozzle-Agitation
4	126-4393	1	Fitting-Bulkhead	11	99-0766	2	Nut
5	42046	1	Elbow-90 DEG	14	126-3381	1	Lanyard-Cap, Self Anchoring (12 Inch)
6	94-7103	1	Nipple				
7	94-7100	1	Tee				

● Not serviced separately

Control Valve Manifold Assembly

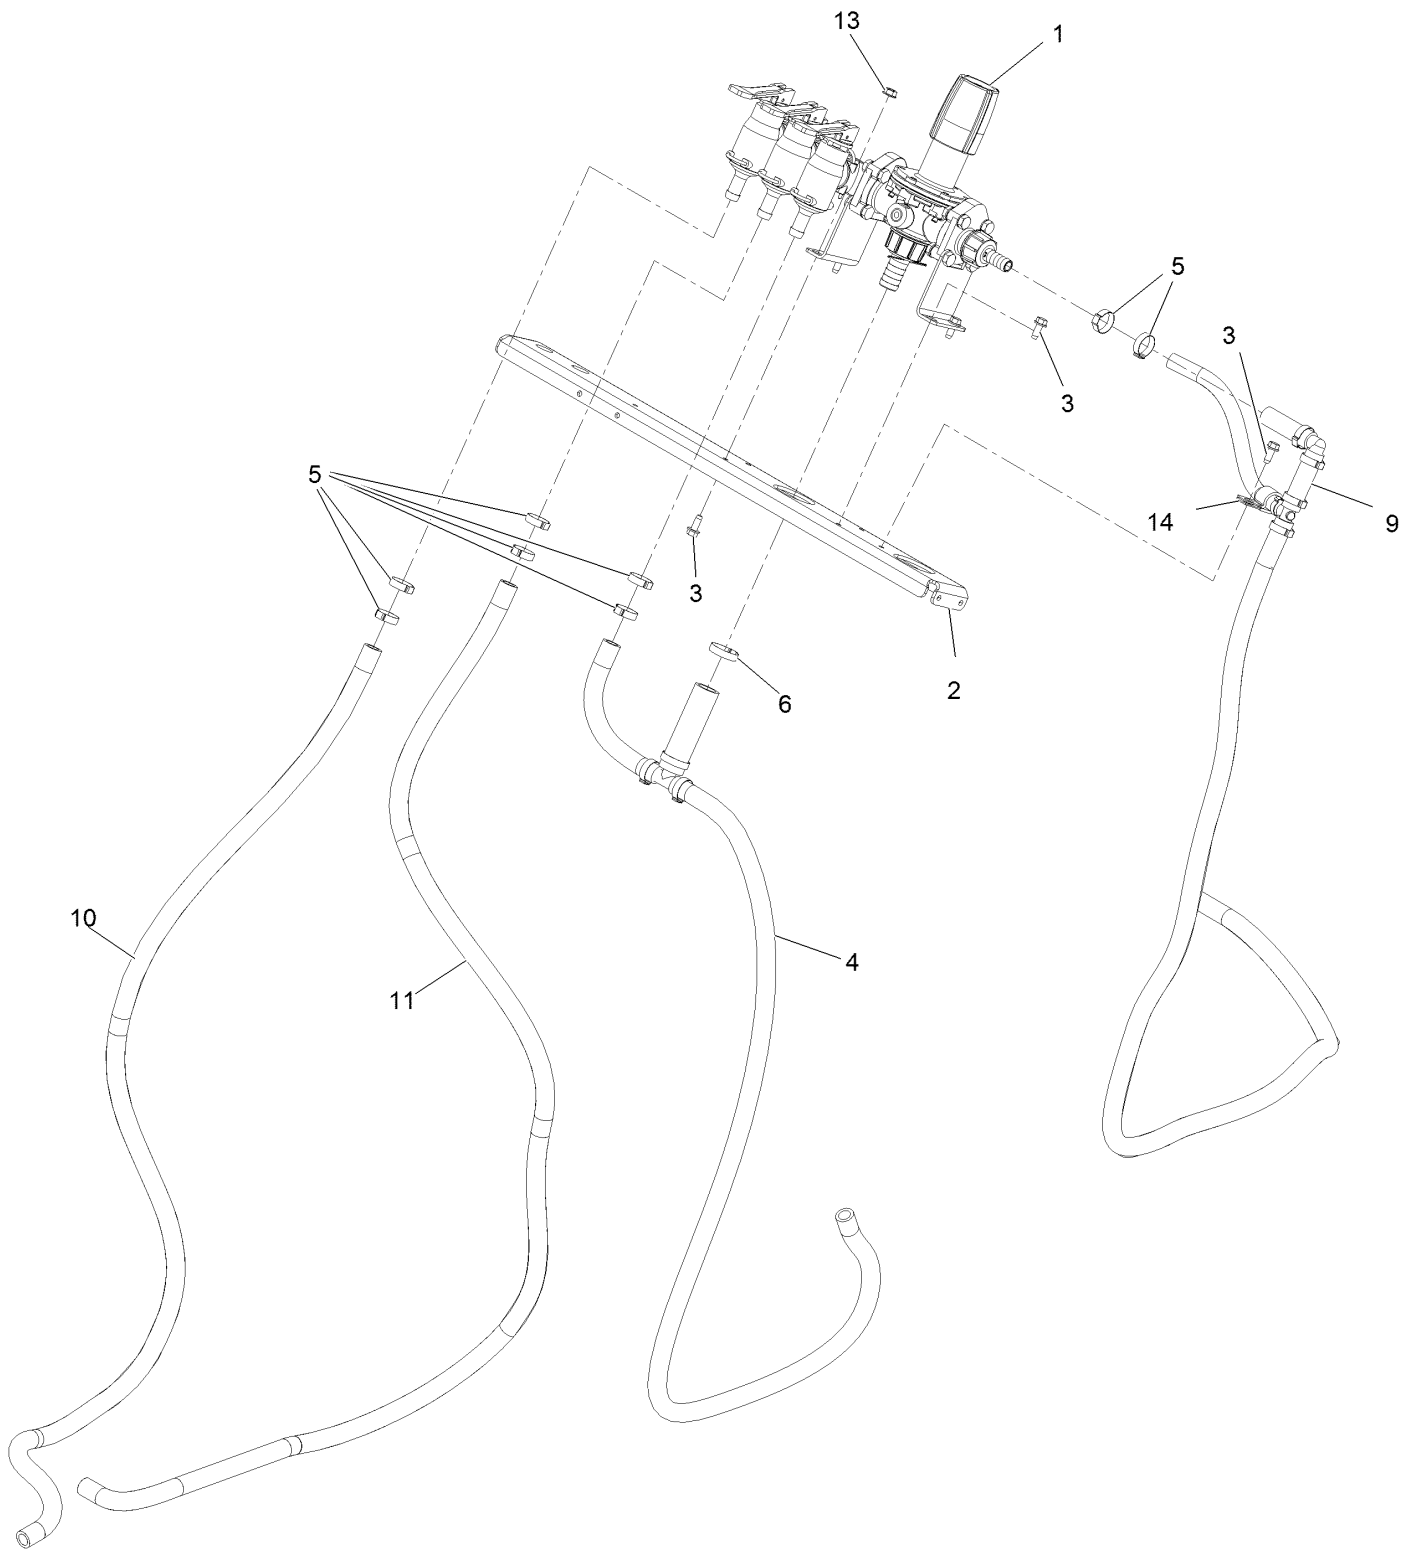


Control Valve Manifold Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-7635	1	Spray Manifold Assembly
2	126-7302-03	1	Crossmember-Column
3	32144-10	5	Screw-HWH 1/4-20 X .62
4	126-2250	1	Hose ASM
5	126-4778	8	Clamp
6	126-4779	1	Clamp

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
9	126-7304	1	Hose ASM
10	126-2263	1	Hose-Water
11	126-2261	1	Hose-Water
13	126-2231	1	Nut-Nyloc 1/4-20 SS
14	1-633396	1	Clip-Loom 5/8


Control Valve Manifold Assembly (cont.)

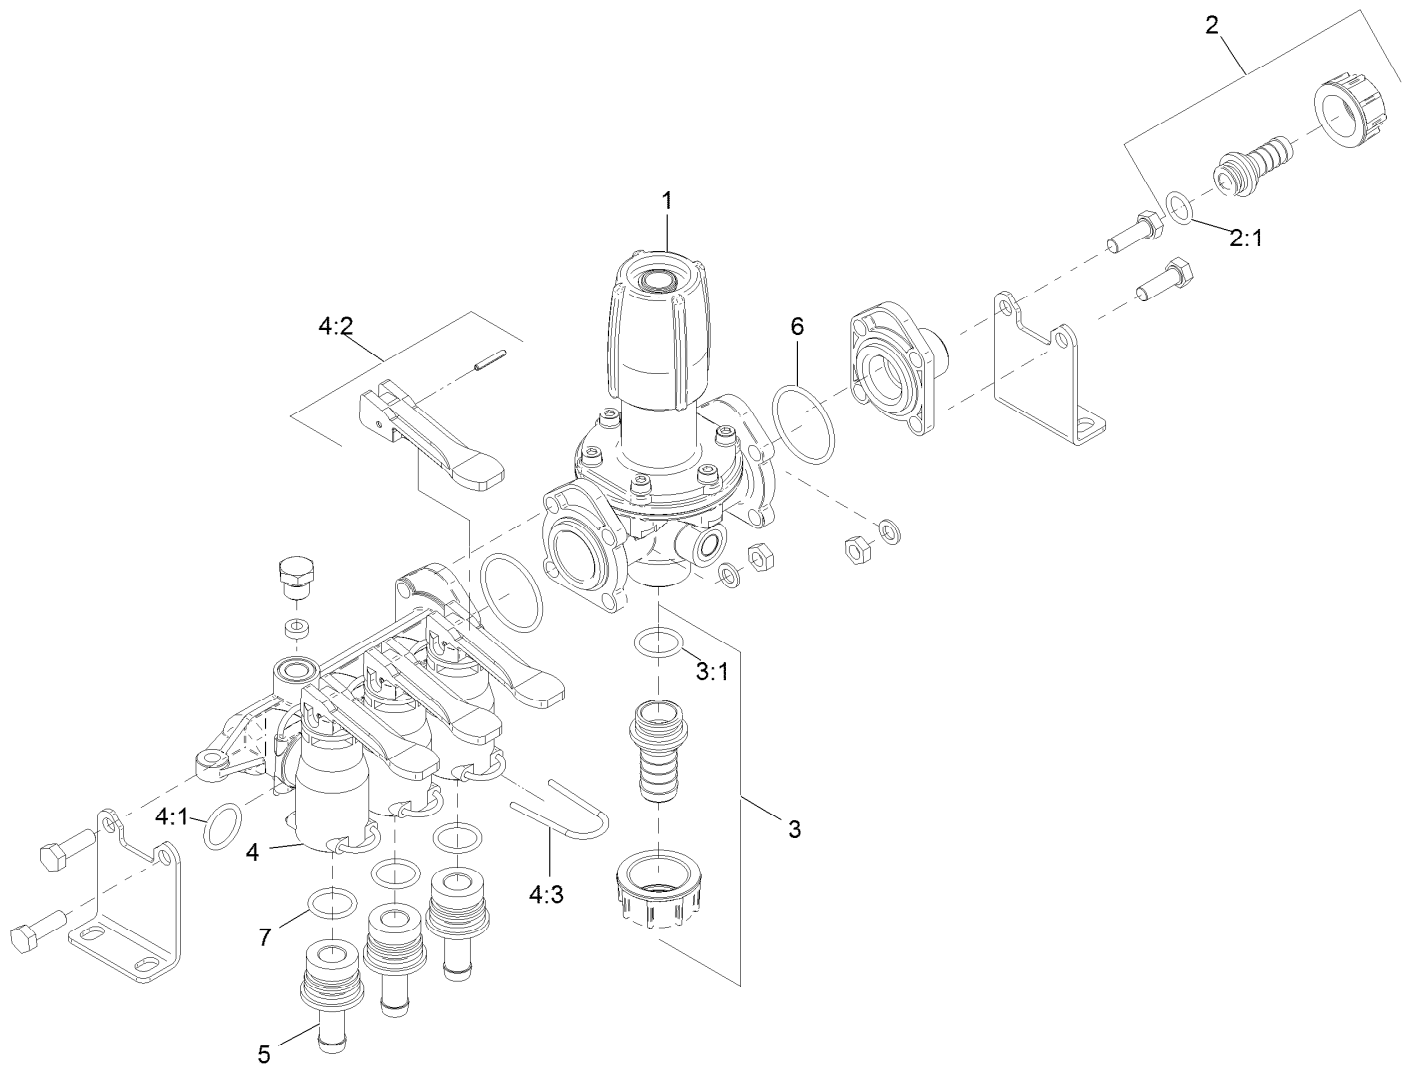

Control Valve Manifold Assembly (cont.) (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-6303	1	Regulator	4:1	126-6328	1	O-Ring Kit, Valve Inlet
2	126-6304	1	Flynut Assembly	4:2	126-6319	1	Lever And Pin Assembly
2:1	126-6322	1	O-Ring Kit, Regulator Inlet Barb	4:3	126-6332	1	Wireform Retainer Kit
3	126-6317	1	Flynut Assembly	5	126-6321	1	Hose Barb
3:1	126-6323	1	O-Ring Kit, Regulator Outlet Barb	6	126-6326	1	O-Ring Kit, Regulator Flange
4	126-7641	1	Valve Assembly W/ O-Ring	7	126-6327	1	O-Ring Kit, Valve Outlet Barb

Hose Assembly No. 126-2250

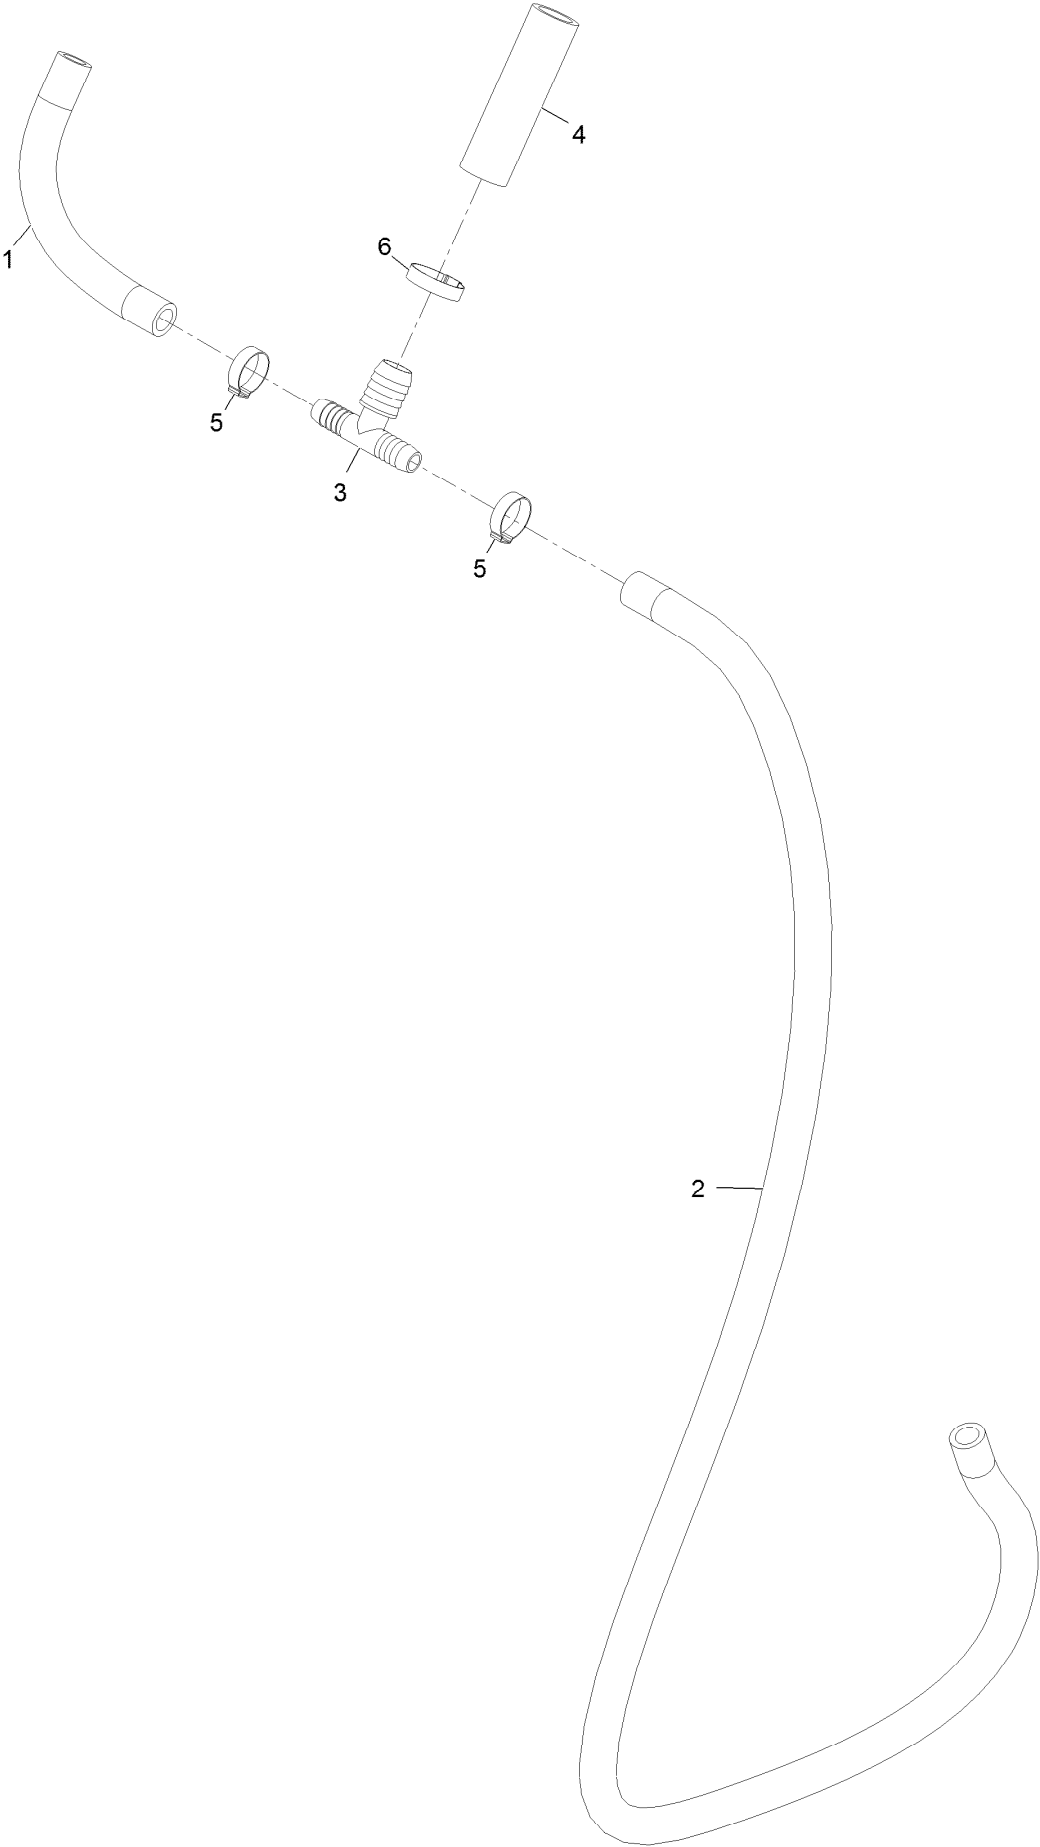


Hose Assembly No. 126-2250 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-2257	1	Hose-Water
2	126-2259	1	Hose-Water
3	126-0969	1	Fitting-Tee

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	126-0865	1	Hose-Water
5	126-4778	2	Clamp
6	126-4779	1	Clamp

Hose Assembly No. 126-7304

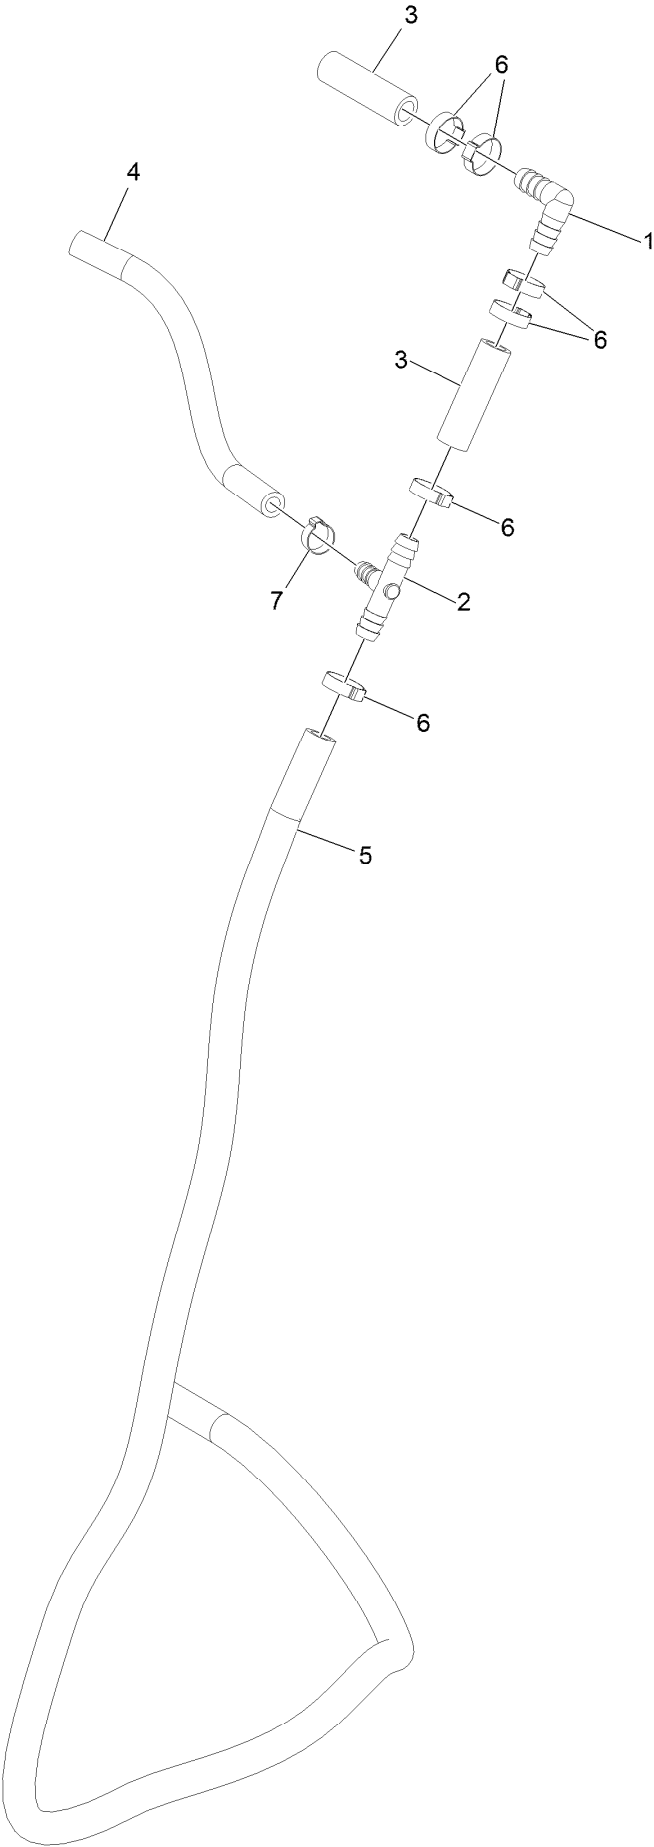


Hose Assembly No. 126-7304 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-1001	1	Fitting-Elbow-90
2	99-7371	1	Connector-Tee
3	126-7231	2	Hose-Water
4	126-7307	1	Hose-Water

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	126-7306	1	Hose-Water
6	126-4778	6	Clamp
7	126-3749	1	Clamp


Strainer Assembly

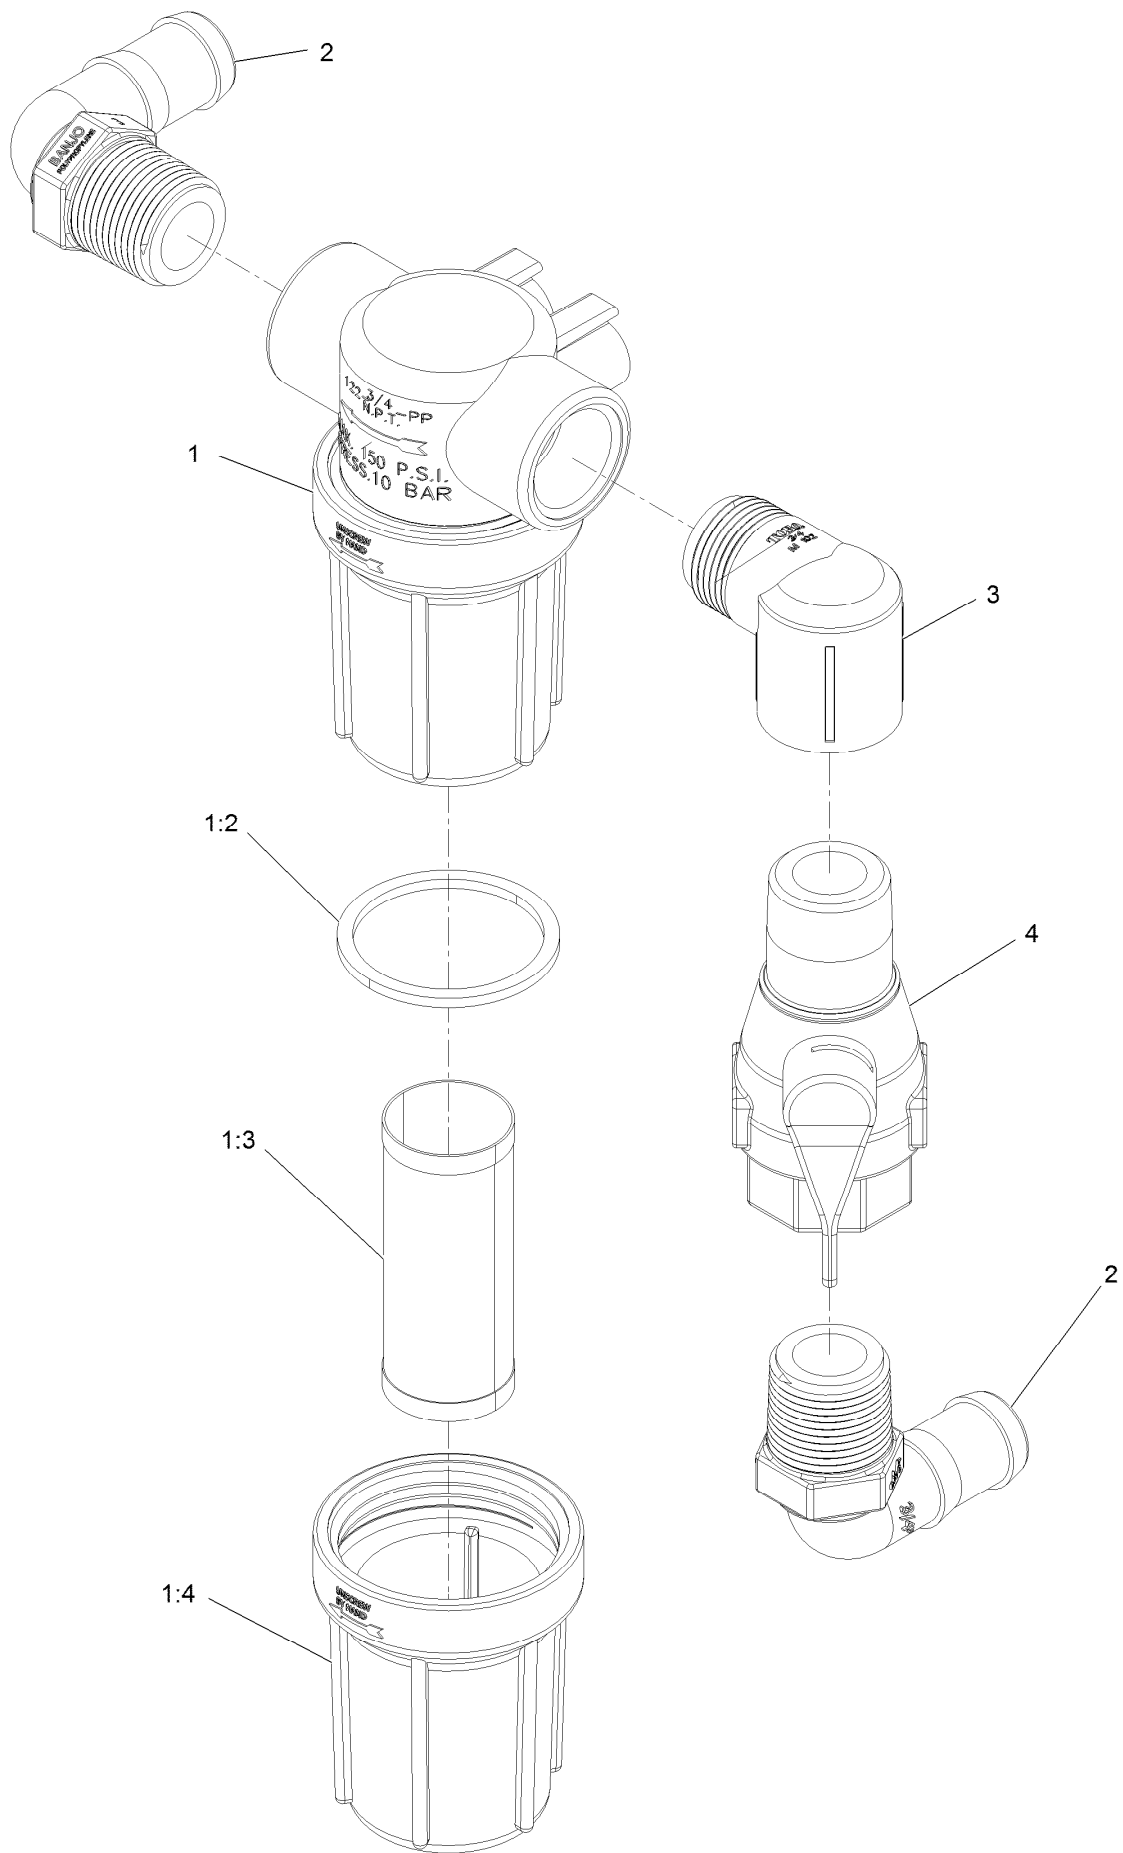

Strainer Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-4374	1	Strainer-Line	1:4	126-7195	1	Bowl-Strainer
1:2	126-2272	1	Gasket-Head, Line Strainer	2	119-0490	2	Elbow-Hosebarb
1:3	126-2273	1	Screen-Strainer, 30 Mesh SS	3	102-4272	1	Elbow
				4	126-4451	1	Valve-Ball

Left Nozzle Assembly No. 126-3667

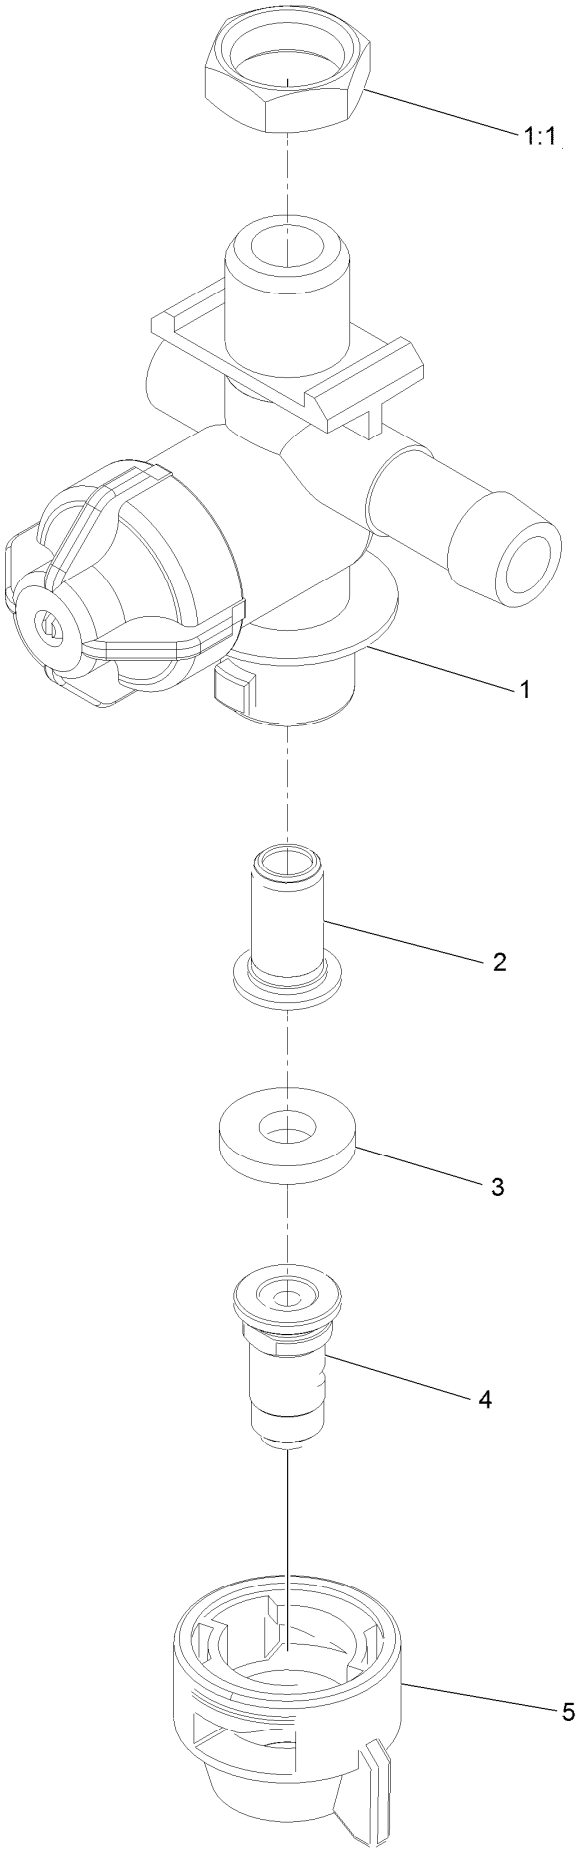


Left Nozzle Assembly No. 126-3667 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9790	1	LH Nozzle Body ASM	5	116-9796	1	Cap-Nozzle
1:1	126-2801	1	Nut-Nylon	99	126-7172	1	Nozzle-Spray, Blue ●■
2	126-1212	1	Strainer-Tip	99	126-7171	1	Nozzle-Spray, Brown ●■
3	116-9797	1	Gasket-Seal	99	126-7170	1	Nozzle-Spray, Gray ●■
4	116-9798	1	Nozzle-Spray, White	99	126-2566	1	Nozzle-Spray, Red ●■

● Not illustrated

■ Sold separately

Center Nozzle Assembly No. 126-3668

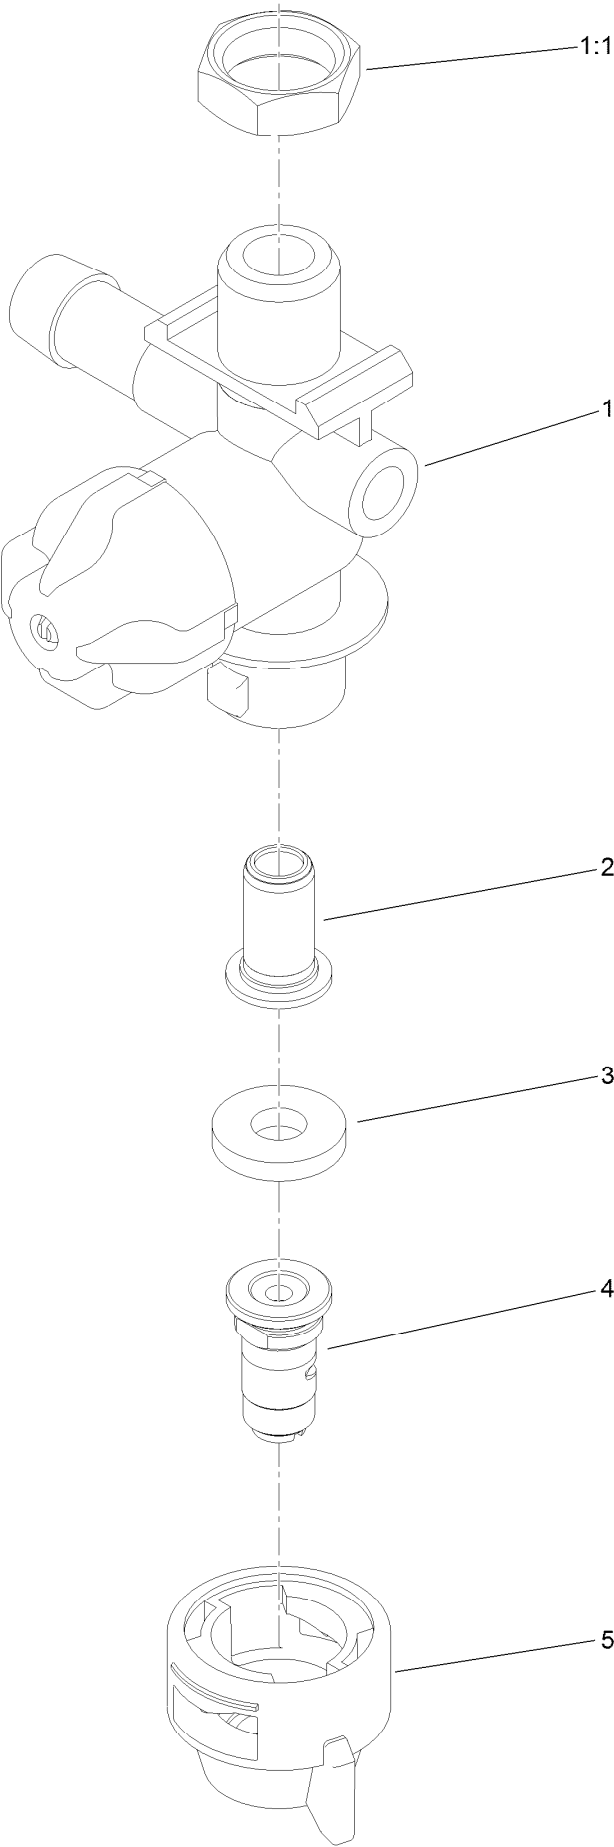

Center Nozzle Assembly No. 126-3668 (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9791	1	RH Nozzle Body ASM
1:1	126-2801	1	Nut-Nylon
2	126-1212	1	Strainer-Tip
3	116-9797	1	Gasket-Seal
4	126-2566	1	Nozzle-Spray, Red

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	116-9796	1	Cap-Nozzle
99	126-7170	1	Nozzle-Spray, Gray ●■
99	116-9798	1	Nozzle-Spray, White ●■
99	126-7171	1	Nozzle-Spray, Brown ●■
99	126-7172	1	Nozzle-Spray, Blue ●■

● Not illustrated

■ Sold separately

Right Nozzle Assembly No. 126-3669

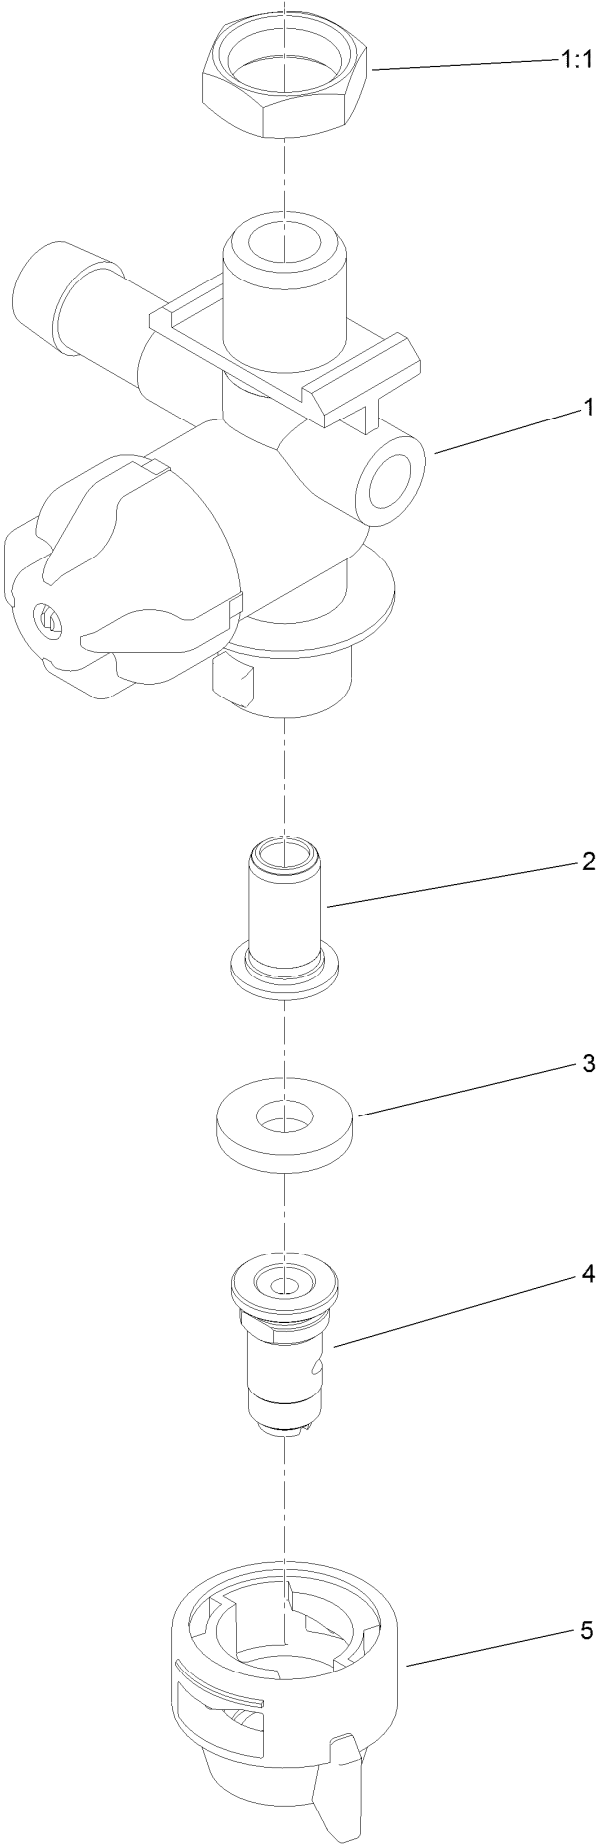


Right Nozzle Assembly No. 126-3669 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-9791	1	RH Nozzle Body ASM
1:1	126-2801	1	Nut-Nylon
2	126-1212	1	Strainer-Tip
3	116-9797	1	Gasket-Seal
4	116-9798	1	Nozzle-Spray, White

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	116-9796	1	Cap-Nozzle
99	126-7172	1	Nozzle-Spray, Blue ●
99	126-7171	1	Nozzle-Spray, Brown ●
99	126-7170	1	Nozzle-Spray, Gray ●
99	126-2566	1	Nozzle-Spray, Red ●

● Not illustrated

Spreader Assembly

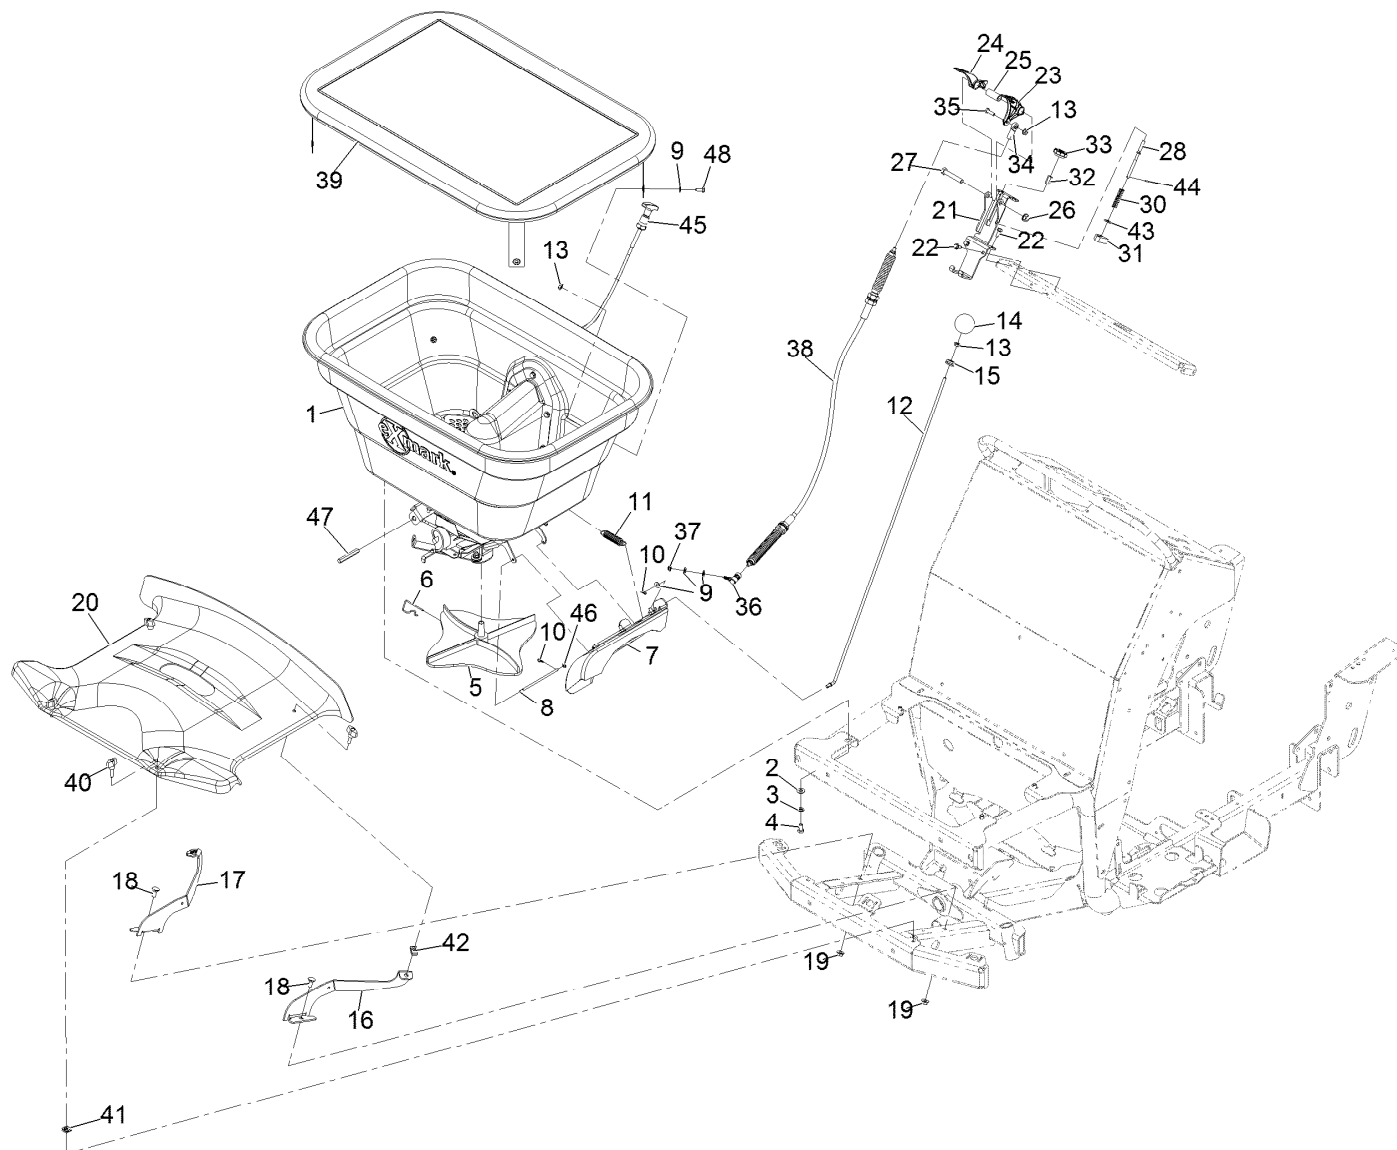


Spreader Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Spreader Hopper ASM ●	24	126-3948	1	Lever-Spread, Narrow
2	107-0279	4	Washer	25	126-3984	1	Spacer
3	107-0280	4	Washer-Lock	26	126-2233	1	Nut-HF
4	126-2506	4	Screw-HH	27	323-11	1	Screw-HH 3/8-16 X 2 1/4
5	126-0858	1	Spinner-Spreader	28	126-3929	1	Link-Adjust, Narrow
6	126-1246	1	Spinner Clip	30	125-0547	1	Spring-Compression, Bail
7		1	Side Deflector ASM ●	31	126-3147	1	Stop-Spread, Narrow
8	126-1629	1	Pin-Deflector	32	126-4891	1	Nut-Coupler
9	360-0140	5	Washer-Flat	33	126-3905	1	Knob
10	126-1631	2	Pin-Cotter, Hair	34	2411-41	1	Rod End-Ball Joint
11	126-2127	1	Spring-Extension	35	126-0498	1	Screw-HH
12	126-2190	1	Rod-Control, Deflector	36	126-2005	1	Ball-Joint
13	126-2231	4	Nut-Nyloc 1/4-20 SS	37	126-2725	1	Nut-Hex, NI
14	121-1877	1	Knob-Rate, Flow	38	126-1783	1	Cable
15	1-633630	1	Grommet	39	126-2815	1	Cover-Hopper
16	126-2145	1	Bracket-Cover, Front (LH)	40	126-5846	4	Knob-T
17	126-2146	1	Bracket-Cover, Front (RH)	41	126-3740	2	Nut-Retainer, U Style
18	126-0695	2	Screw-CARR	42	126-3739	2	Nut-Retainer, U Style
19	126-2232	2	Nut-Nyloc 5/16-18 SS	43	3256-78	1	Washer
20	126-2063	1	Cover-Front, Spreader/Sprayer	44	3272-5	1	Pin-Cotter 3/32 X 1/2
21	126-3133	1	Mount-Handle	45	126-4150	1	Cable-Control, Turn Lock
22	32144-10	3	Screw-HWH 1/4-20 X .62	46	126-0759	1	Washer-Flat
23	126-3947	1	Lever-Spread, Wide	47	126-4655	1	Post-Hex, Diffuser Guide
				48	126-1290	2	Screw-HH 1/4-20 X 5/8 SS

● Not serviced separately


Side Deflector Assembly

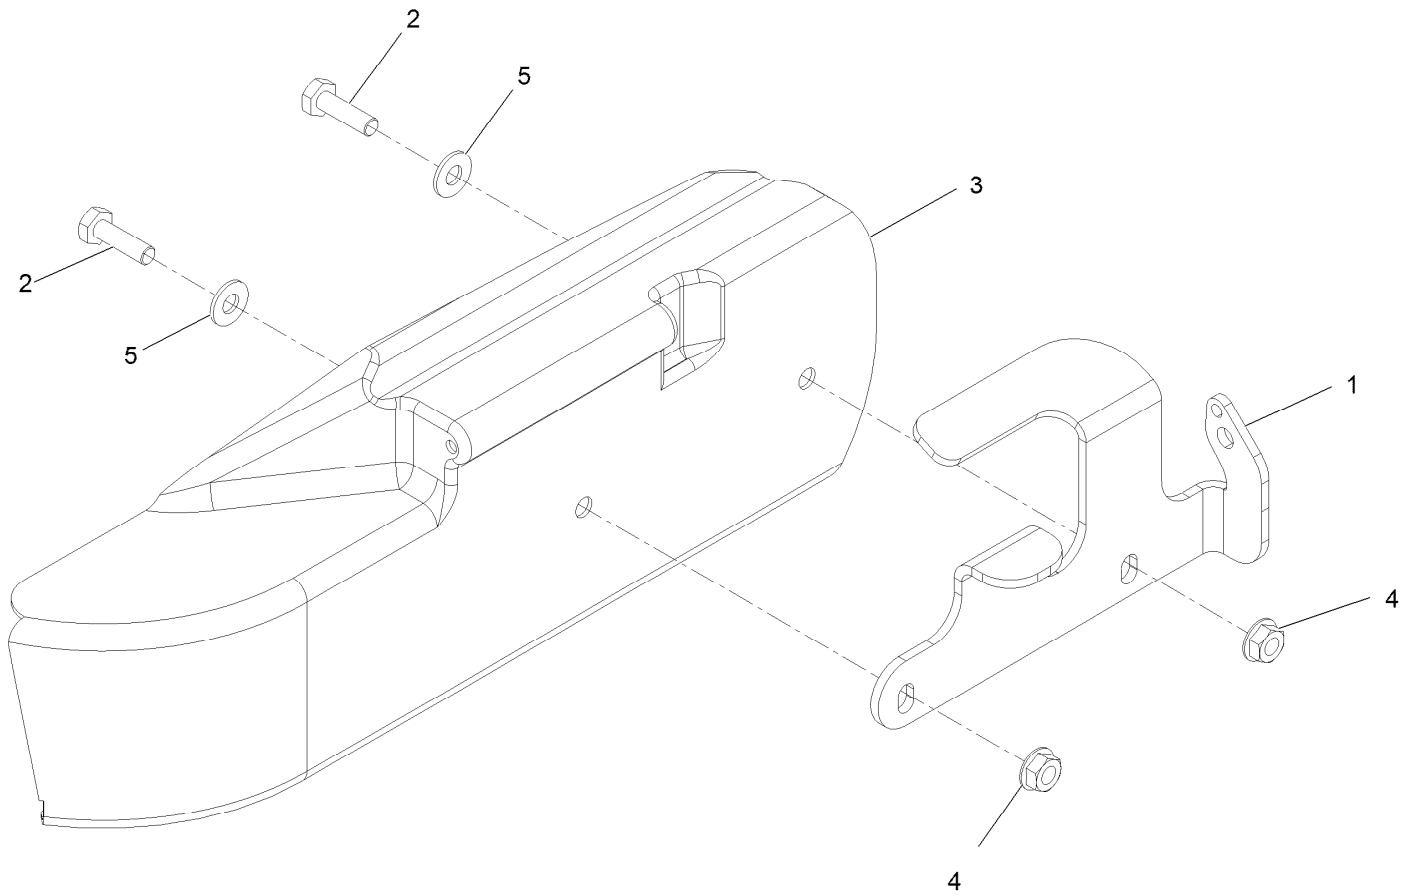

Side Deflector Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-0374	1	Bracket-Deflector, Side	4	126-2231	2	Nut-HF
2	126-0498	2	Screw-HH	5	360-0140	2	Washer-Flat
3	126-1217	1	Deflector-Side				

Hopper Assembly

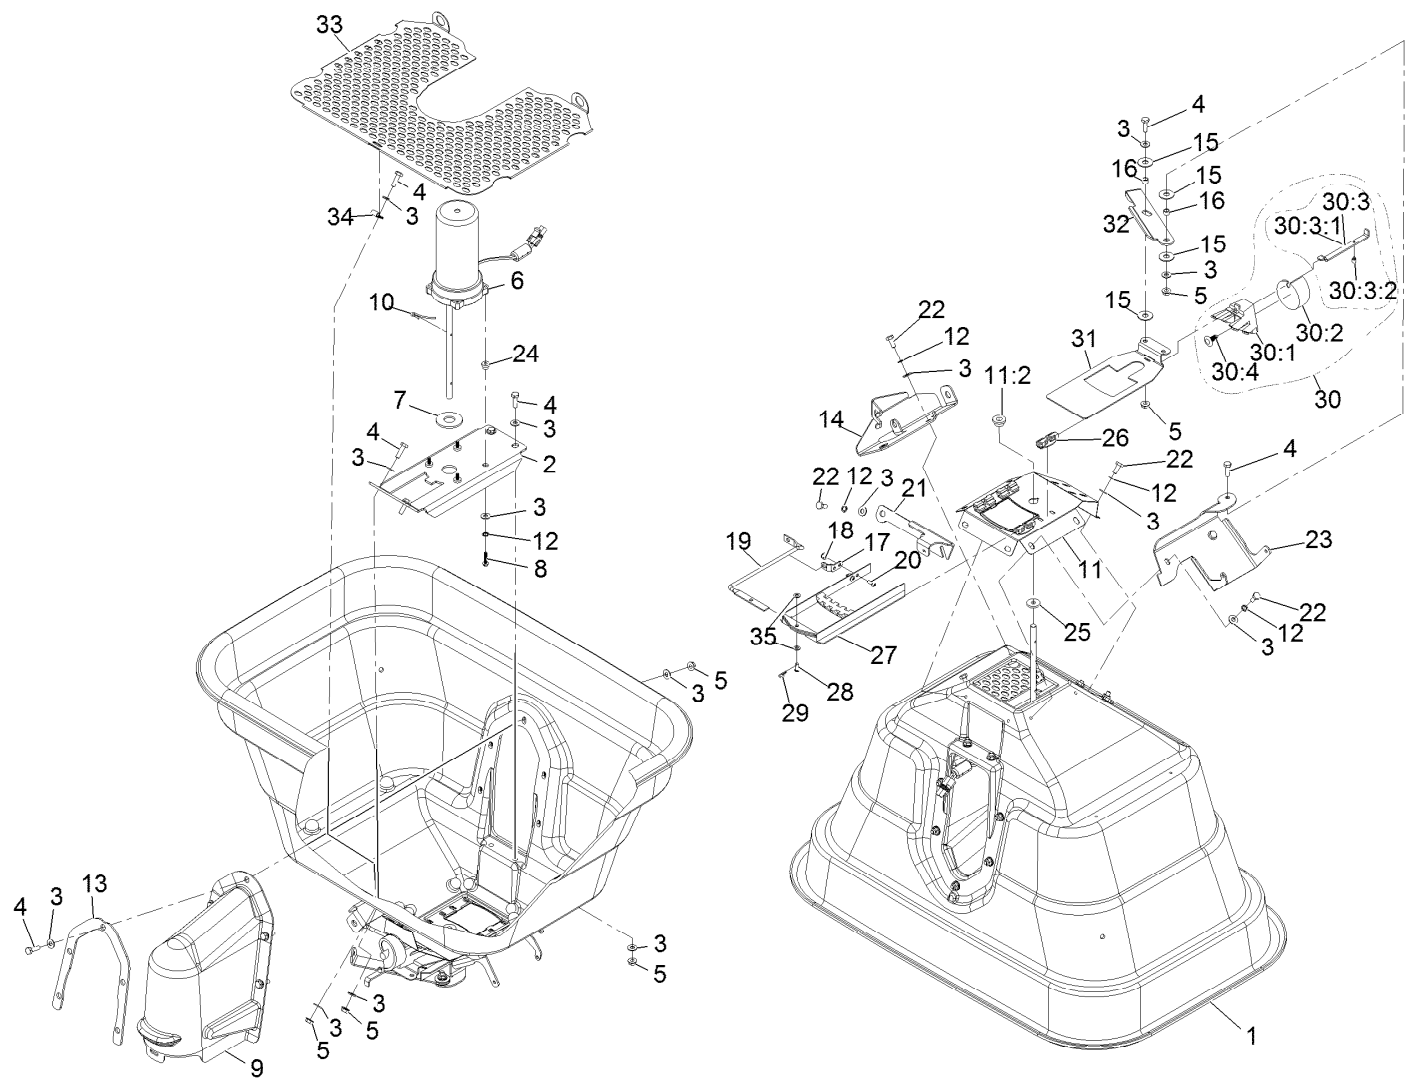


Hopper Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-1349	1	Hopper-175 Lb	22	126-1290	8	Screw-HH 1/4-20 X 5/8 SS
2	126-4245	1	Bracket-Mount, Motor	23	126-1916	1	Bracket-Lever, Hopper Gate
3	360-0140	34	Washer-Flat	24	126-6190	4	Spacer-Flanged
4	126-0498	12	Screw-HH 1/4-20 X 7/8 SS	25	126-1252	1	Washer-Felt
5	126-2231	12	Nut-Nyloc 1/4-20 SS	26	126-0990	4	Guide-Rate, Gate
6	126-6231	1	Spreader Motor ASM	27	126-0991	1	Diffuser
7	83-2400	1	Spacer	28	126-3729	1	Pin-Clevis
8	739001	4	Screw-SHWH 10-32 X 7/8	29	126-1631	1	Pin-Cotter, Hair
9	126-1348	1	Cover-Motor	30	126-0998	1	Rate Dial ASM
10	126-1247	1	Agitator	30:1	126-0985	1	Mount-Dial
11	126-6284	1	Mulch Plate W/ Bearing ASM	30:2	126-0988	1	Dial
11:2	126-0984	1	Bearing-Bottom, Hopper	30:3		1	Rate Gate Link ASM ■
12	363-8641	12	Washer-Lock, Int	30:3:1	126-0987	1	Link-Gate, Rate
13	126-6334	1	Flange-Cover, Motor	30:3:2	126-4196	1	Screw-Shoulder, Slotted
14	126-4650	1	Bracket-Hopper, Gate Controls	30:4	126-0986	1	Clip
15	93-1633	4	Washer	31	126-1903	1	Gate-Rate
16	126-3684	2	Spacer	32	126-4112	1	Lever-Gate
17	126-1237	1	Bracket-Diffuser	33	126-3143	1	Screen-Hopper-Large Hole ●
18	364-0371	2	Nut-HJ, NI	33	126-3240	1	Screen-Hopper-Medium Hole
19	126-1646	1	Rod-Control, Diffuser	33	126-3242	1	Screen-Hopper-Small Hole ●
20	126-9586	2	Screw, Mch, #10-32X1/2 Phph Sst	34	126-1624	1	Clamp-Loop
21	126-2082	1	Bracket-Spring, Hopper Deflector	35	126-0759	2	Washer-Flat

● Sold separately

■ Not serviced separately

Spreader Motor Assembly

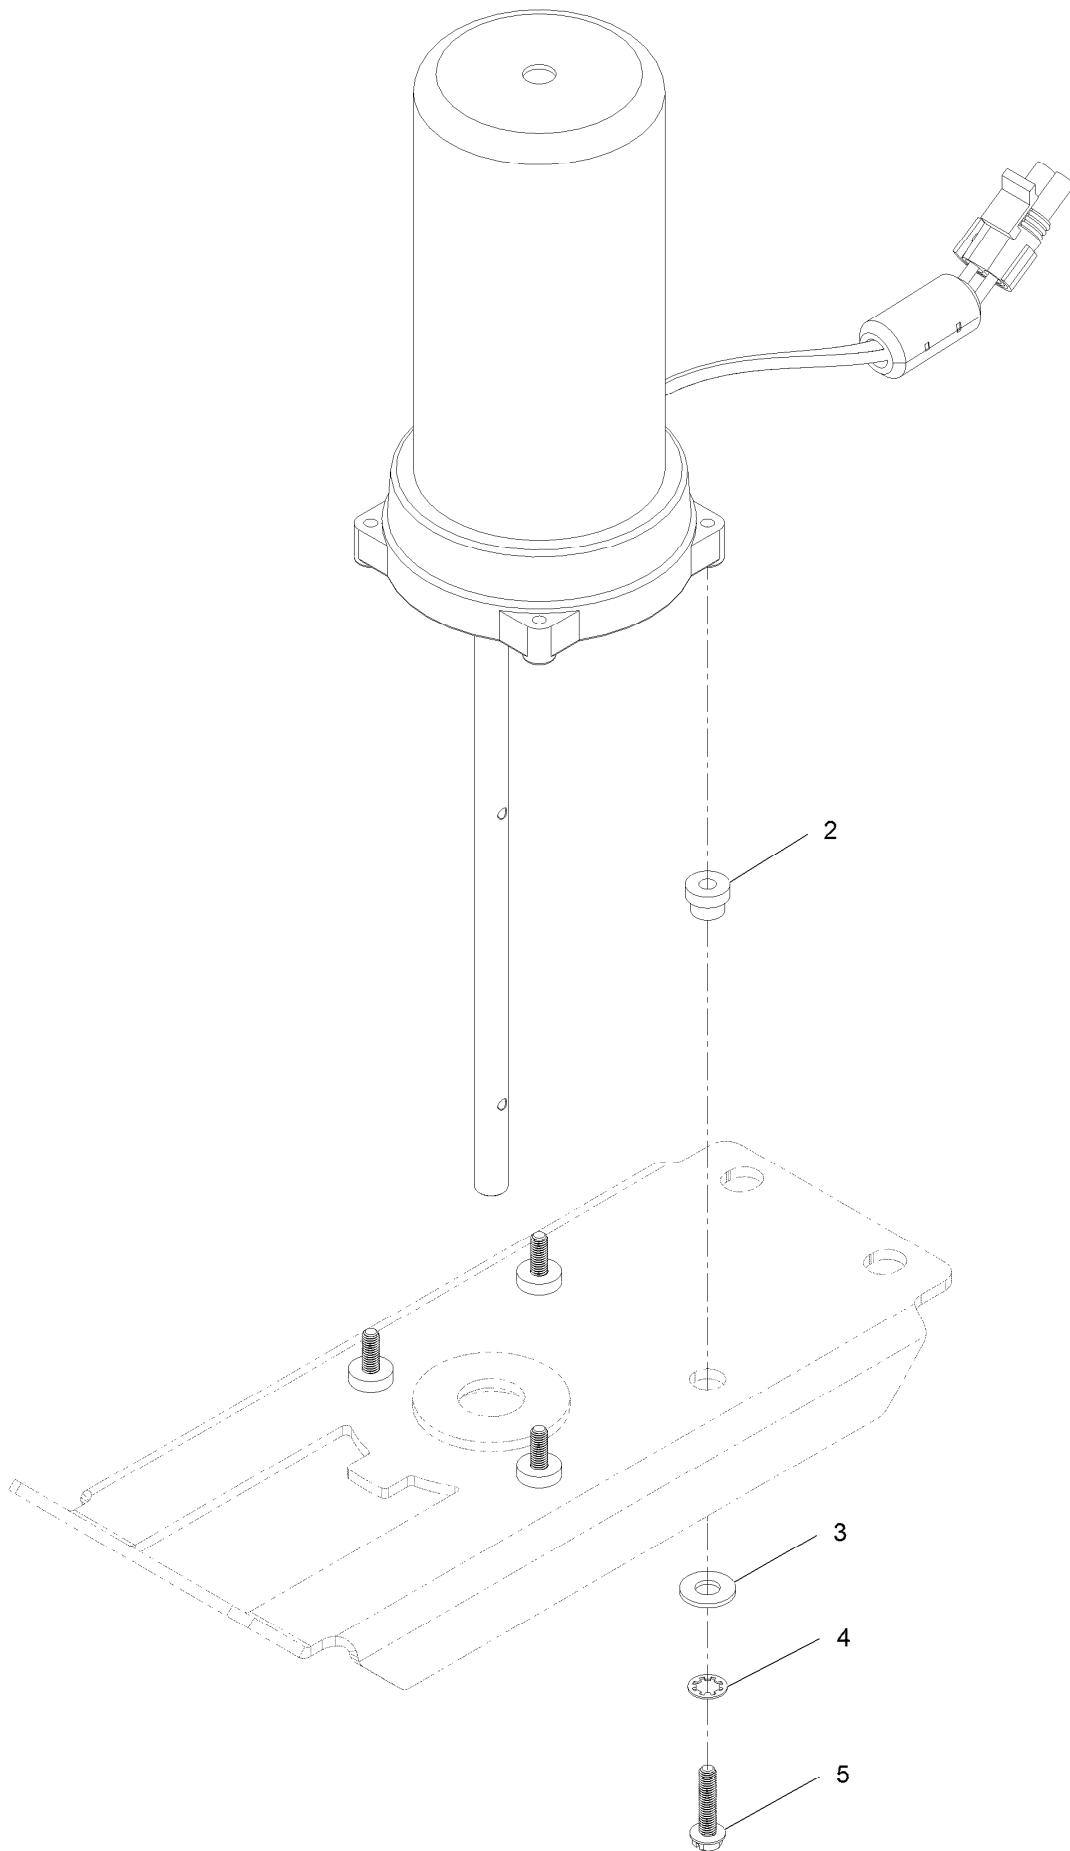


Spreader Motor Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	126-6190	4	Spacer-Flanged
3	360-0140	4	Washer-Flat

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	363-8641	4	Washer-Lock, Int
5	739001	4	Screw-SHWH


Ground Drive Assembly

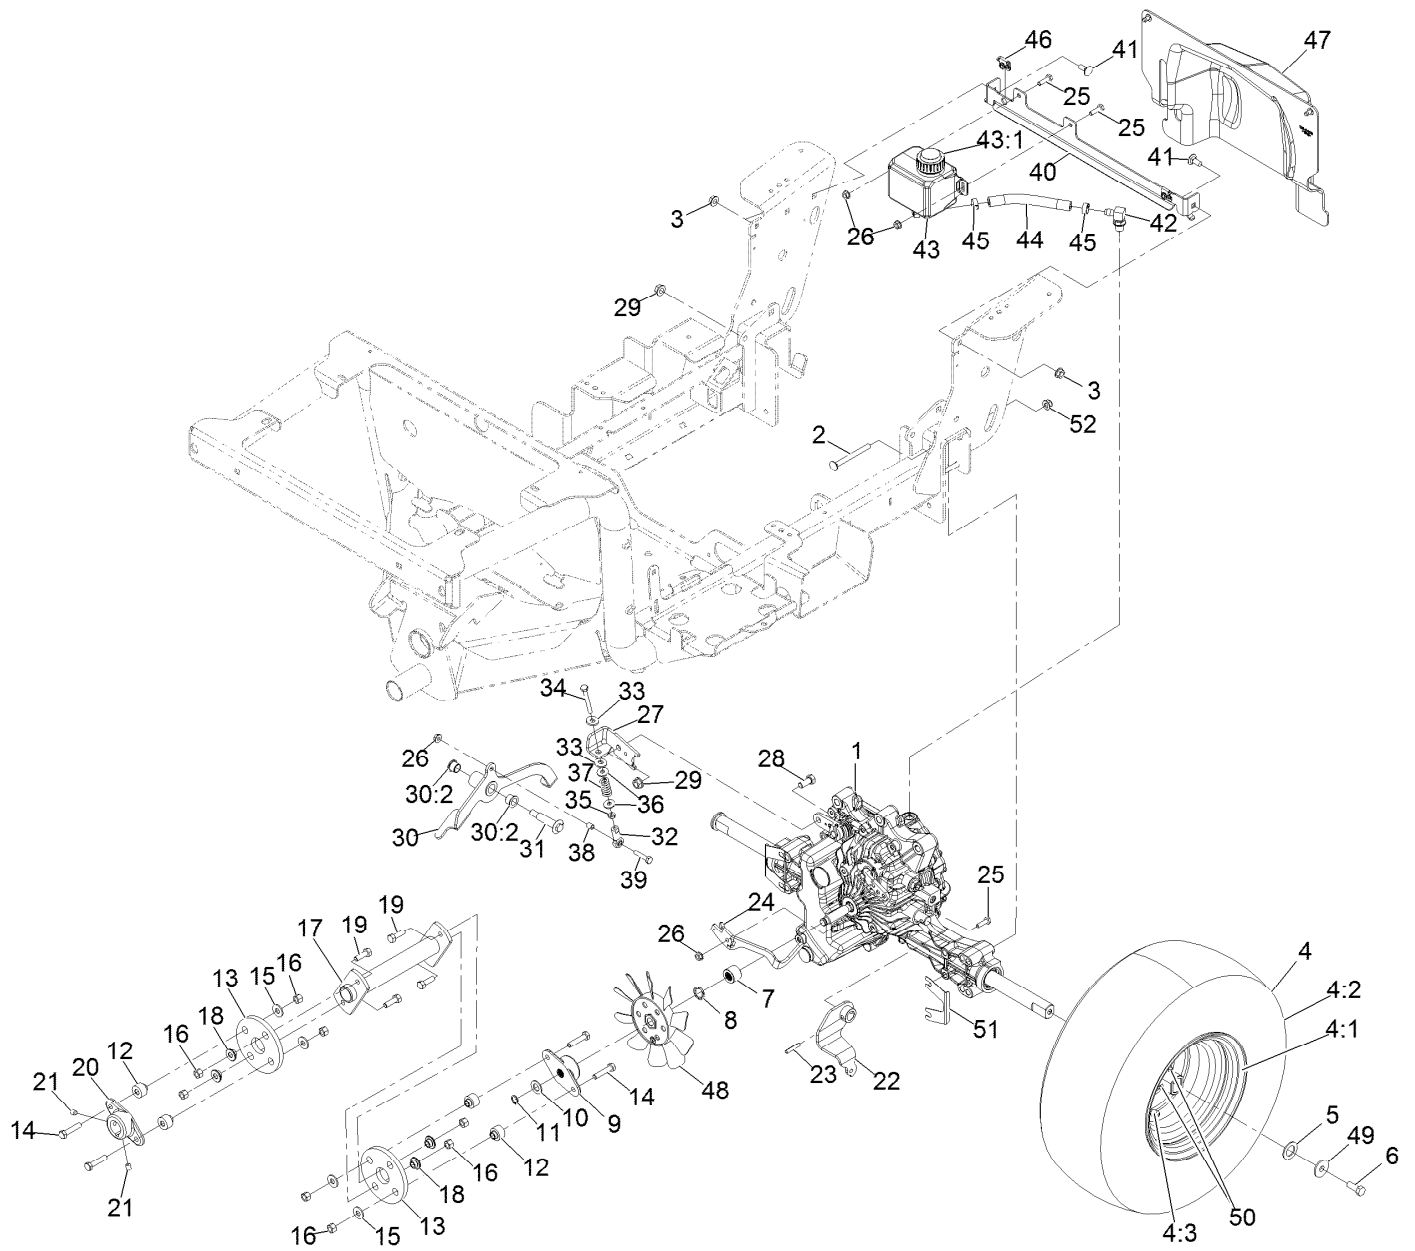

Ground Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-2814	1	Transaxle	27	126-3937-03	1	Arm-Brake
2	3230-13	4	Screw-CARR	28	126-0520	1	Screw-HH
3	126-2232	2	Nut-Nyloc 5/16-18 SS	29	126-2233	2	Nut-Hex Flg 3/8-16 Nyloc SS
4	126-7265	2	Wheel And Tire ASM	30	126-0433	1	Brake Lever ASM
4:1	126-7266	1	Wheel	30:2	116-4279	2	Bearing-Flange
4:2	126-1618	1	Tire	31	92-1057	1	Bolt-Shoulder
4:3	232-27	1	Stem-Valve	32	2411-41	1	Rod End-Ball Joint
5	126-7888	2	Washer-Nylon	33	1-303334	2	Washer-Spring Disc 5/16
6	3235-22	2	Screw-HH, Lock	34	126-4009	1	Screw-HH
7	126-2983	1	Spacer-Shaft, Input	35	3220-1	1	Nut-Jam 1/4-28
8	3290-317	1	Washer-Spring	36	3256-78	2	Washer
9	116-9787	1	Hub-Shaft, Transaxle	37	1-323245	1	Spring-Compression
10	605256	1	Washer-Plain	38	612503	1	Spacer
11	32151-61	1	Ring-Retaining	39	321-8	1	Screw-HH 1/4-20 X 1 1/4
12	27-6590	4	Spacer-Coupling, Rubber	40	126-4423-03	1	Bracket-Mount, Tank
13	115-4523	2	Coupling-Rubber	41	126-0695	2	Screw-CARR
14	3210-8	4	Screw-HH 5/16-24 X 1 1/2	42	126-2927	1	Fitting-90 DEG
15	3256-3	4	Washer-5/16 Std	43	126-2578	1	Tank ASM
16	32152-5	8	Nut-Hex 5/16-24	43:1	126-2579	1	Cap-Tank
17	126-3838-03	1	Shaft-Drive	44	126-2842	1	Hose-Expansion
18	125-9249	4	Spacer-Coupler, Rubber	45	126-3749	2	Clamp
19	3210-5	4	Screw-HH	46	119-1730	2	Receptacle-Clip, Mini
20	116-9788	1	Hub-Shaft, Engine	47	126-1462	1	Transaxle Cover ASM
21	3246-18	2	Setscrew-5/16-18 X 3/8	48	126-2980	1	Fan-7 Inch
22	126-6243-03	1	Arm-Motion	49	126-7889	2	Spacer-Wheel
23	126-4295	1	Pin-Spiral	50	126-3824	4	Screw-Set, SQH
24	126-2811-03	1	Arm-Release	51	126-8711	2	Spacer-Transaxle
25	126-0498	3	Screw-HH 1/4-20 X 7/8 SS	52	104-8300	4	Nut-Nyloc 5/16-18 Flg
26	126-2231	4	Nut-Nyloc 1/4-20 SS				

Transaxle Cover Assembly No. 126-1462

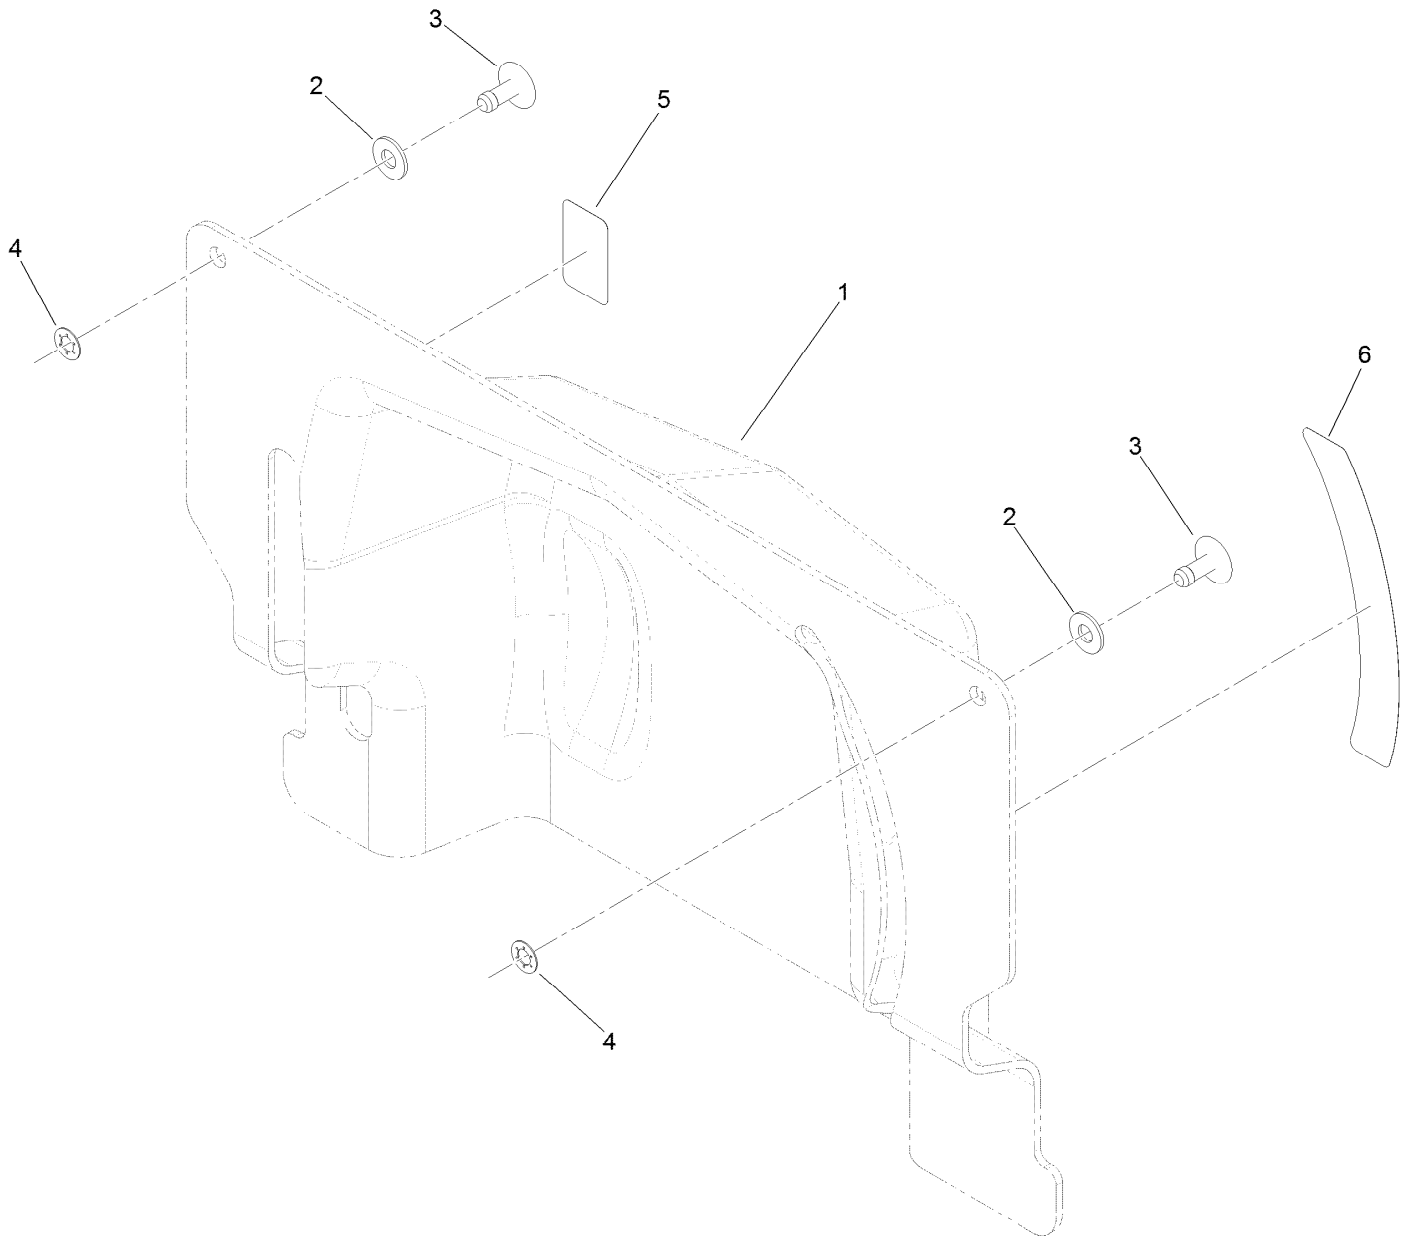


Transaxle Cover Assembly No. 126-1462 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Cover-Transaxle ●
2	360-0140	2	Washer-Flat
3	119-1728	2	Stud-1/4 Turn

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	119-1729	2	Retainer-Stud
5	126-2620	1	Decal-Brake, Park
6	126-2621	1	Decal-Release, Drive

● Not serviced separately

Engine Assembly


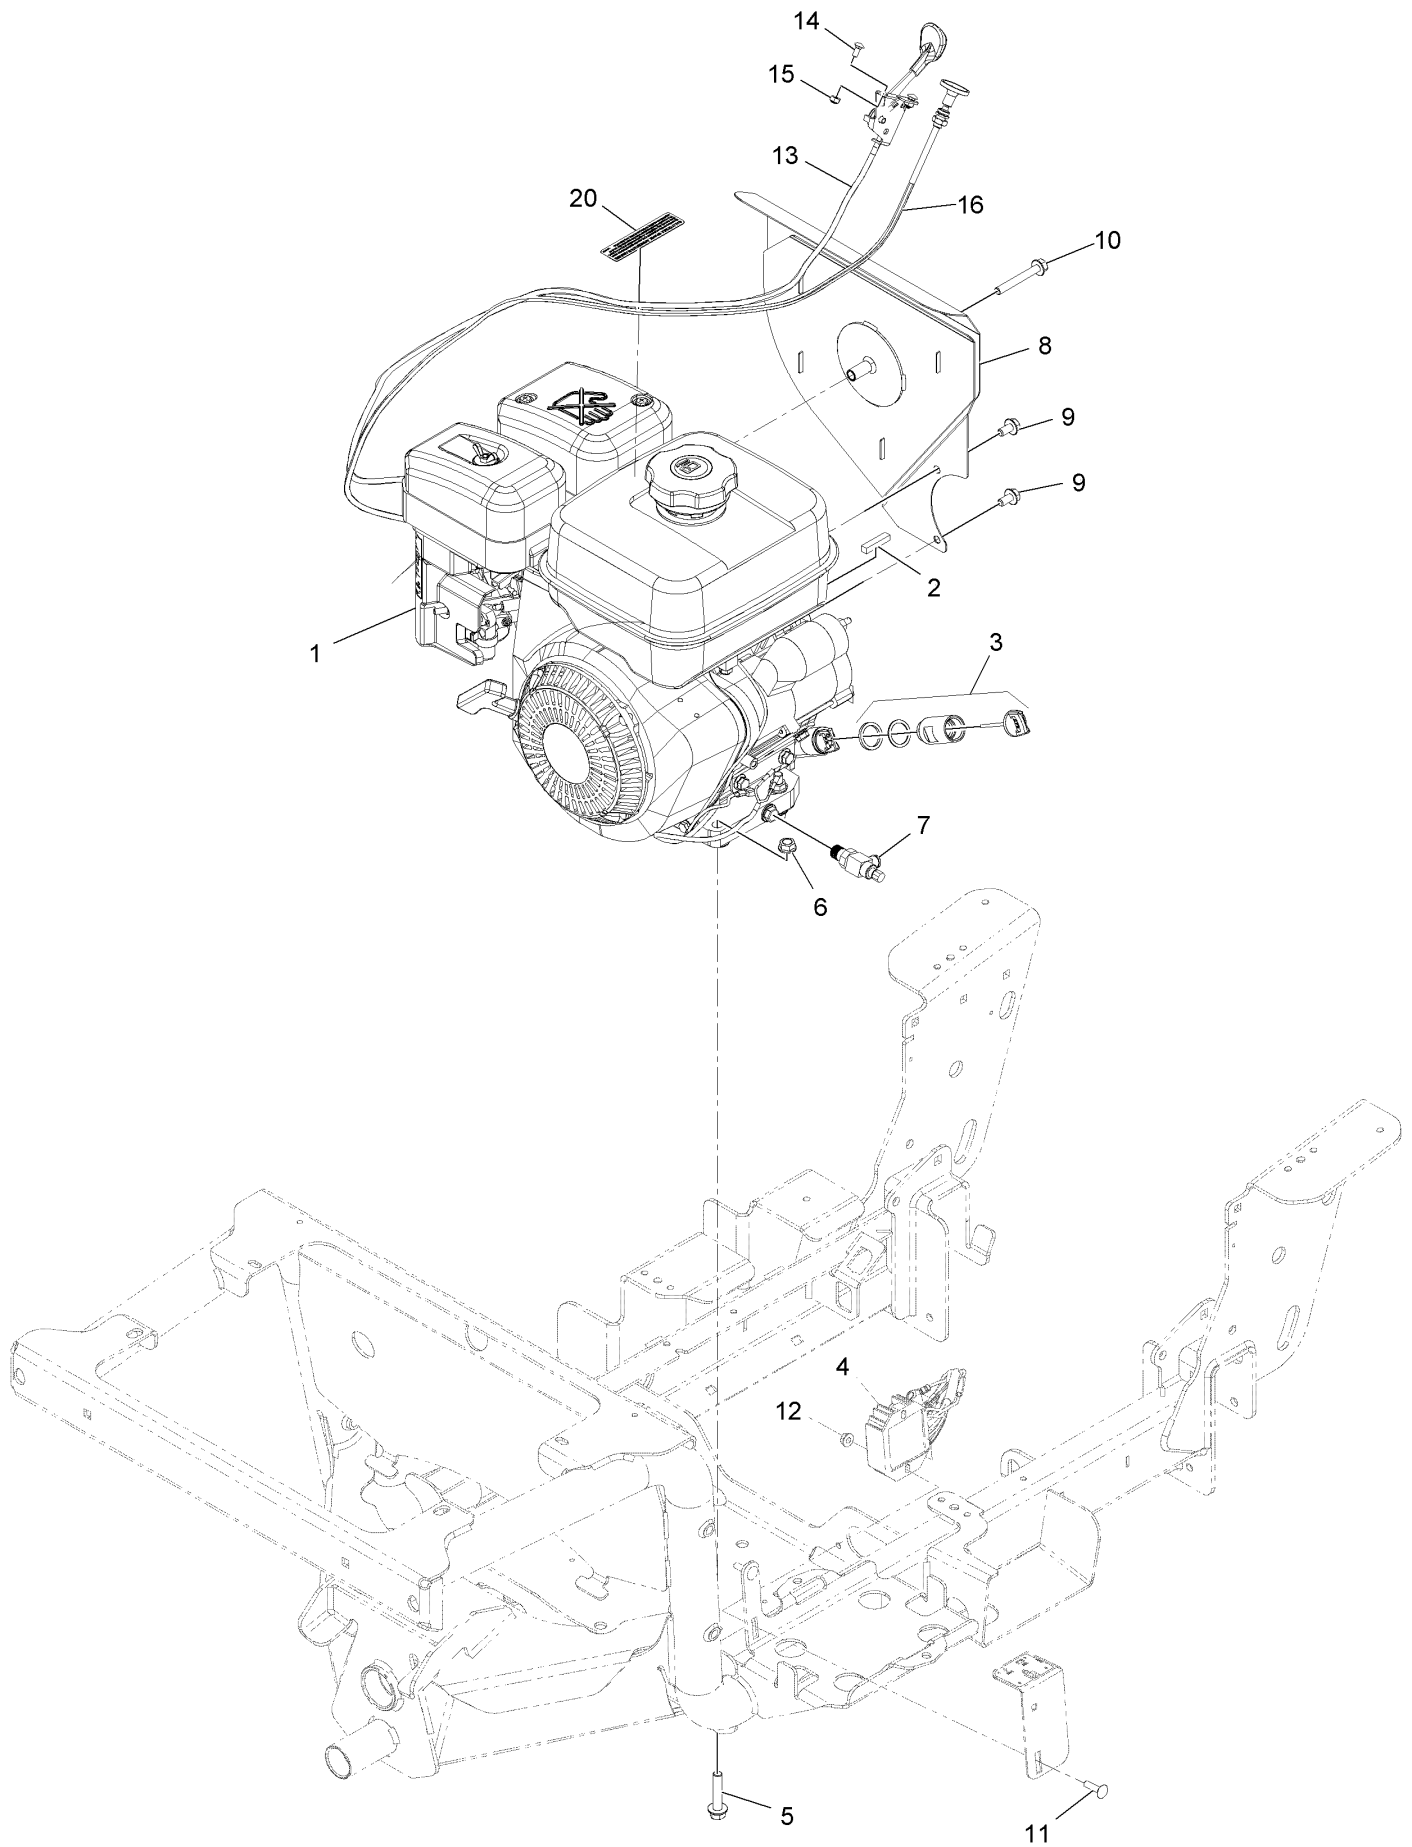


Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Engine-Subaru, Ex27 ●	10	33104-060	1	Screw-HHF
2	126-2532	1	Key-Crankshaft	11	126-1455	2	Screw-CARR
3	126-1432	1	Extender-Dipstick	12	126-2231	2	Nut-HF
4	126-4658	1	Regulator	13	126-2240	1	Control-Throttle
5	126-2710	4	Screw-HHF	14	1-807513	2	Bolt-Carriage #10-24 X 1/2
6	126-2233	4	Nut-HF	15	3296-2	2	Nut-Nyloc #10-24
7	103-6602	1	Valve-Oil Drain	16	126-2285	1	Cable-Choke, Push/Pull
8	126-2426	1	Heat Shield ASM	20	117-2718	1	Decal-Arrester, Spark
9	117-1836	2	Screw-HHF, Lock				

● Not serviced separately

Electrical Assembly

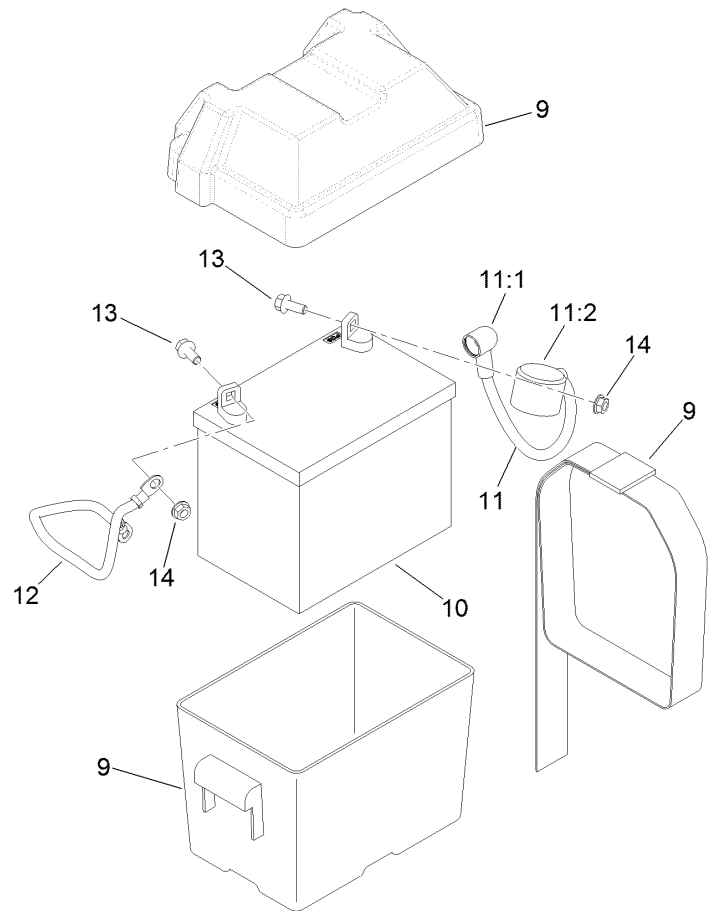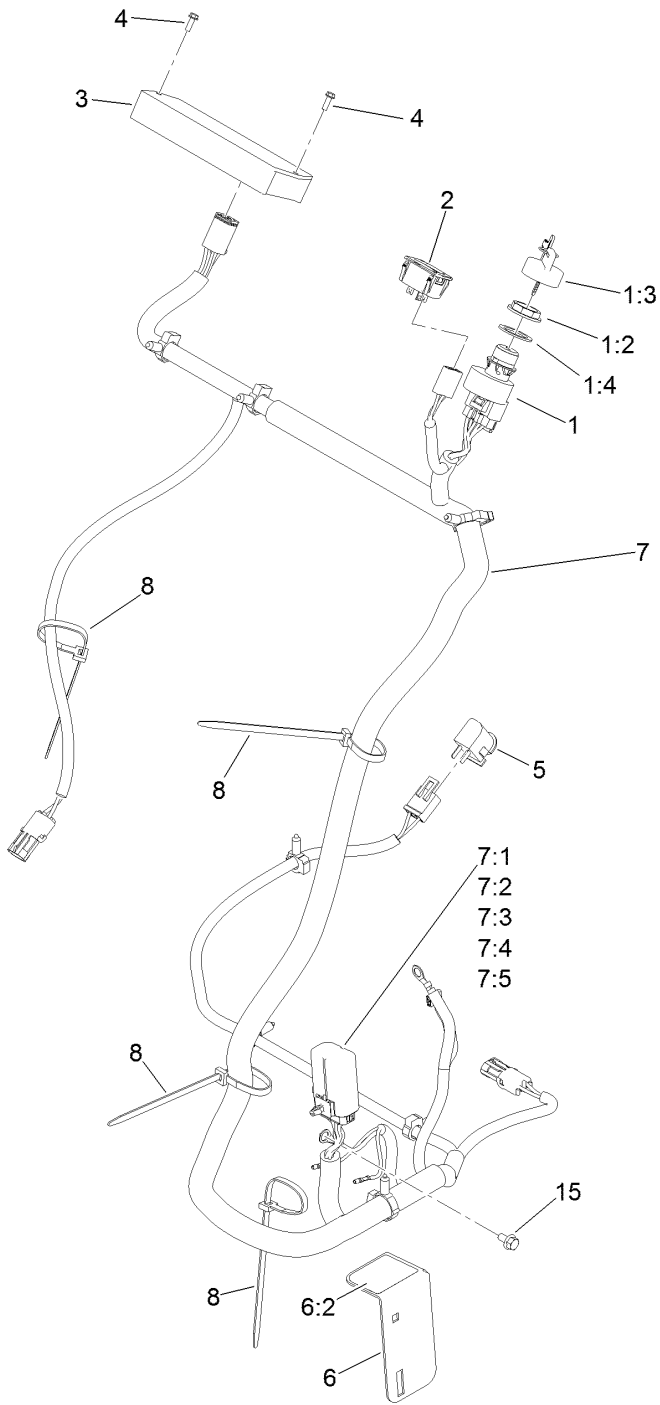

Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-3956	1	Ignition Switch ASM	7:4	126-4102	1	Clip-Power Distribution Module
1:2	108-8660	1	Nut-Mounting	7:5	126-6343	1	Block-Foam
1:3	106-5270	1	Ignition Key Set	8	1-303335	4	Tie-Cable 7 15/16 (Large)
1:4	108-8659	1	Washer-Backup	9	126-1424	1	Battery Box
2	126-3931	1	Hour Meter	10		1	Battery (300 CCA, Wet) ●
3	126-6622	1	Controller-Dc	11	116-4730	1	Cable-Battery, Positive
4	32144-87	2	Screw-HWHTF	11:1	1-543393	1	Insulator-Solenoid
5	82-2190	1	Switch	11:2	109-2407	1	Insulator-Battery
6	126-4656	1	Fuse Bracket ASM	12	114-9715	1	Cable-Battery, Negative
6:2	126-4122	1	Decal-Fuse	13	126-2712	2	Screw-HHF 5/16-18 X 3/4 SS
7	126-3458	1	Harness-Wire ■	14	126-2232	2	Nut-Nyloc 5/16-18 SS
7:1	121-8868	2	Fuse-Mini Blade, 20 Amp	15	33103-012	1	Screw-HHF
7:2	126-3991	1	Relay-Micro				
7:3	126-4101	1	Cap-Power Distribution Module				

● Not serviced separately

■ Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.

Notes:



MAXIMIZE THE PERFORMANCE OF YOUR EXMARK MACHINE.



EXMARK® PREMIUM ENGINE OIL

Exmark now offers a family of engine oil viscosities to perform well in any environment. Each viscosity has the same synthetic formulation to give you what you need in punishing conditions. We designed each grade to the highest quality, making it ideal even for diesel applications. Coupled with Exmark Premium Fuel Treatment, we have the performance products to make your machine hum.

EXMARK PREMIUM ENGINE OIL SAE 30/10W-30

- Meets zero shear requirements of a straight grade SAE 30 as well as the cold temp properties of a 10W-30.
- Most versatile oil in the industry.
- Superior corrosion protection over conventional oil - even in corrosive, humid environments.

EXMARK PREMIUM ENGINE OIL SAE 20W-50

- Perfect for your big block engine, or any application in severe service.
- Same full synthetic formulation as all other Exmark Premium viscosities.
- Also effective for use in severe service small block engines.

EXMARK PREMIUM ENGINE OIL SAE 10W-50

- Full synthetic formulation gives you peak performance. Don't settle for less.
- Wide span multi-grade combines easy starting in cold weather with maximum protection in high temperature operation.
- Reduce friction & wear over standard mineral formulations.

EXMARK PREMIUM ENGINE OIL SAE 0W-40

- The perfect choice for when the weather turns cold or unpredictable, and your Exmark UTV has to perform.
- Commercial quality for severe service.
- Advanced additive package helps prevent corrosion from long-term storage.

EXMARK PREMIUM ENGINE OIL UTV FORMULATION

- 4-cycle high-temp formulation.
- Heavier viscosity, full synthetic, perfect for your UTV.

EXMARK PREMIUM UTV EXTREME CONDITIONS GEAR OIL

- SAE 80W-90, designed to keep your UTV performing at its peak.
- Shear stable, hypoid gear lube.
- Includes a premium additive system to combat wear, oxidation, rust & corrosion.

Available from your local Exmark dealer. Find your closest dealer at exmark.com

EXMARK ACCESSORIES AND OPTIONS*

MID-MOUNT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	OPERATOR CONTROLLED DISCHARGE
FULL SUSPENSION SEAT	SUN SHADE
DECK LIFT ASSIST KIT	TRASH CONTAINER
HITCH KIT	TURF STRIPER
LIGHT KIT	ULTRA VAC COLLECTION SYSTEM
12V POWER PORT	ULTRA VAC QUICK DISPOSAL SYSTEM
MICRO-MULCH SYSTEM	

OUT-FRONT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	SNOW BLADE
DUAL-TAIL WHEEL	SNOWBLOWER
FLOOR PAN EXTENDER	SUN SHADE
HITCH KIT	TRASH CONTAINER
LIGHT KIT	ULTRA VAC COLLECTION SYSTEM
MICRO-MULCH SYSTEM	ULTRA VAC QUICK DISPOSAL SYSTEM
ROLL OVER PROTECTION SYSTEM (ROPS)	WEATHER CAB

WALK-BEHIND ACCESSORIES AND OPTIONS

GRASS CATCHER	TURF STRIPER
MICRO-MULCH SYSTEM	STANDON

*Some accessories and options not available for some models.

Place Model No. and Serial No.
Label Here (Included in the Literature
Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____

© 2016 Exmark Mfg. Co., Inc.
Industrial Park Box 808
Beatrice, NE 68310
All Rights Reserved

Part No. 4503-336 Rev. A
(402) 223-6375
Fax (402) 223-5489
Printed in the USA.



* 4 5 0 3 - 3 3 6 * A

www.exmark.com