




ULTRA VAC® QDS

Model No. LZUVQD11—Serial No. 920000 and Up

Picture below may not reflect actual product.

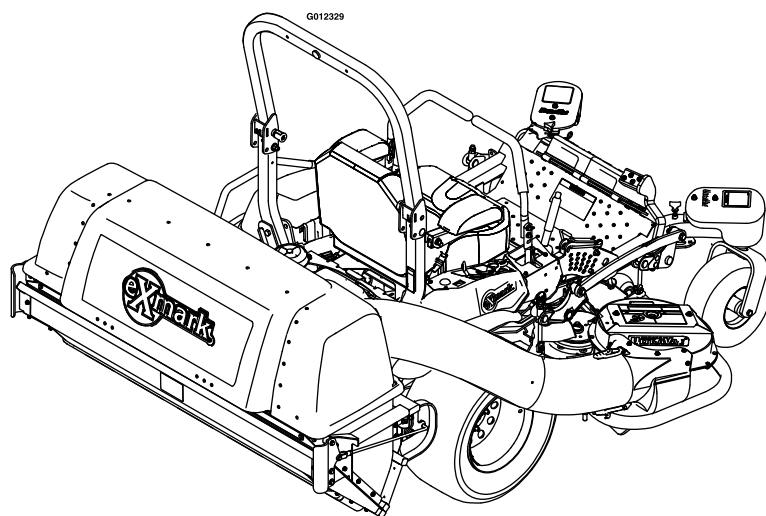

Parts Manual

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Touch Up Paint

Exmark black touch up spray paint – gloss black.

Exmark red touch up paint (spray paint – P/N 1-850337 - .6 oz liquid bottle – P/N 103-9140).

EXMARK PARTS PLUS

PARTS

OVERNIGHT

OR *FREE**

If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE Guaranteed!! (Some restrictions apply. See your participating Exmark Dealer for details.)

Contents

LZUVQD11 Assembly 5

Hopper Assembly No. 109-6142 6

Hood Assembly No. 109-7301 8

Lower Tube Assembly No. 109-1973 9

Blower Assembly No. 109-9836 10

Idler Assembly 12

Caster Weight Assembly No. 109-8461 13

Completing Kit No. 109-9626 14


Completing Kit No. 109-9627 15

Completing Kit No. 109-9628 16

Completing Kit No. 109-9629 17

Completing Kit No. 116-2086 18

Completing Kit No. 116-2087 19

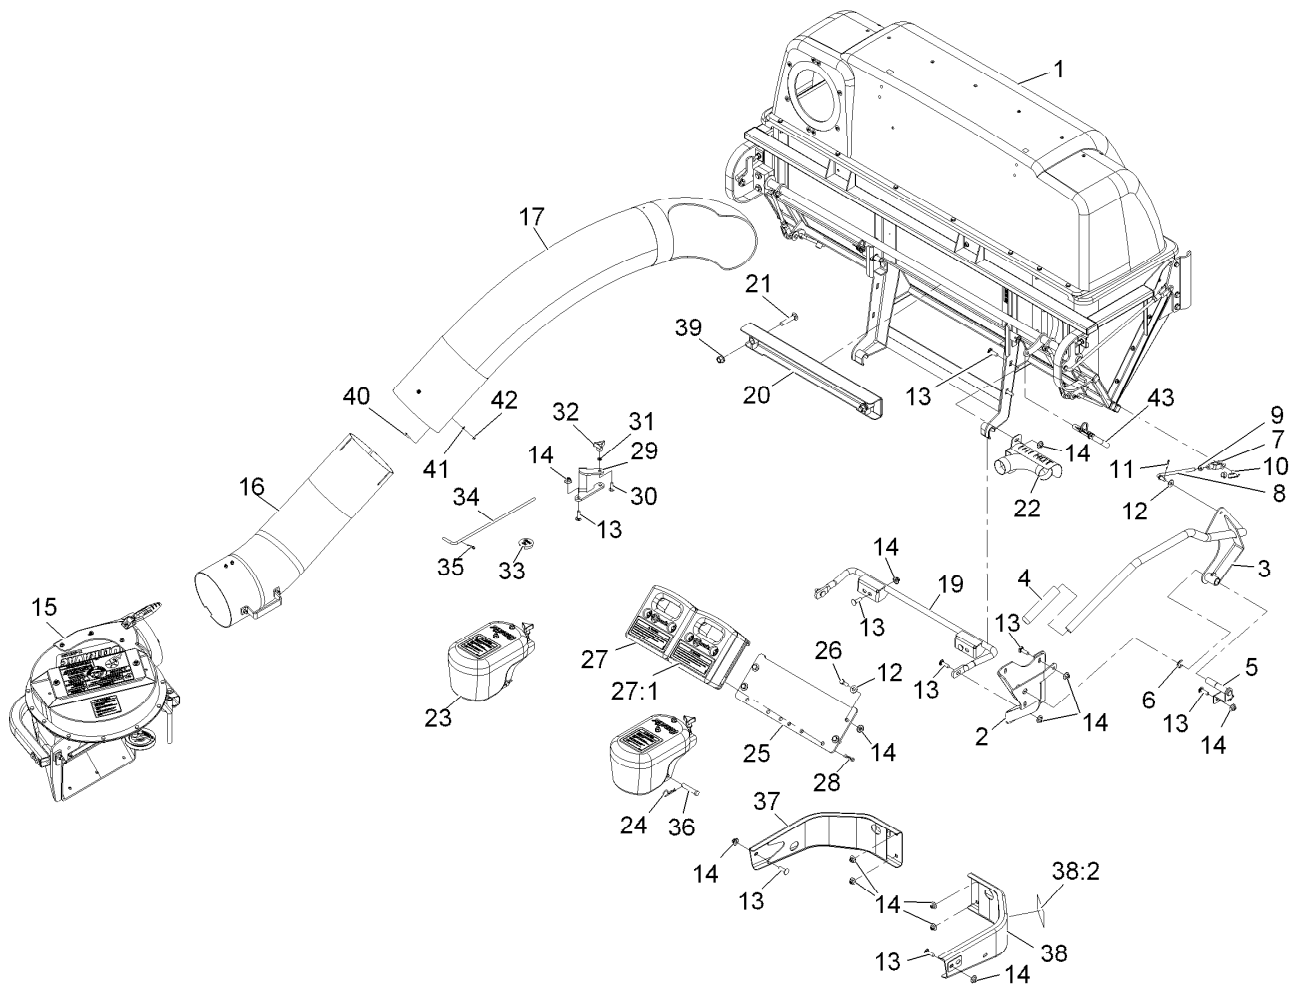


LZUVQD11 Assembly

Ref.	Part Number	Qty.	Description
1		1	ASM,Hopper Lg Qds ●
2	109-8712-03	1	Mount-Pivot
3	109-9369-03	1	Wld,Dump Handle
4	103-7115	1	Handle-Grip
5	109-6869	1	Handle Pin
6	32151-48	1	E-Ring
7	1-633131	1	Yoke-Linkage, Brake
8	103-2413	1	Link-Handle
9	3219-3	1	Nut-Hex 3/8-24
10	103-2399	1	Pin-Clevis Spring 3/8
11	3272-10	1	Pin-Cotter 1/8 X 3/4
12	3256-4	5	Washer-3/8 Std
13	3231-28	12	Bolt-Carriage 3/8-16 X 1 1/4
14	109-6658	20	Nut-Nyloc 3/8-16 Flg
15	109-9836	1	ASM, Blower Large - Svc Only
16	109-1973	1	Lower Tube ASM
17	109-1968	1	Tube-Upper
19	109-9248	1	Mount-Bagger, Lower
20	116-0473-03	1	Mount-Bagger, Upper
21	3233-34	2	Bolt-Carriage 1/2-13 X 2 1/2
22	116-2804	1	ASM-Exhaust Diverter
23	109-8461	2	ASM,Caster Weight


Ref.	Part Number	Qty.	Description
24	1-806005	2	Hairpin-Cotter
25	103-6368-01	1	Plate,Weight ASM Mount
26	323-7	4	Screw-HH 3/8-16 X 1 1/4
27	103-6363	2	ASM,Cast Weight
27:1	103-6605	1	Decal,Weight
28	9335124	4	Hairpin-Cotter
29	109-9463-03	1	Bracket,Belt Cover
30	3230-2	1	Bolt-Carriage 5/16-18 X 1
31	109-5667	1	Ring-Bolt Retaining
32	1-323385	1	Knob-3 Prong
33	103-1279	1	Plug, Black Nylon 1.75
34	109-3458	1	Pin,Chute Pivot
35	1-806003	1	Hairpin-Cotter
36	92-2743	2	Pin-Clevis
37	116-0057-03	1	Bumper-RH
38	116-0180	1	LH Bumper ASM
38:2	103-2076	1	Decal-Caution
39	99-5107	2	Nut-Lock 1/2-13
40	32105-13	3	Screw-HWH #10-24 X 3/4
41	3256-14	3	Washer-#10 Std
42	3296-2	3	Nut-Nyloc #10-24
43	116-0458	2	Bagger Mount Pin ASM

● Not serviced separately

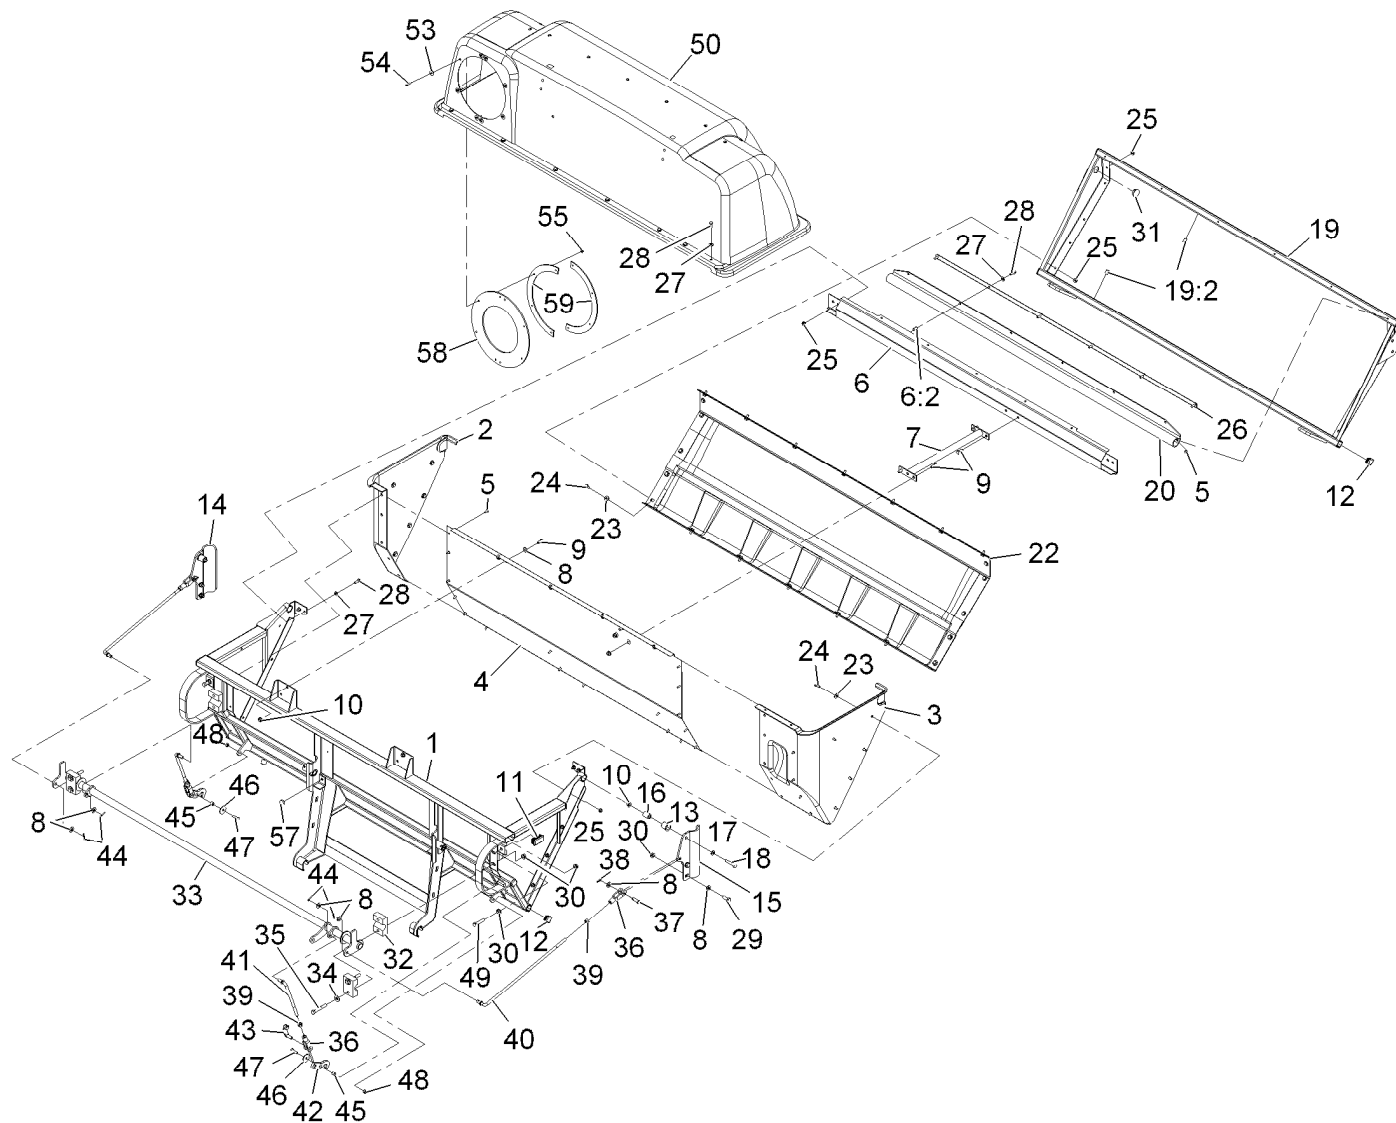

Hopper Assembly No. 109-6142


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	109-8709-03	1	Frame	20	103-2360	1	Seal-Door Hinge
2	103-7827	1	Panel-Bagger, RH	22	103-2383	1	Bag And Bottom Panel ASM
3	103-7826	1	Panel-Bagger, LH	23	3256-2	32	Washer-1/4 Std
4	103-2404-03	1	Sheet-Wall	24	321-3	32	Screw-HH 1/4-20 X 5/8
5	114439	27	Rivet	25	32128-33	36	Nut-Whizlock 1/4-20
6	103-2710	1	Rear Crossmember ASM	26	103-3010-03	1	Strap-Hold Down
6:2	32148-6	6	Insert-Nut	27	3256-22	22	Washer-1/4 Sae
7	103-2414-03	1	Support	28	321-4	22	Screw-HH 1/4-20 X 3/4
8	3256-24	12	Washer-3/8 Sae	29	323-6	4	Screw-HH 3/8-16 X 1
9	322-3	6	Screw-HH 5/16-18 X 3/4	30	3290-357	12	Nut-Whizlock 3/8-16
10	32128-20	8	Nut-Whizlock 5/16-18	31	103-8018	2	Plug-Dome
11	103-3201	2	Cap	32	103-2409	4	Half-Block, Bearing
12	103-3202	8	Cap	33	103-2412-03	1	Link-Intermediate
13	103-2377	2	Bushing	34	3256-4	4	Washer-3/8 Std
14	103-3331-03	1	Arm-Hinge, RH	35	323-12	4	Screw-HH 3/8-16 X 2 1/2
15	103-3332-03	1	Arm-Hinge, LH	36	1-633131	4	Yoke-Linkage, Brake
16	103-2361	2	Pin-Pivot, Hinge	37	1-808285	2	Pin-Clevis 3/8 X 1 1/8
17	3256-23	2	Washer-5/16 Sae	38	1-806003	2	Hairpin-Cotter
18	322-9	2	Screw-HH 5/16-18 X 1 3/4	39	3219-3	4	Nut-Hex 3/8-24
19	103-2737	1	Door ASM	40	103-2365	2	Link-Hinge
19:2	32148-6	12	Insert-Nut	41	103-2413	2	Link-Handle

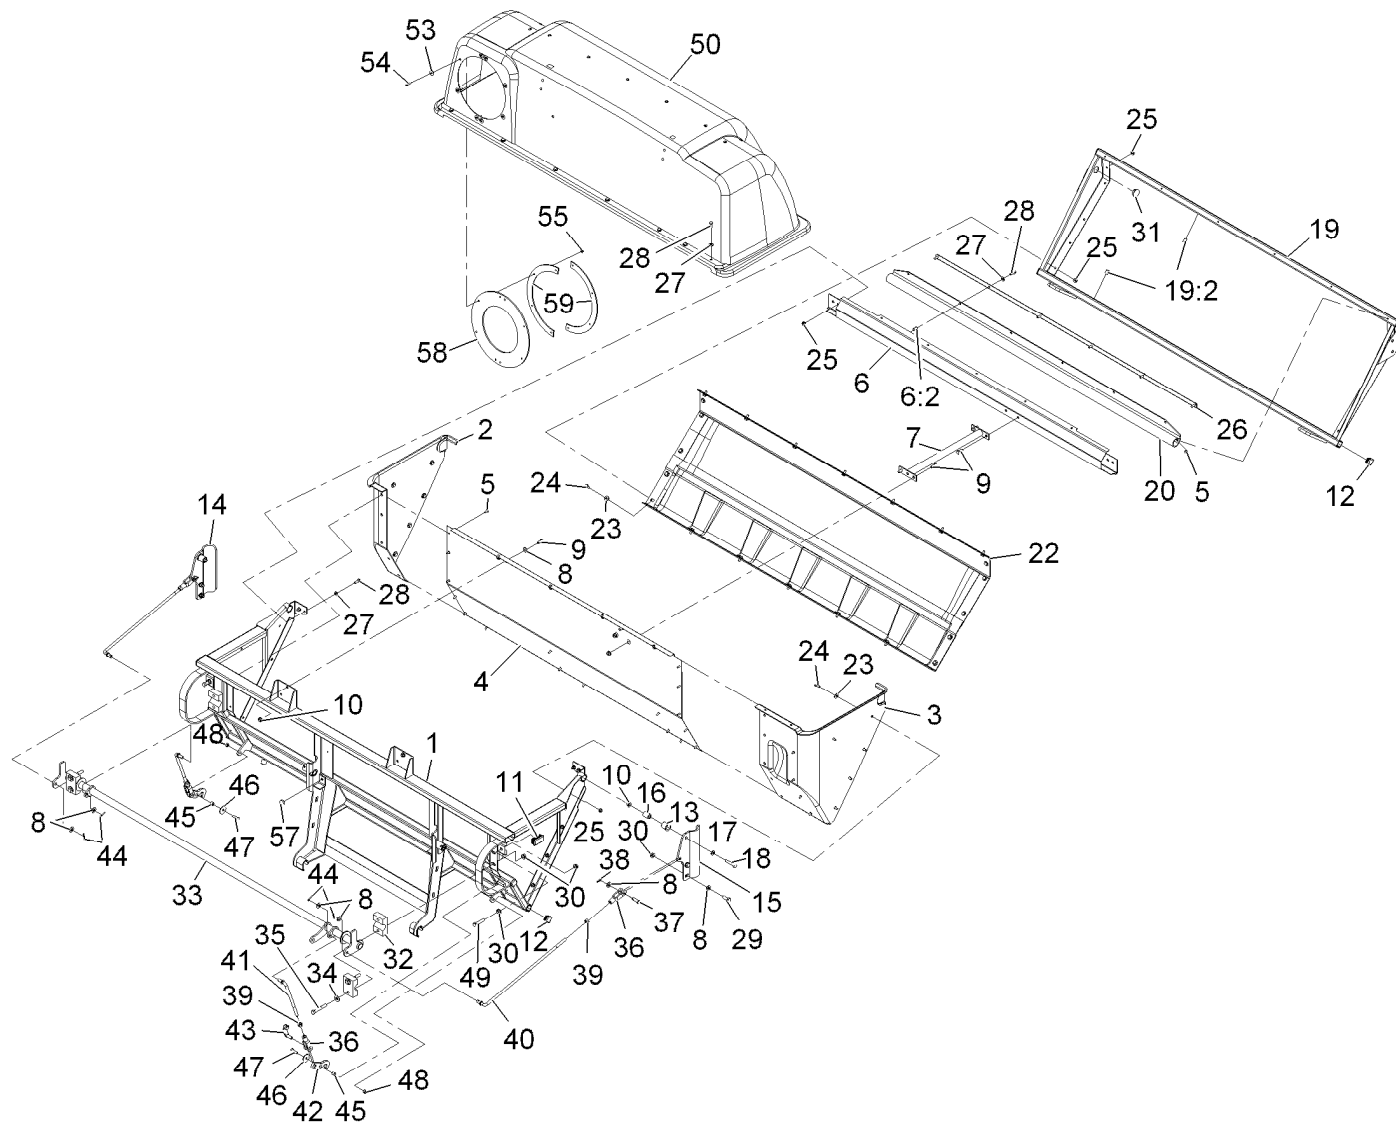

Hopper Assembly No. 109-6142 (continued)


Ref.	Part Number	Qty.	Description
42	103-3191-03	2	Latch
43	103-2399	2	Pin-Clevis Spring 3/8
44	3272-10	4	Pin-Cotter 1/8 X 3/4
45	1-633545	2	Spacer
46	3256-55	2	Washer
47	321-6	2	Screw-HH 1/4-20 X 1
48	3296-42	2	Nut-Nyloc 1/4-20
49	323-53	2	Screw-HH 3/8-16 X 1 3/4

Ref.	Part Number	Qty.	Description
50	109-7301	1	ASM,Hood Dump
53	3256-61	8	Washer
54	3250-27	8	Screw-PPH #10-24 X 7/8
55	3296-2	8	Nut-Nyloc #10-24
57	1-513658	2	Bumper
58	103-0439	1	Seal-Tube
59	103-0378	2	Clamp-Seal

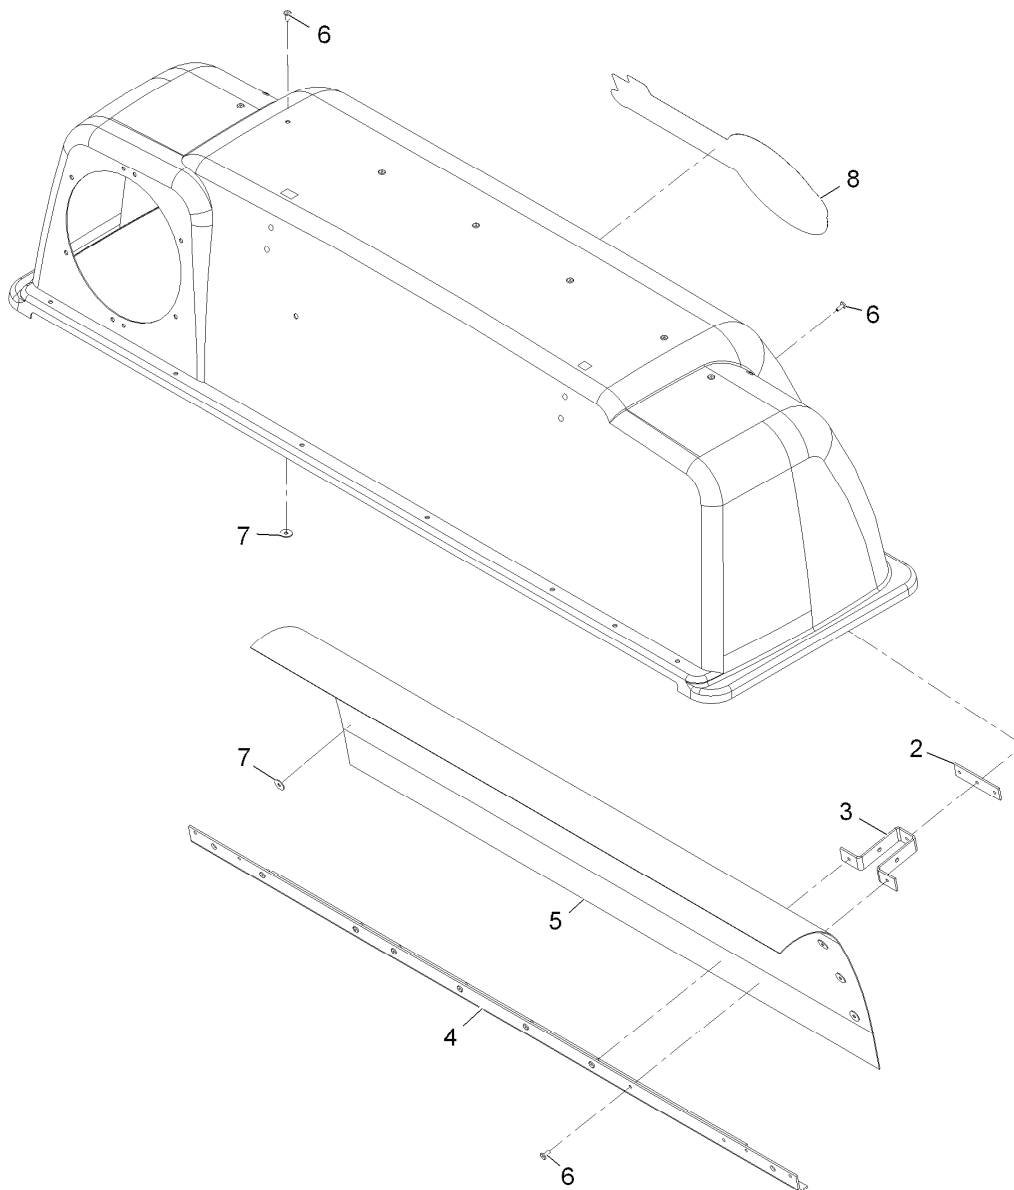

Hood Assembly No. 109-7301


Ref.	Part Number	Qty.	Description
2	103-0376	2	Plate-Latch, Reinforcement
3	103-0379	2	Bracket-Mount
4	103-2662-03	1	Support-Screen
5	103-0440	1	Screen-Bagger
6	114439	33	Rivet-Pop
7	3256-61	15	Washer-Flat
8	103-0438	1	Decal, Exmark

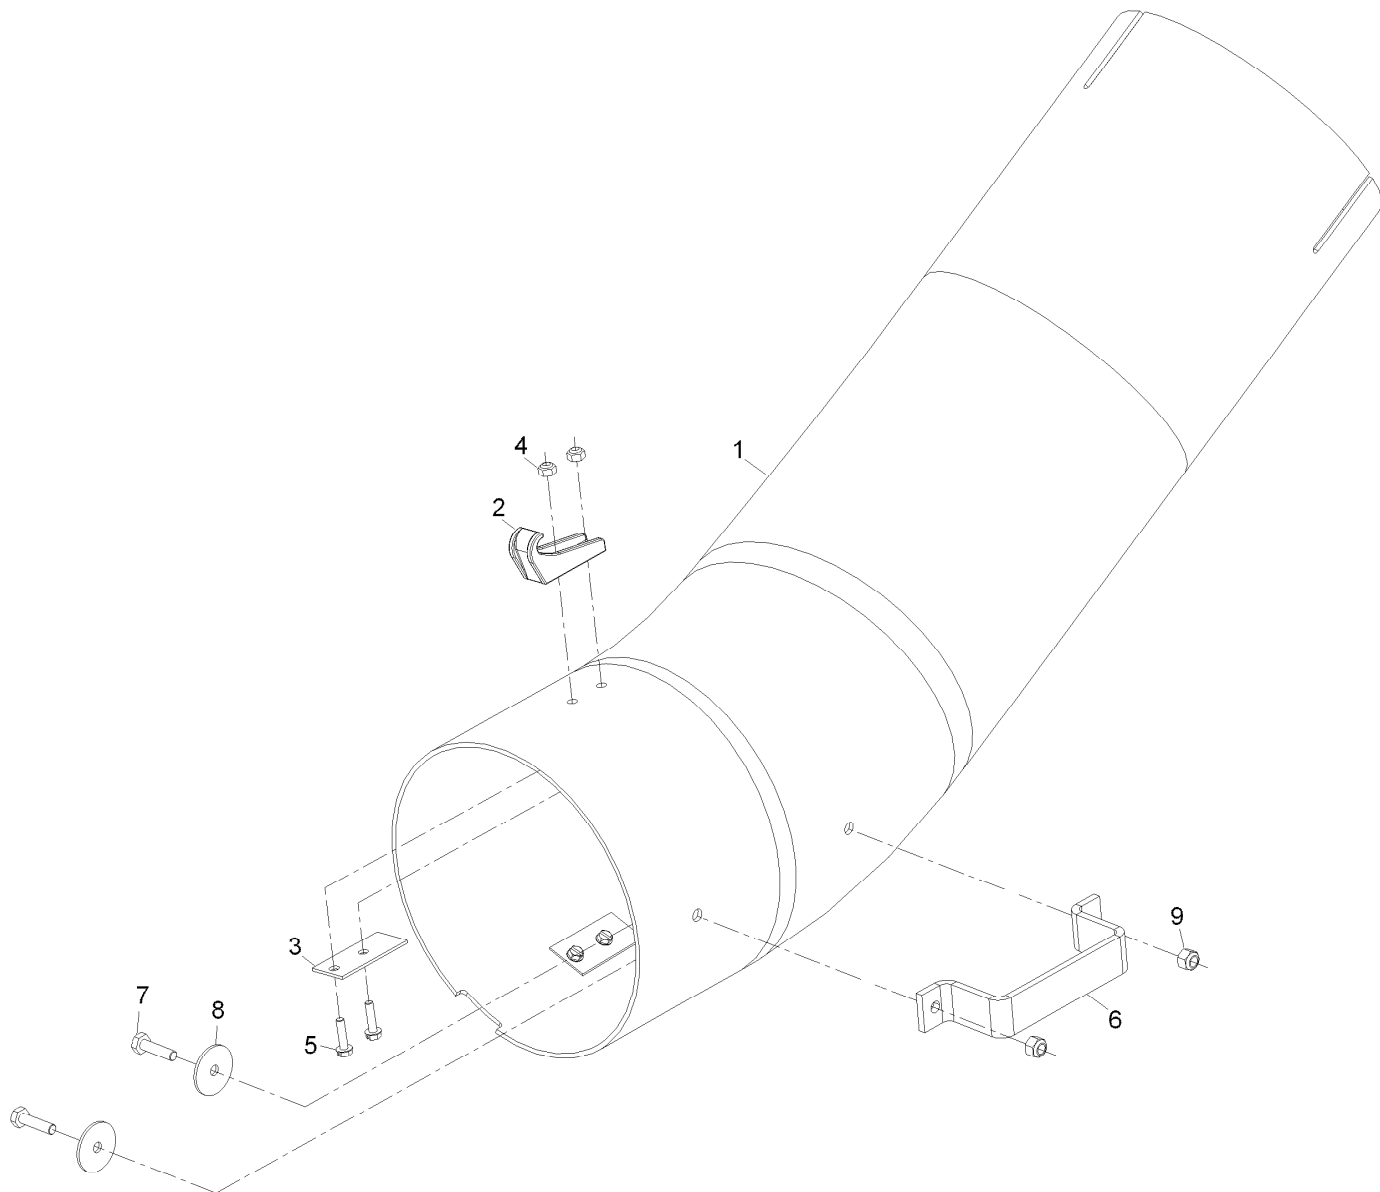

Lower Tube Assembly No. 109-1973

Ref.	Part Number	Qty.	Description
1	109-1974	1	Kit, Lower Tube
2	103-2897	2	Latch-Catch ●
3	103-3079	2	Plate-Backing
4	3296-2	4	Nut-Nyloc #10-24
5	32105-13	4	Screw-HWH #10-24 X 3/4
6	1-353005-03	1	Handle
7	321-6	2	Screw-HH 1/4-20 X 1
8	3256-55	2	Washer
9	3296-42	2	Nut-Nyloc 1/4-20

● Kit No. 103-4143 - Contains catch, rubber latch, and mounting hardware

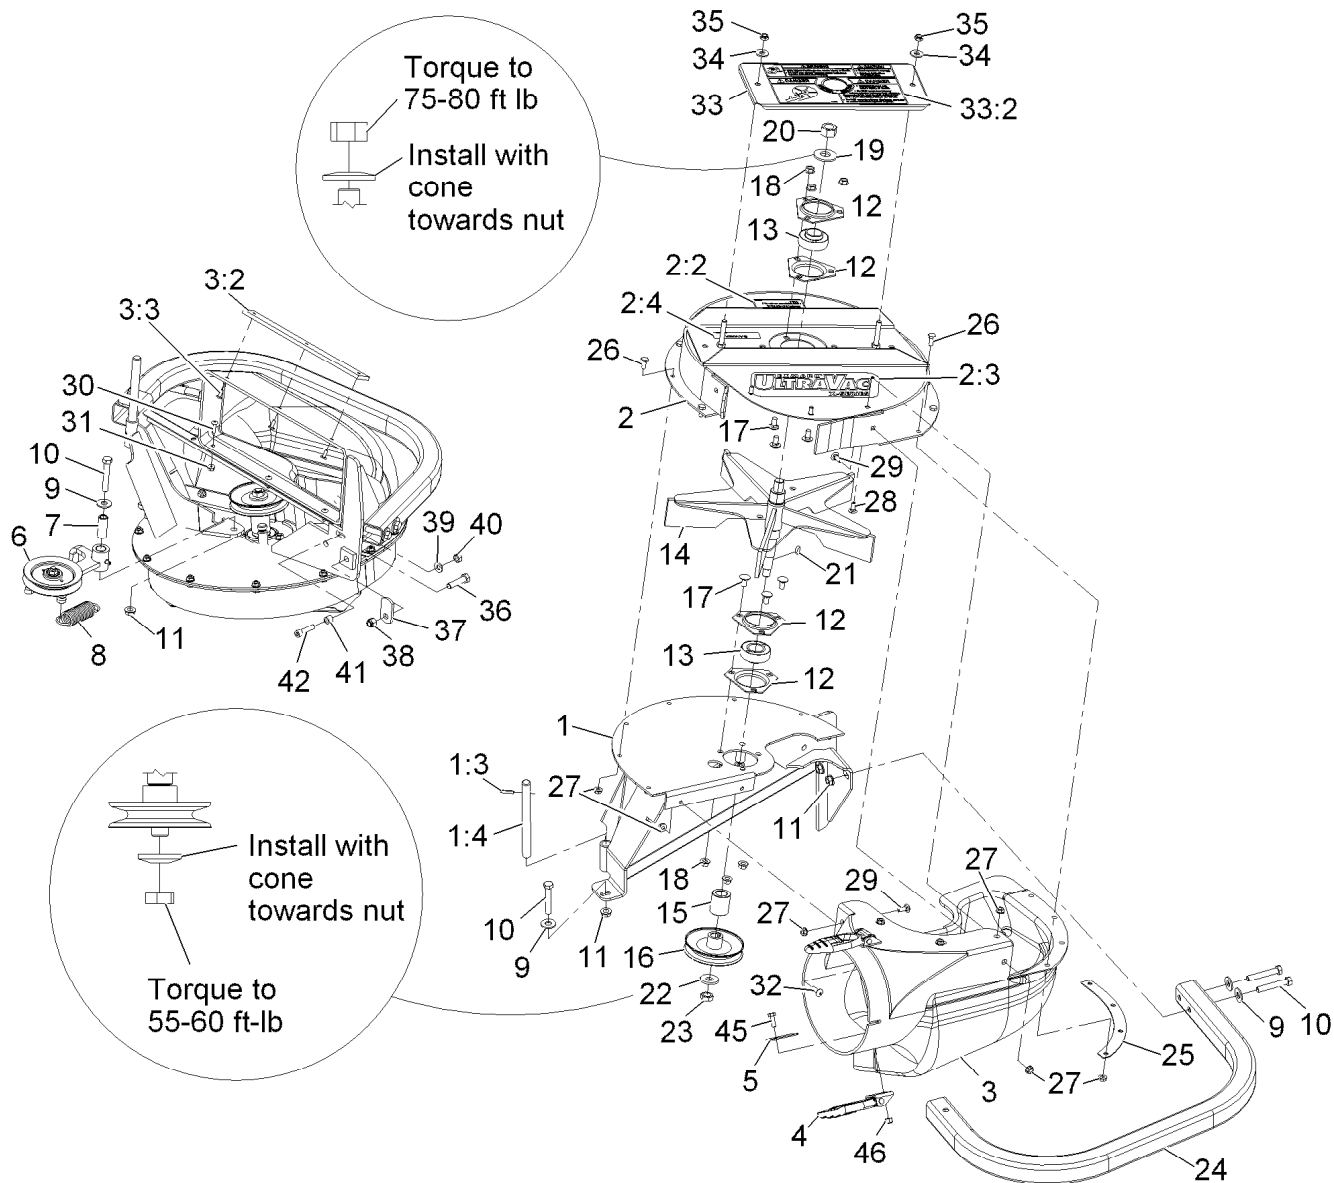

Blower Assembly No. 109-9836


Ref.	Part Number	Qty.	Description
1	109-8885-03	1	Wld,Frame Lg Blower
1:3	1-806323	1	Rollpin 3/16 X 7/8
1:4	1-353050	1	Shaft-Catcher, Grass
2	116-4816	1	ASM-Upper Housing Large
2:2	103-6607	1	Decal,Weight
2:3	116-4788	1	Decal-Ultra Vac X-Series
2:4	98-5954	1	Decal-Cover, Missing
3	109-2954	1	ASM,Blower Chute Lz
3:2	103-4751-03	1	Plate,Reinforcement Large
3:3	114439	3	Rivet
4	103-2898	2	Latch-Rubber ■
5	103-3093	2	Plate-Backing
6		1	ASM, Idler ●
7	1-603044	1	Bushing
8	1-653331	1	Spring
9	3256-4	4	Washer-3/8 Std
10	323-11	4	Screw-HH 3/8-16 X 2 1/4

Ref.	Part Number	Qty.	Description
11	3290-357	4	Nut-Whizlock 3/8-16
12	1-513013	4	Housing-Flange
13	1-653346	2	Bearing ▲
14	103-0455	1	Impeller
15	103-0460	1	Spacer
16	103-0456	1	Sheave-Blower ▲
17	3230-18	6	Bolt-Carriage 5/16-18 X 5/8
18	32128-20	6	Nut-Whizlock 5/16-18
19	1-513208	1	Washer-Spring Disc 5/8
20	3219-6	1	Nut-Hex 5/8-18
21	3257-32	1	Key-Woodruff 3/16 X 5/8
22	1-513435	1	Washer-Spring Disc 1/2
23	3220-5	1	Nut-Jam 1/2-20
24	103-0458-01	1	Bumper
25	103-0461-03	1	Plate-Backing, Blower
26	321-3	10	Screw-HH 1/4-20 X 5/8
27	32128-33	17	Nut-Whizlock 1/4-20

● Not serviced separately

■ Kit No. 103-4143 - Contains catch, rubber latch, and mounting hardware

▲ Apply Mobil HTS grease (P/N 103-5217 1.5 oz packet) (or a food-grade anti-seize). See operator s manual for locations.

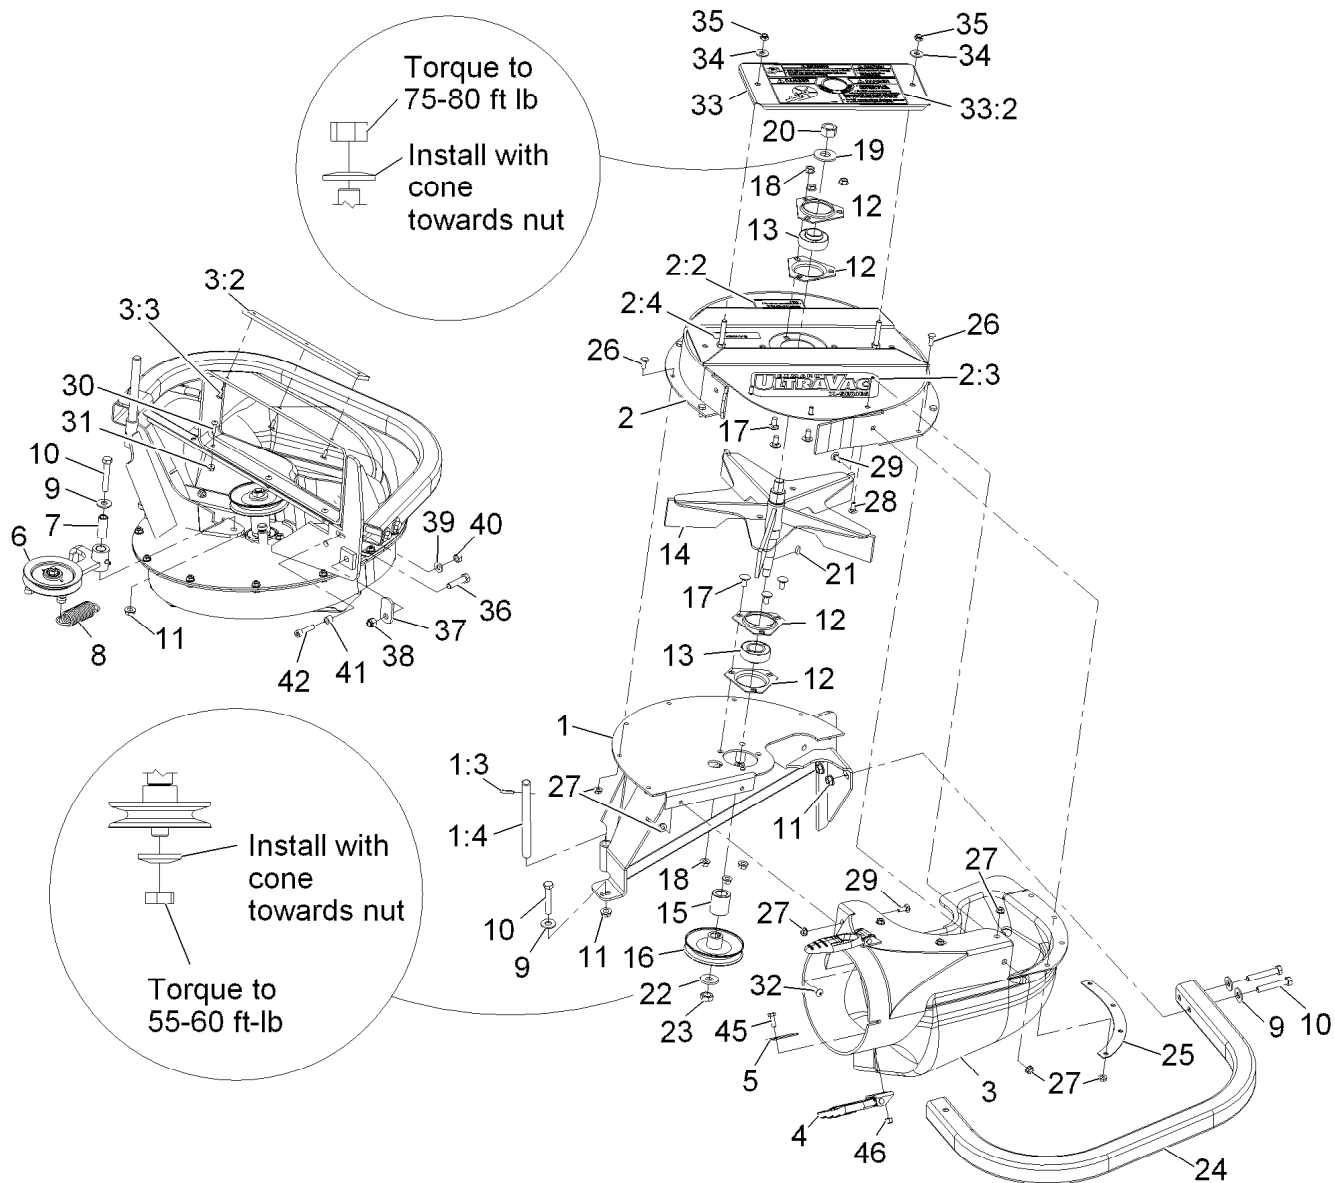

Blower Assembly No. 109-9836 (continued)


Ref.	Part Number	Qty.	Description
28	3229-11	3	Bolt-Carriage 1/4-20 X 5/8
29	3229-1	2	Bolt-Carriage 1/4-20 X 3/4
30	1-803075	3	Screw-Truss Head #10-24 X 3/4
31	3290-148	3	Nut-Whizlock #10-24
32	1-803076	2	Screw-PPH 1/4-20 X 3/4
33	103-3584-03	1	Cover, Bearing
33	103-3583	1	ASM, Bearing Cover
33:2	109-5890	1	Decal- Blower Warning
34	3256-3	2	Washer-5/16 Std

Ref.	Part Number	Qty.	Description
35	3296-47	2	Nut-Nyloc 5/16-18 Thin
36	323-8	1	Screw-HH 3/8-16 X 1 1/2
37	1-353054	1	Latch-Catcher, Grass
38	3296-39	1	Nut-Nyloc 3/8-16
39	1-303334	1	Washer-Spring Disc 5/16
40	3217-6	1	Nut-Hex 5/16-18
41	103-0126	1	Bushing
42	3274-18	1	Screw-Sh 5/16-18 X 1 1/4
45	321-4	2	Screw-HH 1/4-20 X 3/4
46	3296-42	2	Nut-Nyloc 1/4-20

● Not serviced separately


■ Kit No. 103-4143 - Contains catch, rubber latch, and mounting hardware

▲ Apply Mobil HTS grease (P/N 103-5217 1.5 oz packet) (or a food-grade anti-seize). See operator s manual for locations.

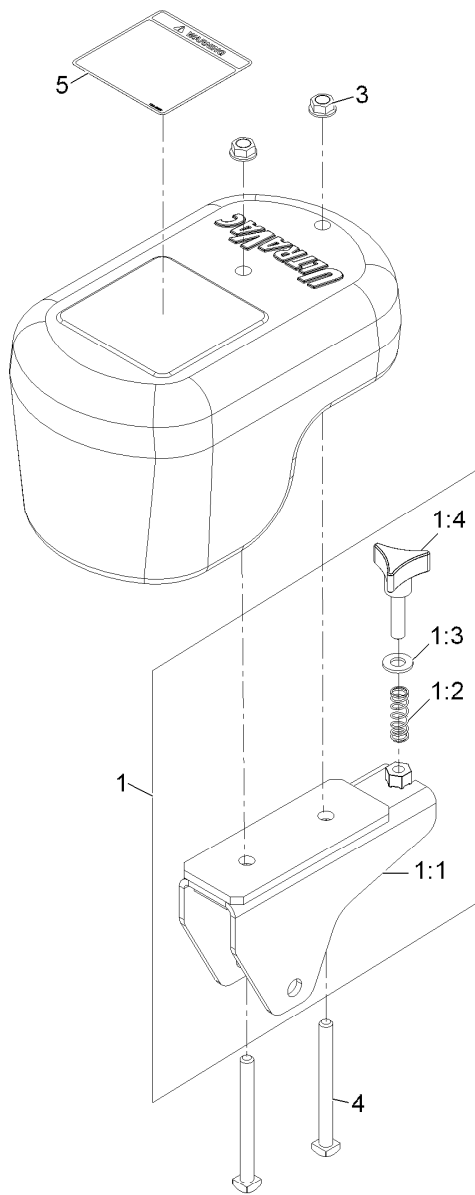


Caster Weight Assembly No. 109-8461

Ref.	Part Number	Qty.	Description
1	109-8460	1	ASM,Caster Weight Bracket
1:1	109-7711-01	1	Wld,Caster Weight Bracket
1:2	103-2188	1	Spring
1:3	3256-24	1	Washer-Flat
1:4	103-2187	1	Knob
3	3290-357	2	Nut-Whizlock 3/8-16
4	103-2189	2	Bolt-Square Hd 3/8-16 X 4
5	103-6607	1	Decal,Weight

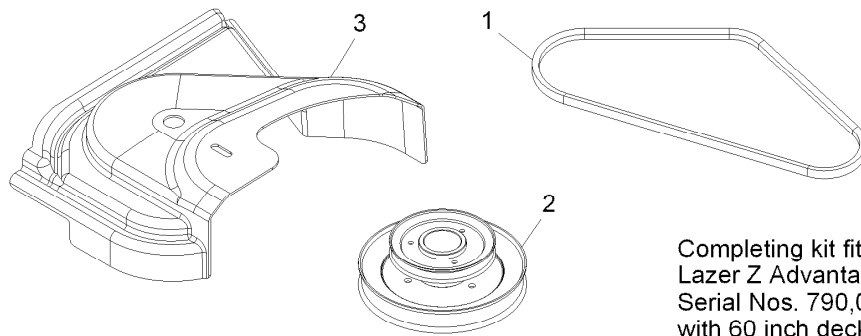


Completing kit fits all
Lazer Z Advantage Series (LZAS)
Serial Nos. 790,000-919,999
with 60 inch decks

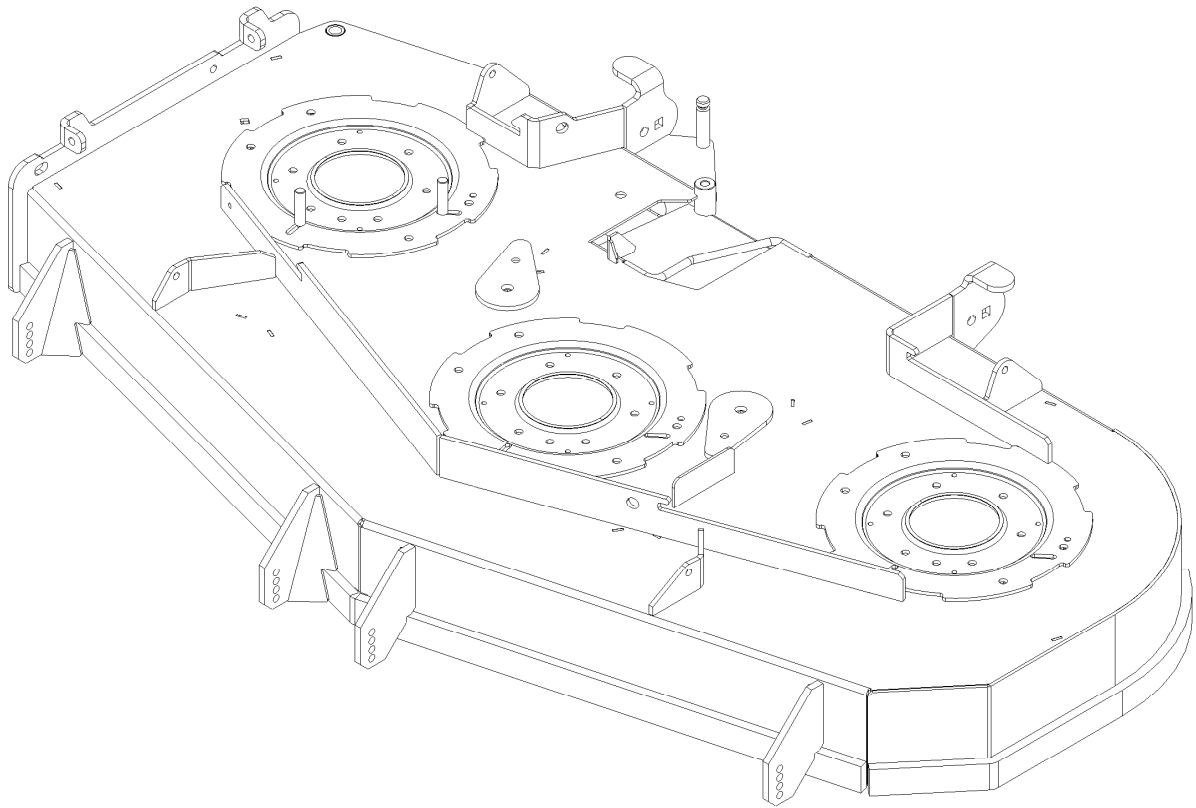


Completing Kit No. 109-9626

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	103-0866	1	Belt, Blower Drive 60
2	109-9634	1	Jackshaft,Uv Drive 604
3	109-9381	1	Cover,Belt Uv 60

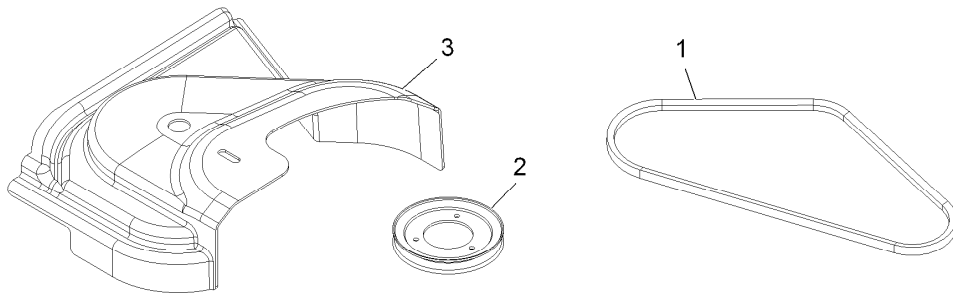


Completing kit fits all Lazer Z (LZZ)
Serial Nos. 790,000-919,999
and Lazer Z X-Series (LZX) Serial Nos.
920,000 and Higher with 60 inch decks

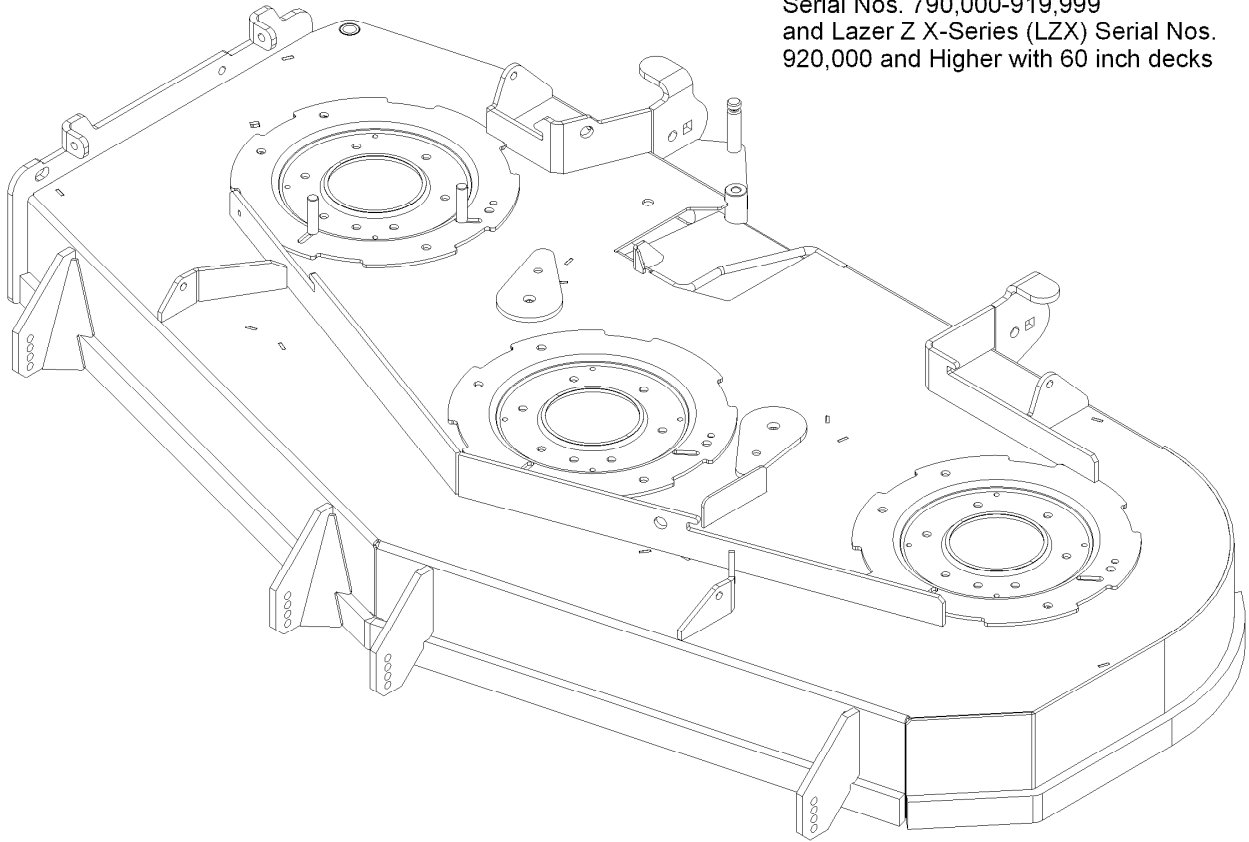


Completing Kit No. 109-9627

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	103-0866	1	Belt, Blower Drive 60
2	109-9635	1	Sheave, Drive Lzuv 606
3	109-9381	1	Cover, Belt Uv 60

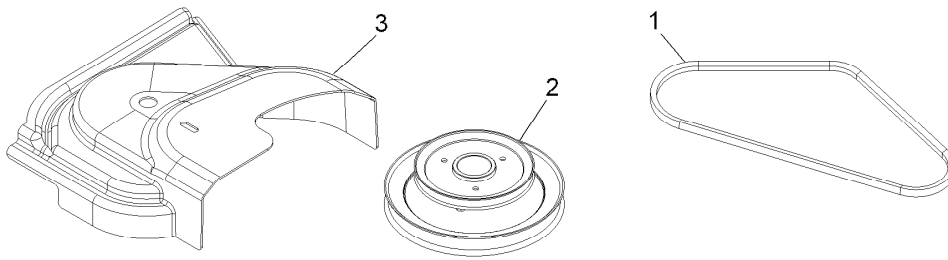


Completing kit fits all
Lazer Z Advantage Series (LZAS)
Serial Nos. 790,000-919,999
with 72 inch decks

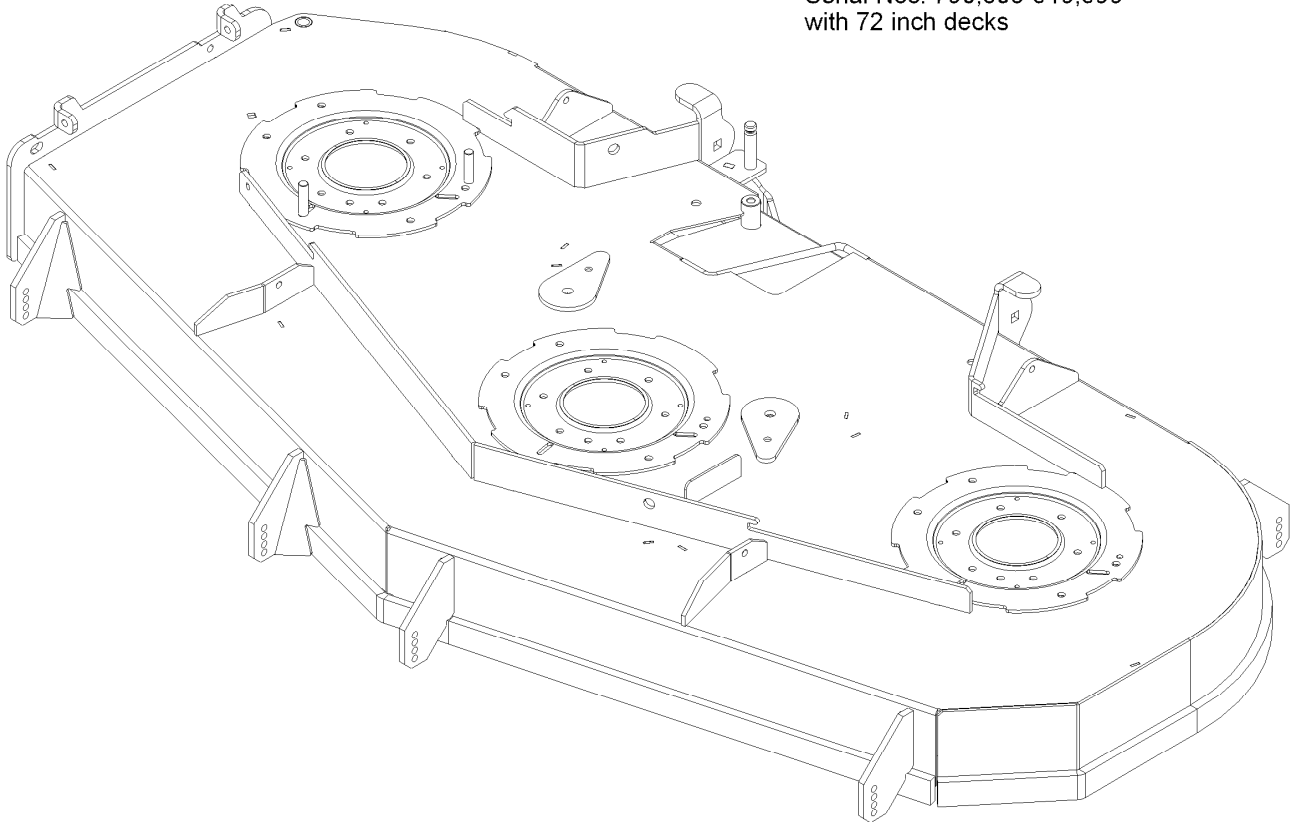


Completing Kit No. 109-9628

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	103-0867	1	Belt, Blower Drive 72
2	109-9636	1	Jackshaft,Uv Drive 724
3	109-8473	1	Cover,Belt Uv 72

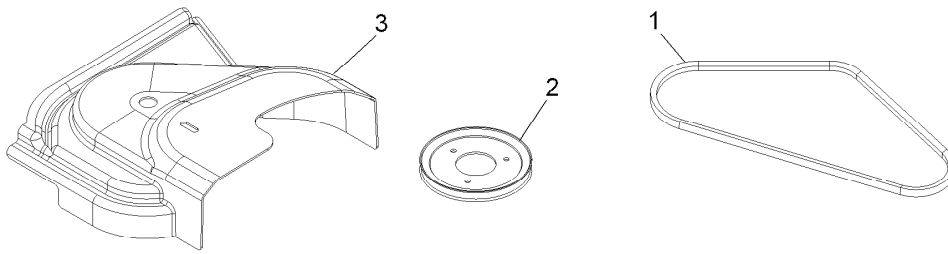


Completing kit fits all Lazer Z (LZZ)
Serial Nos. 790,000-919,999
and Lazer Z X-Series (LZX) Serial Nos.
920,000 and Higher with 72 inch decks

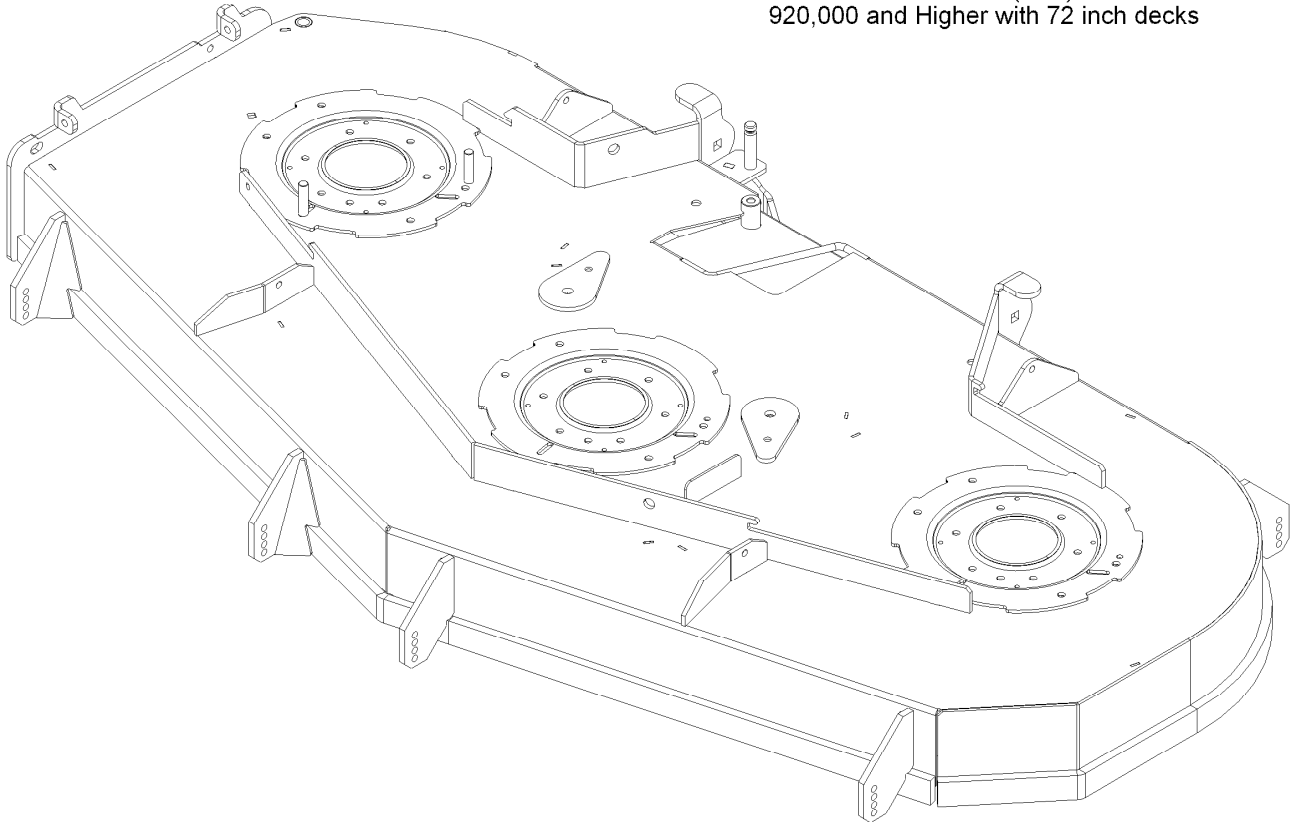


Completing Kit No. 109-9629

Ref.	Part Number	Qty.	Description
1	103-0867	1	Belt, Blower Drive 72
2	109-9637	1	Sheave, Drive Lzuv 726
3	109-8473	1	Cover, Belt Uv 72

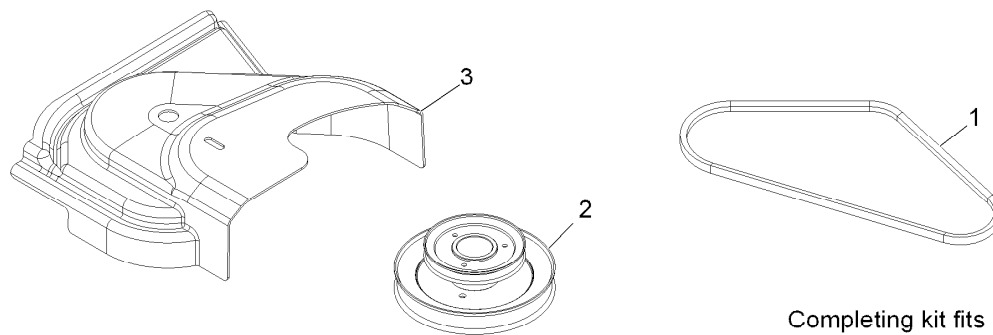


Completing kit fits all
Lazer Z Advantage Series (LZA)
Serial Nos. 850,000-919,999 and
Lazer Z E-Series (LZE) and
Lazer Z S-Series (LZS) Serial Nos.
920,000 and Higher with 60 inch decks

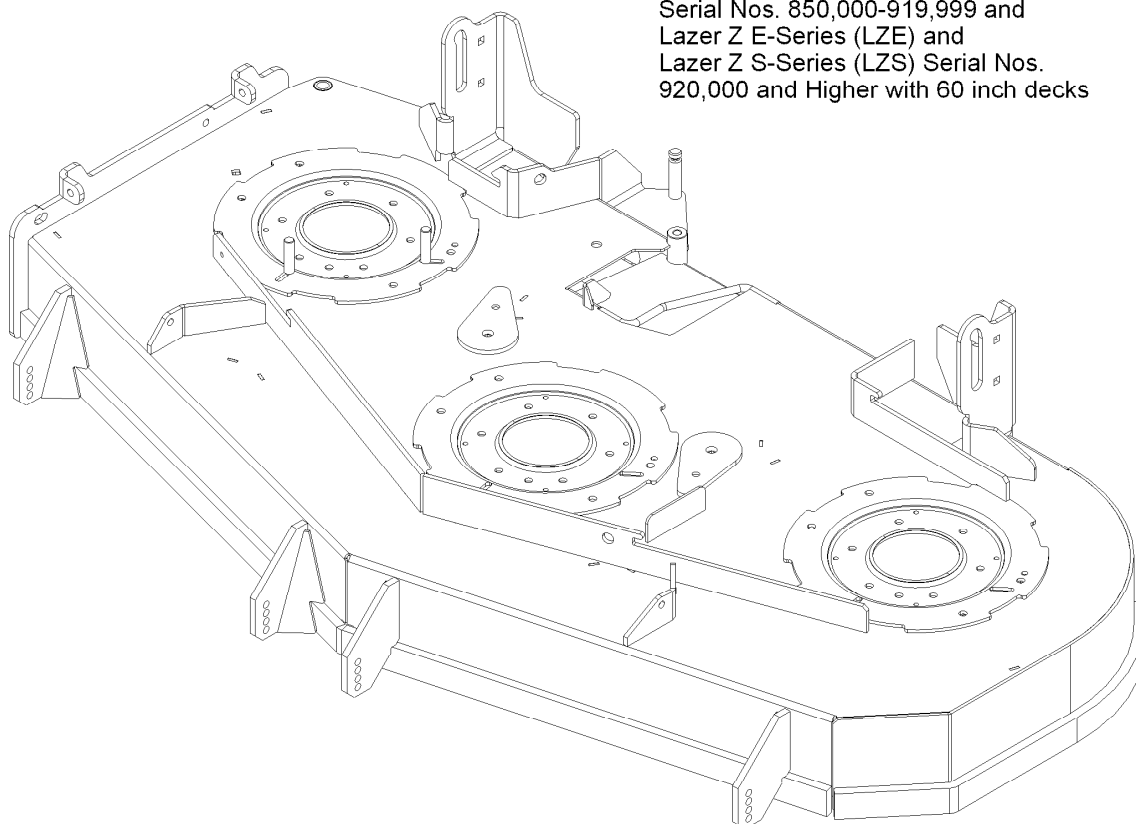


Completing Kit No. 116-2086

Ref.	Part Number	Qty.	Description
1	103-0866	1	Belt, Blower Drive 60
2	116-2090	1	Jackshaft,Uv Drive 604 Splined
3	109-9381	1	Cover,Belt Uv 60

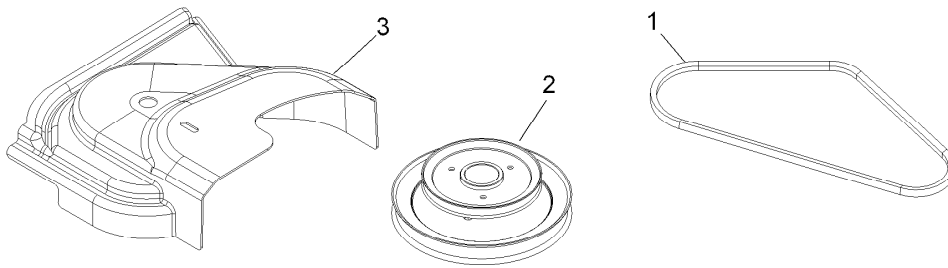

Completing kit fits all
Lazer Z S-Series (LZS)
Serial Nos. 920,000 and Higher
with 72 inch decks

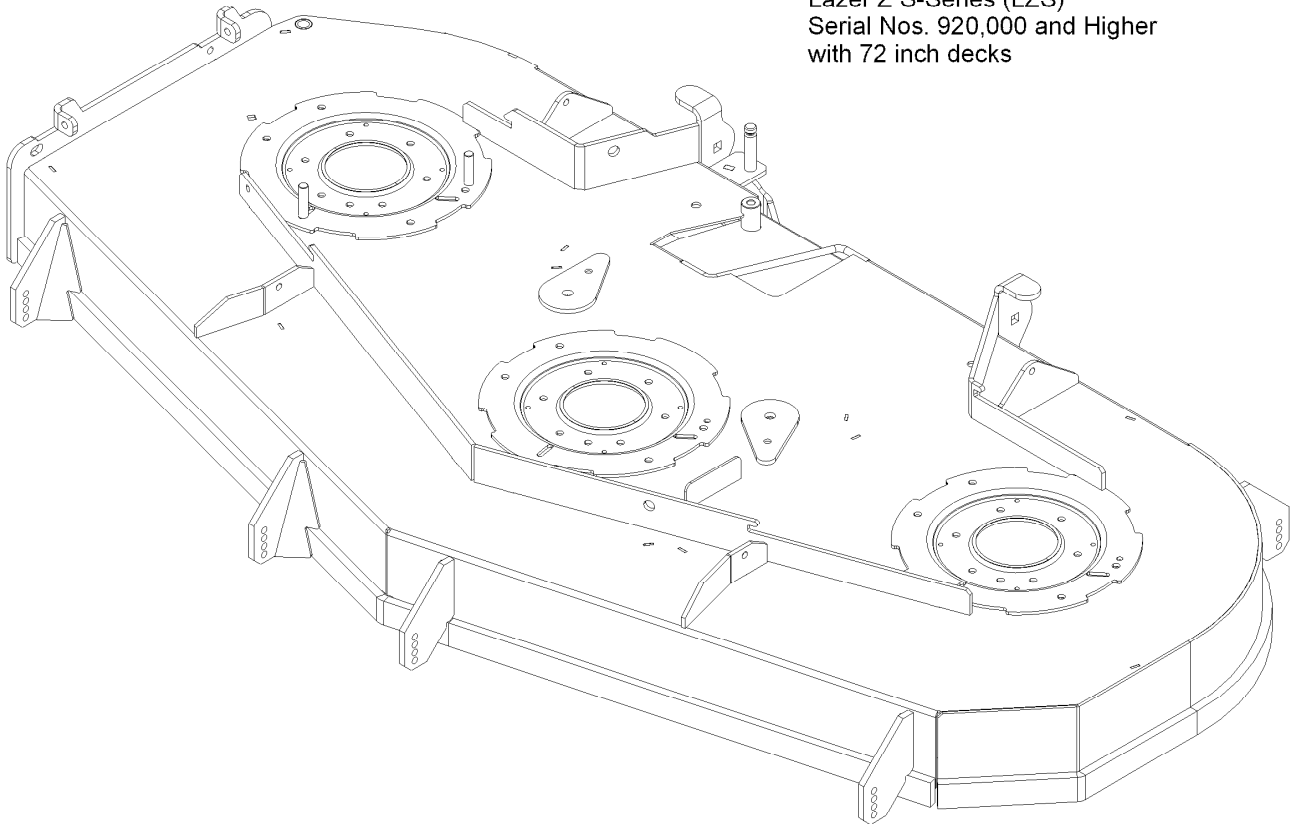

Completing Kit No. 116-2087

Ref.	Part Number	Qty.	Description
1	103-0867	1	Belt, Blower Drive 72
2	116-2091	1	Jackshaft,Uv Drive 724 Splined
3	109-8473	1	Cover,Belt Uv 72

SEE EXMARK'S COMPLETE LINE OF ACCESSORIES AND OPTIONS

MID-MOUNT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	OPERATOR CONTROLLED DISCHARGE
FULL SUSPENSION SEAT	ROLL OVER PROTECTION SYSTEM (ROPS)
DECK LIFT ASSIST KIT	SUN SHADE
HITCH KIT	TRASH CONTAINER
LIGHT KIT	TURF STRIPER
12V POWER PORT	ULTRA VAC COLLECTION SYSTEM
MICRO-MULCH SYSTEM	ULTRA VAC QUICK DISPOSAL SYSTEM

OUT-FRONT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	SNOW BLADE
DUAL-TAIL WHEEL	SNOWBLOWER
FLOOR PAN EXTENDER	SUN SHADE
HITCH KIT	TRASH CONTAINER
LIGHT KIT	ULTRA VAC COLLECTION SYSTEM
MICRO-MULCH SYSTEM	ULTRA VAC QUICK DISPOSAL SYSTEM
ROLL OVER PROTECTION SYSTEM (ROPS)	WEATHER CAB

WALK-BEHIND ACCESSORIES AND OPTIONS

GRASS CATCHER	TURF STRIPER
MICRO-MULCH SYSTEM	STANDON

Place Model No. and Serial No.
Label Here (Included in the Literature
Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____

© 2011 Exmark Mfg. Co., Inc.
Industrial Park Box 808
Beatrice, NE 68310
All Rights Reserved

Part No. 4500-859 Rev. A
(402) 223-6300
Fax (402) 223-5489
Printed in the USA.

