




ULTRA VAC® QDS

Model No. LZUVQD11—Serial No. 31200000 and Up

Picture below may not reflect actual product.

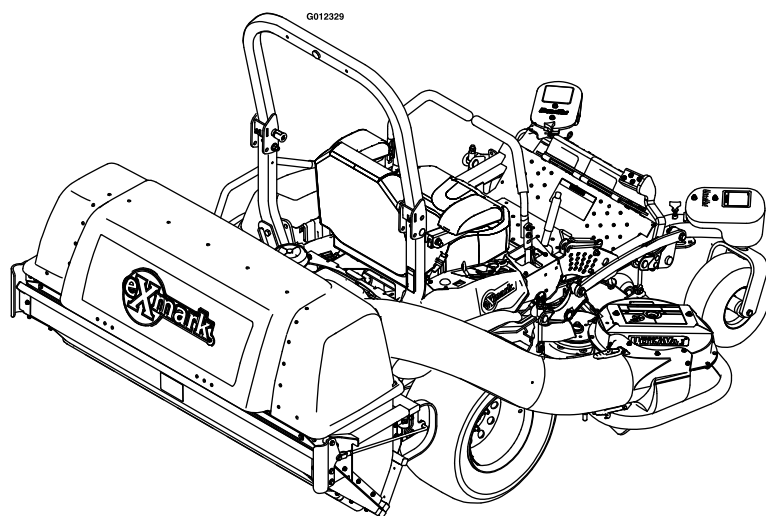

Parts Manual

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required	HJ: hex jam	PTH: phillips truss head
ASM: assembly	HLH: hex lag head	PTO: power-take-off
BBC: blade brake control	HOC: height-of-cut	RH: right hand
BHTF: button head thread forming	HSBH: hex socket button head	ROPS: roll-over protection system
CARR: carriage	HSFH: hex socket flat head	RRB: rear roller brush
CCW: counter clockwise	HSH: hex socket head	SFH: slotted fillister head
CW: clockwise	HWH: hex washer head	SHH: slotted hex head
DEG: degrees	HWHTF: hex washer head thread forming	SHWH: slotted hex washer head
DPA: Dual Point Adjustment	HYD: hydraulic	SPH: slotted pan head
ECM: electronic control module	LH: left hand	SQH: square head
EXT: external	LPG: Liquid Propane Gas	SRH: slotted round head
FH: flat head	NI: nylon insert	STD: standard
GA: gauge	NPTF: national pipe thread fine	TAP: self tapping
HD: heavy-duty	PFH: phillips flat head	TTH: torx truss head
HF: hex flange	PPH: phillips pan head	
HH: hex head	PPHTF: phillips pan head thread forming	
HHF: hex head flange	PRH: phillips round head	
HHFTF: hex head flange thread forming		

Touch Up Paint

Exmark black touch up spray paint – gloss black.


Exmark red touch up paint (spray paint – P/N 1-850337 - .6 oz liquid bottle – P/N 103-9140).



If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE Guaranteed!! (Some restrictions apply. See your participating Exmark Dealer for details.)

Contents

LZUVQD11 Assembly	4
Hopper Assembly No. 109-6142	5
Hood Assembly No. 109-7301	7
Blower Assembly No. 109-9836	8
Idler Assembly	10
Lower Tube Assembly No. 109-1973	11
Caster Weight Assembly No. 109-8461	12
Completing Kit No. 109-9626	13
Completing Kit No. 109-9627	14
Completing Kit No. 109-9628	15
Completing Kit No. 109-9629	16
Completing Kit No. 116-2086	17
Completing Kit No. 116-2087	18

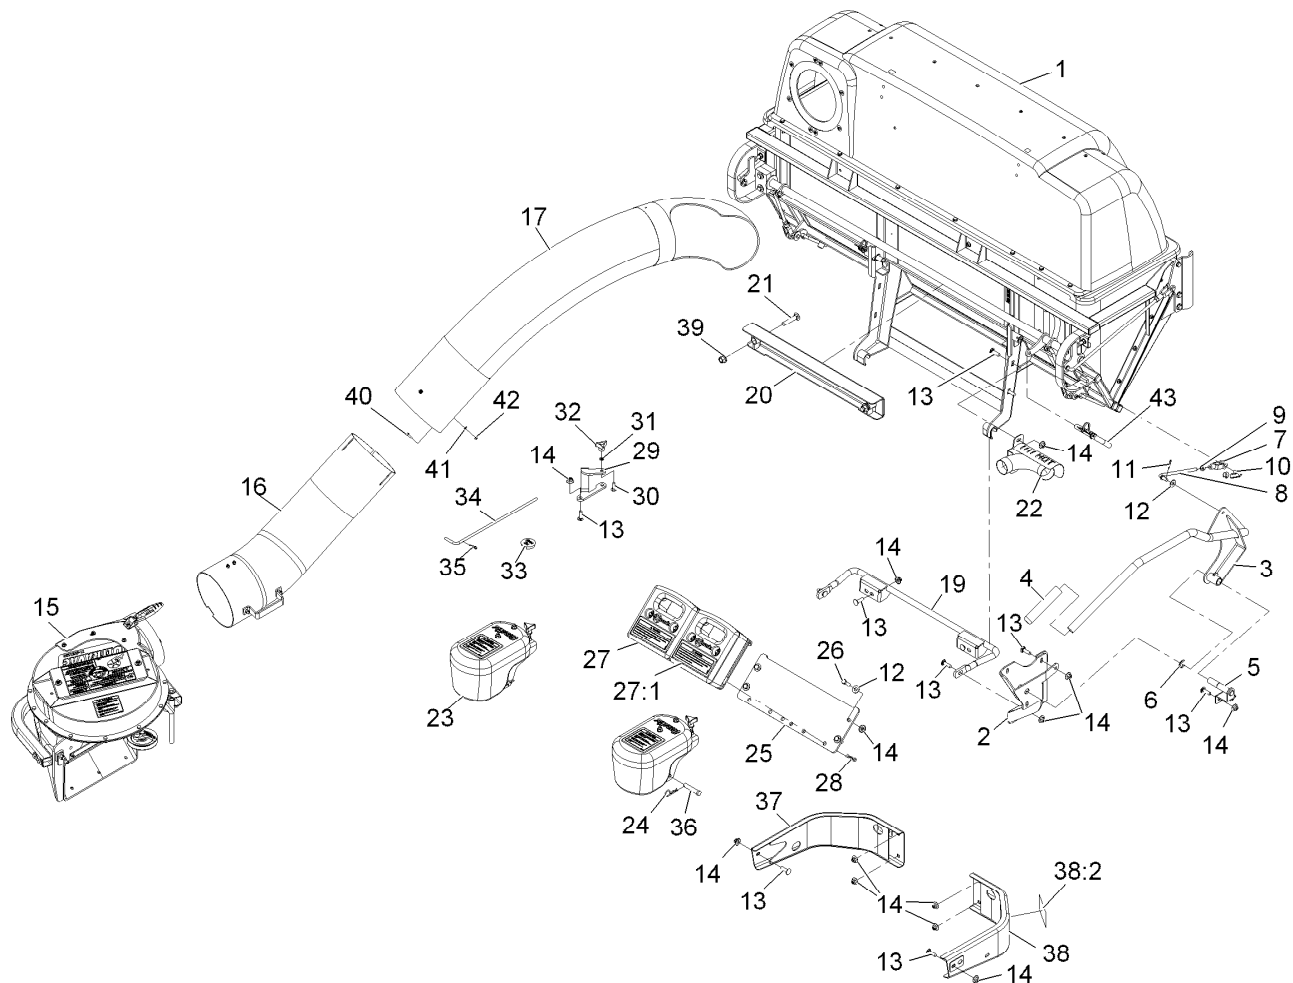


LZUVQD11 Assembly

Ref.	Part Number	Qty.	Description
1		1	ASM,Hopper Lg Qds ●
2	109-8712-03	1	Mount-Pivot
3	109-9369-03	1	Wld,Dump Handle
4	103-7115	1	Handle-Grip
5	109-6869	1	Pin-Handle
6	32151-48	1	E-Ring
7	1-633131	1	Yoke-Linkage, Brake
8	103-2413	1	Link-Handle
9	3219-3	1	Nut-Hex 3/8-24
10	103-2399	1	Pin-Clevis Spring 3/8
11	3272-10	1	Pin-Cotter 1/8 X 3/4
12	3256-4	5	Washer-3/8 Std
13	3231-28	12	Bolt-Carriage 3/8-16 X 1 1/4
14	109-6658	20	Nut-Nyloc 3/8-16 Flg
15	109-9836	1	ASM, Blower Large - Svc Only
16	109-1973	1	Lower Tube ASM
17	109-1968	1	Tube-Upper
19	109-9248	1	Mount-Bagger, Lower
20	116-0473-03	1	Mount-Bagger, Upper
21	3233-34	2	Bolt-Carriage 1/2-13 X 2 1/2
22	116-2804	1	Exhaust Diverter ASM
23	109-8461	2	ASM,Caster Weight


Ref.	Part Number	Qty.	Description
24	1-806005	2	Hairpin-Cotter
25	103-6368-01	1	Plate,Weight ASM Mount
26	323-7	4	Screw-HH 3/8-16 X 1 1/4
27	103-6363	2	ASM,Cast Weight
27:1	103-6605	1	Decal,Weight
28	9335124	4	Hairpin-Cotter
29	109-9463-03	1	Bracket,Belt Cover
30	3230-2	1	Bolt-Carriage 5/16-18 X 1
31	109-5667	1	Ring-Bolt Retaining
32	1-323385	1	Knob-3 Prong
33	103-1279	1	Plug, Black Nylon 1.75
34	109-3458	1	Pin,Chute Pivot
35	1-806003	1	Hairpin-Cotter
36	92-2743	2	Pin-Clevis
37	116-0057-03	1	Bumper-RH
38	116-0180	1	LH Bumper ASM
38:2	103-2076	1	Decal-Caution
39	99-5107	2	Nut-Lock 1/2-13
40	32105-13	3	Screw-HWH #10-24 X 3/4
41	3256-14	3	Washer-#10 Std
42	3296-2	3	Nut-Nyloc #10-24
43	116-0458	2	Bagger Mount Pin ASM

● Not serviced separately

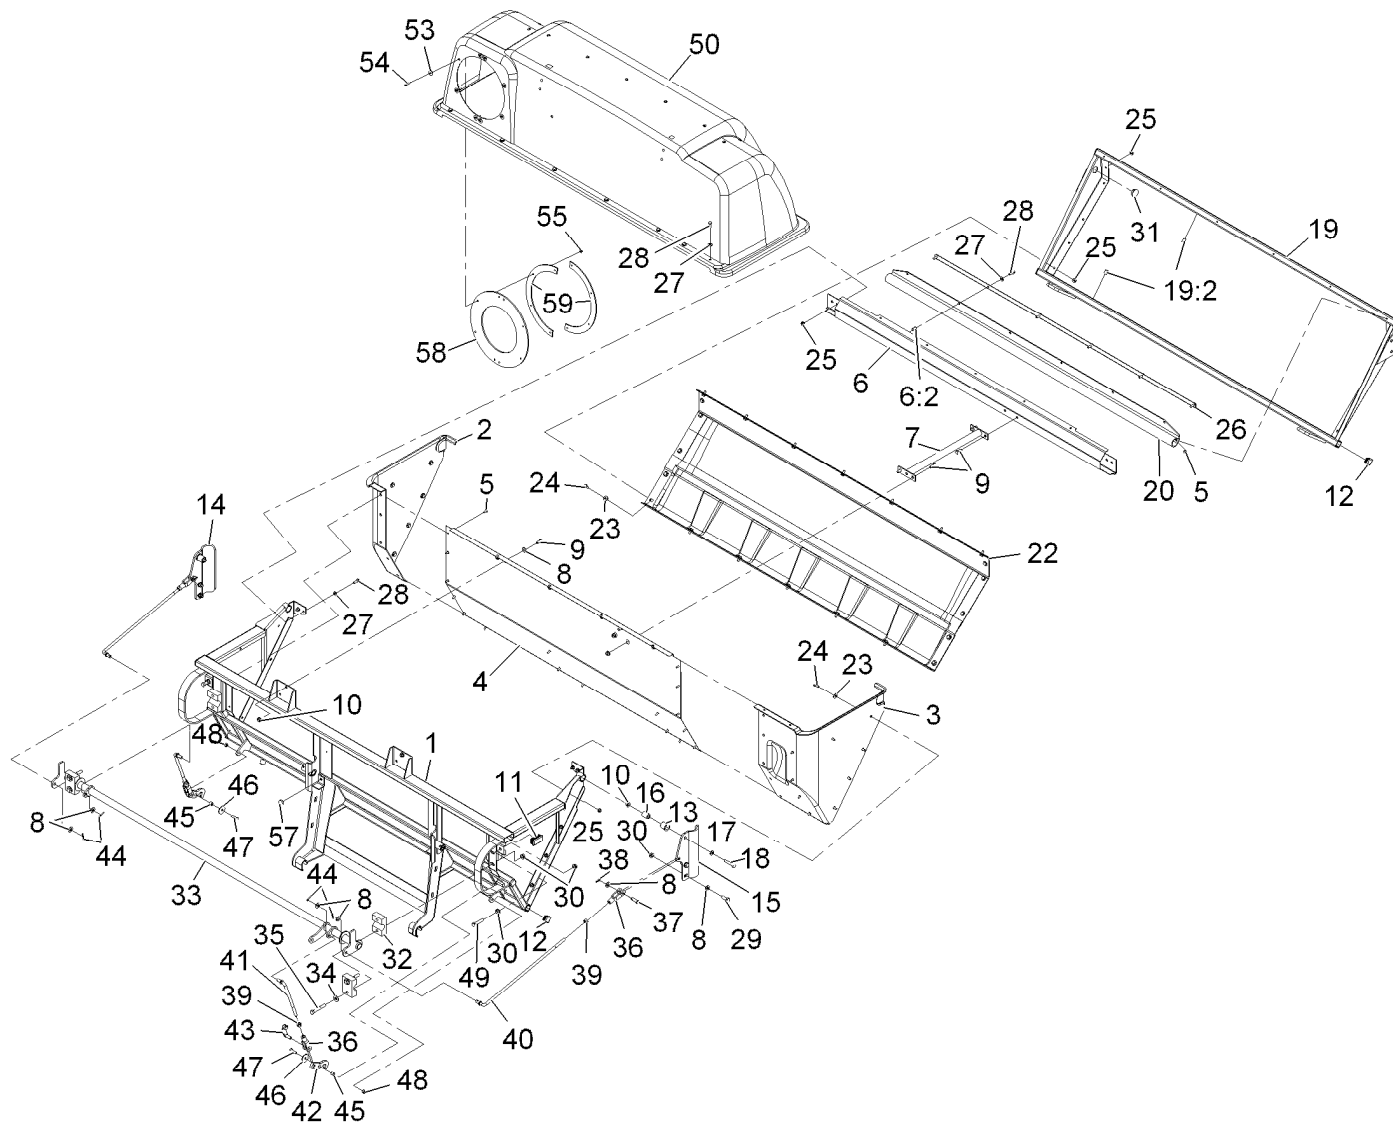

Hopper Assembly No. 109-6142


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	109-8709-03	1	Frame	20	103-2360	1	Seal-Door Hinge
2	103-7827	1	Panel-Bagger, RH	22	103-2383	1	Bag And Bottom Panel ASM
3	103-7826	1	Panel-Bagger, LH	23	3256-2	32	Washer-1/4 Std
4	103-2404-03	1	Sheet-Wall	24	321-3	32	Screw-HH 1/4-20 X 5/8
5	114439	27	Rivet	25	32128-33	36	Nut-Whizlock 1/4-20
6	103-2710	1	Rear Crossmember ASM	26	103-3010-03	1	Strap-Hold Down
6:2	32148-6	6	Insert-Nut	27	3256-22	22	Washer-1/4 Sae
7	103-2414-03	1	Support	28	321-4	22	Screw-HH 1/4-20 X 3/4
8	3256-24	12	Washer-3/8 Sae	29	323-6	4	Screw-HH 3/8-16 X 1
9	322-3	6	Screw-HH 5/16-18 X 3/4	30	3290-357	12	Nut-Whizlock 3/8-16
10	32128-20	8	Nut-Whizlock 5/16-18	31	103-8018	2	Plug-Dome
11	103-3201	2	Cap	32	103-2409	4	Half-Block, Bearing
12	103-3202	8	Cap	33	103-2412-03	1	Link-Intermediate
13	103-2377	2	Bushing	34	3256-4	4	Washer-3/8 Std
14	103-3331-03	1	Arm-Hinge, RH	35	323-12	4	Screw-HH 3/8-16 X 2 1/2
15	103-3332-03	1	Arm-Hinge, LH	36	1-633131	4	Yoke-Linkage, Brake
16	103-2361	2	Pin-Pivot, Hinge	37	1-808285	2	Pin-Clevis 3/8 X 1 1/8
17	3256-23	2	Washer-5/16 Sae	38	1-806003	2	Hairpin-Cotter
18	322-9	2	Screw-HH 5/16-18 X 1 3/4	39	3219-3	4	Nut-Hex 3/8-24
19	103-2737	1	Door ASM	40	103-2365	2	Link-Hinge
19:2	32148-6	12	Insert-Nut	41	103-2413	2	Link-Handle

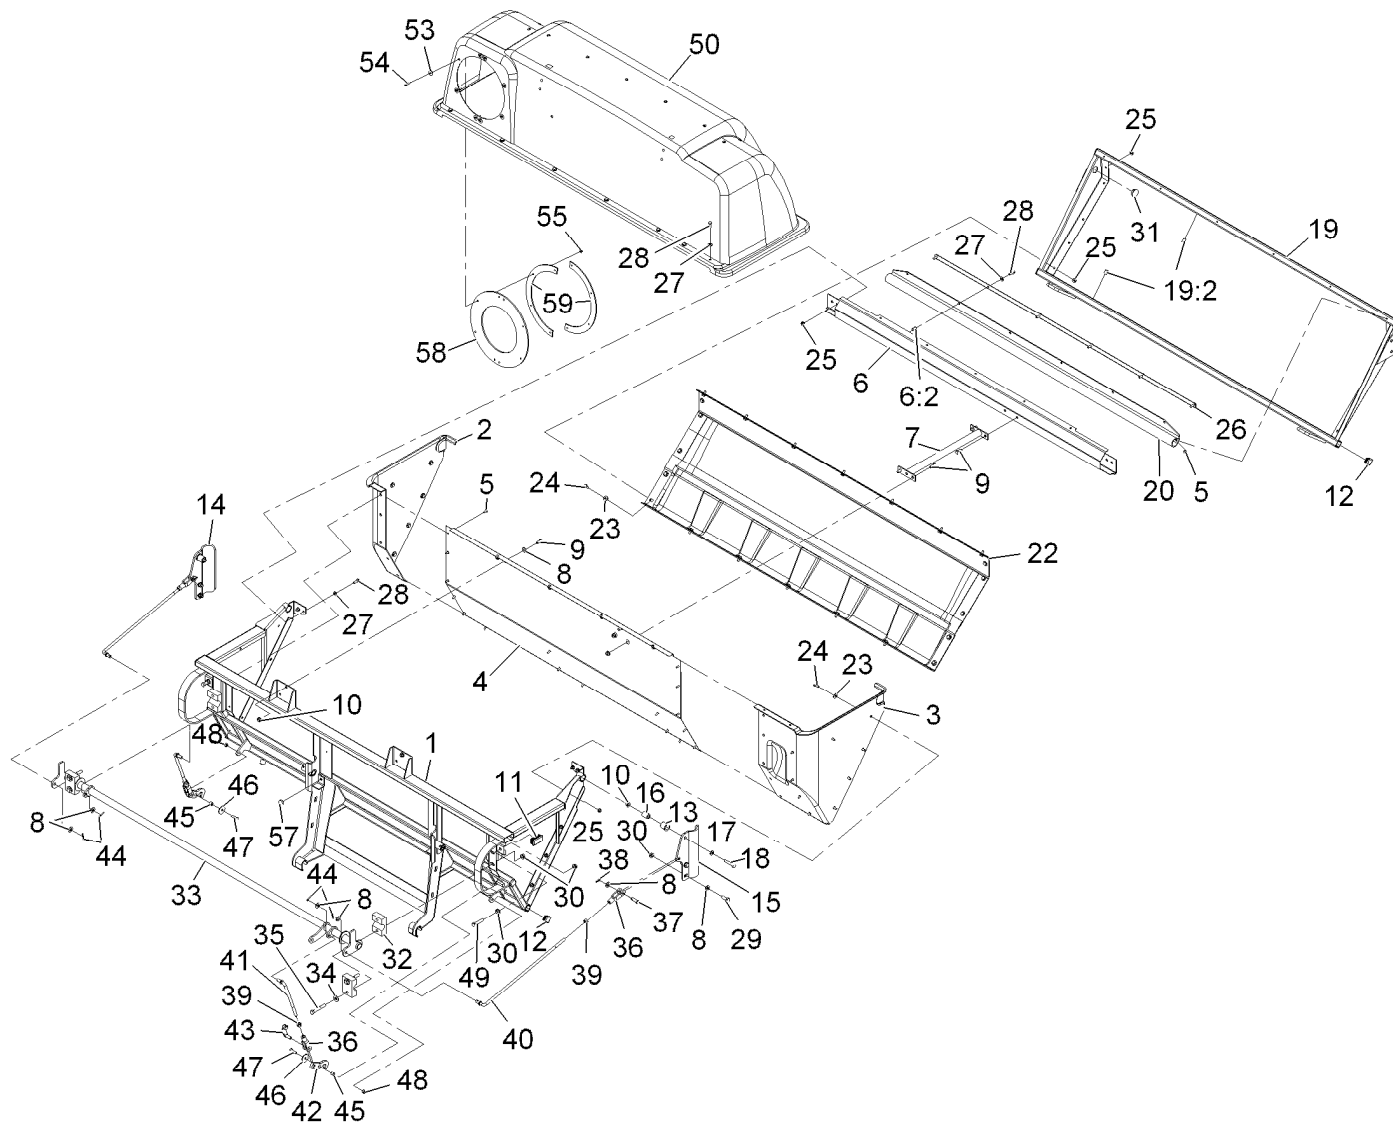

Hopper Assembly No. 109-6142 (continued)


Ref.	Part Number	Qty.	Description
42	103-3191-03	2	Latch
43	103-2399	2	Pin-Clevis Spring 3/8
44	3272-10	4	Pin-Cotter 1/8 X 3/4
45	1-633545	2	Spacer
46	3256-55	2	Washer
47	321-6	2	Screw-HH 1/4-20 X 1
48	3296-42	2	Nut-Nyloc 1/4-20
49	323-53	2	Screw-HH 3/8-16 X 1 3/4

Ref.	Part Number	Qty.	Description
50	109-7301	1	ASM,Hood Dump
53	3256-61	8	Washer
54	3250-27	8	Screw-PPH #10-24 X 7/8
55	3296-2	8	Nut-Nyloc #10-24
57	1-513658	2	Bumper
58	103-0439	1	Seal-Tube
59	103-0378	2	Clamp-Seal

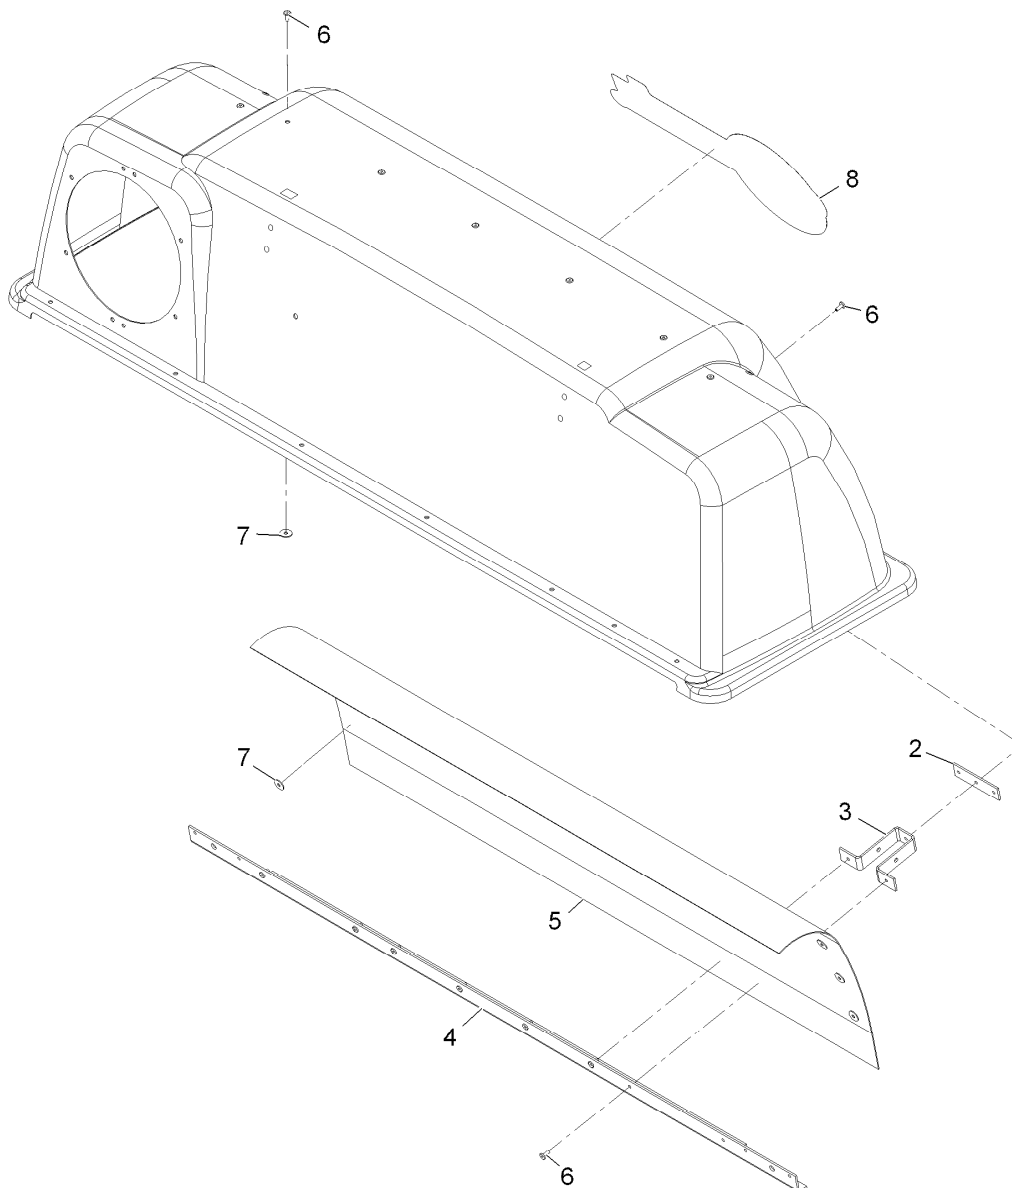

Hood Assembly No. 109-7301

Ref.	Part Number	Qty.	Description
2	103-0376	2	Plate-Latch, Reinforcement
3	103-0379	2	Bracket-Mount
4	103-2662-03	1	Support-Screen
5	103-0440	1	Screen-Bagger
6	114439	33	Rivet-Pop
7	3256-61	15	Washer-Flat
8	103-0438	1	Decal, Exmark

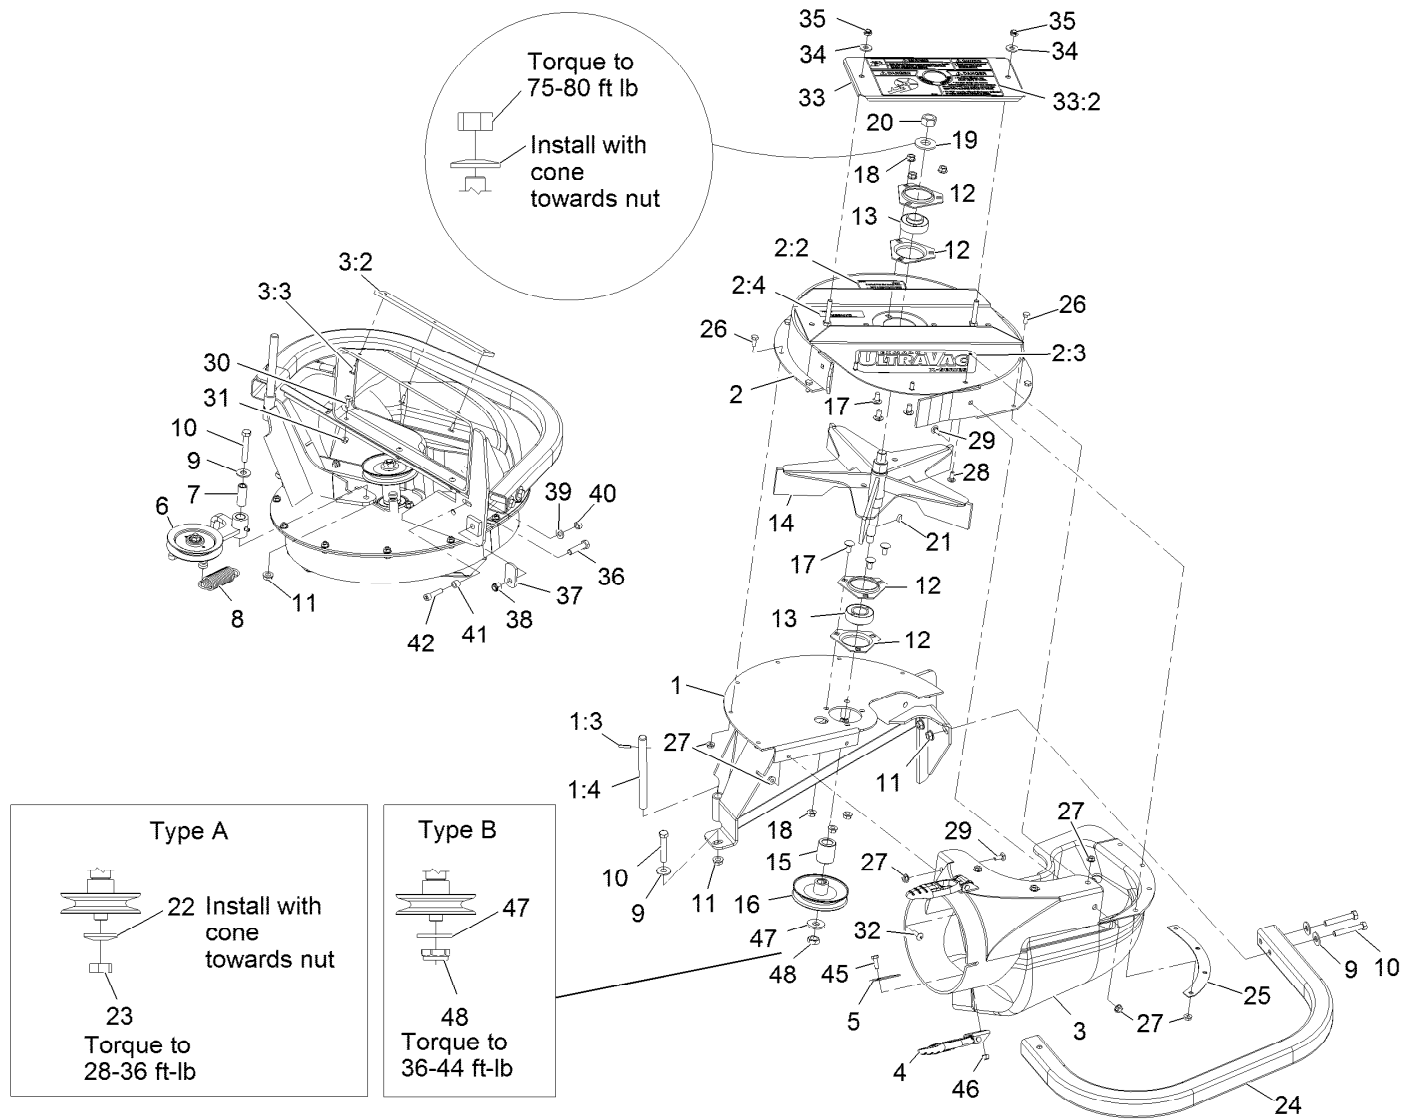

Blower Assembly No. 109-9836

Ref.	Part Number	Qty.	Description
1	109-8885-03	1	Wld,Frame Lg Blower
1:3	1-806323	1	Rollpin 3/16 X 7/8
1:4	1-353050	1	Shaft-Catcher, Grass
2	116-4816	1	ASM-Upper Housing Large
2:2	103-6607	1	Decal,Weight
2:3	116-4788	1	Decal-Ultra Vac X-Series
2:4	98-5954	1	Decal-Cover, Missing
3	109-2954	1	ASM,Blower Chute Lz
3:2	103-4751-03	1	Plate,Reinforcement Large
3:3	114439	3	Rivet
4	103-2898	2	Latch-Rubber ▲
5	103-3093	2	Plate-Backing
6		1	ASM, Idler ●
7	1-603044	1	Bushing
8	1-653331	1	Spring
9	3256-4	4	Washer-3/8 Std
10	323-11	4	Screw-HH 3/8-16 X 2 1/4


Ref.	Part Number	Qty.	Description
11	3290-357	4	Nut-Whizlock 3/8-16
12	1-513013	4	Housing-Flange
13	1-653346	2	Bearing ♦
14	103-0455	1	Impeller
15	103-0460	1	Spacer
16	103-0456	1	Sheave-Blower ♦
17	3230-18	6	Bolt-Carriage 5/16-18 X 5/8
18	32128-20	6	Nut-Whizlock 5/16-18
19	1-513208	1	Washer-Spring Disc 5/8
20	3219-6	1	Nut-Hex 5/8-18
21	3257-32	1	Key-Woodruff 3/16 X 5/8
22	1-513435	1	Washer-Spring Disc 1/2
23	3220-5	1	Nut-Jam 1/2-20 ■
24	103-0458-01	1	Bumper
25	103-0461-03	1	Plate-Backing, Blower
26	321-3	10	Screw-HH 1/4-20 X 5/8
27	32128-33	17	Nut-Whizlock 1/4-20

● Not serviced separately

■ Use Pro-Lock retaining type, Part no. 1-840023 (.5cc tube) on threads.

▲ Kit No. 103-4143 - Contains catch, rubber latch, and mounting hardware

♦ Apply Mobil HTS grease (P/N 103-5217 1.5 oz packet) (or a food-grade anti-seize). See operator s manual for locations.

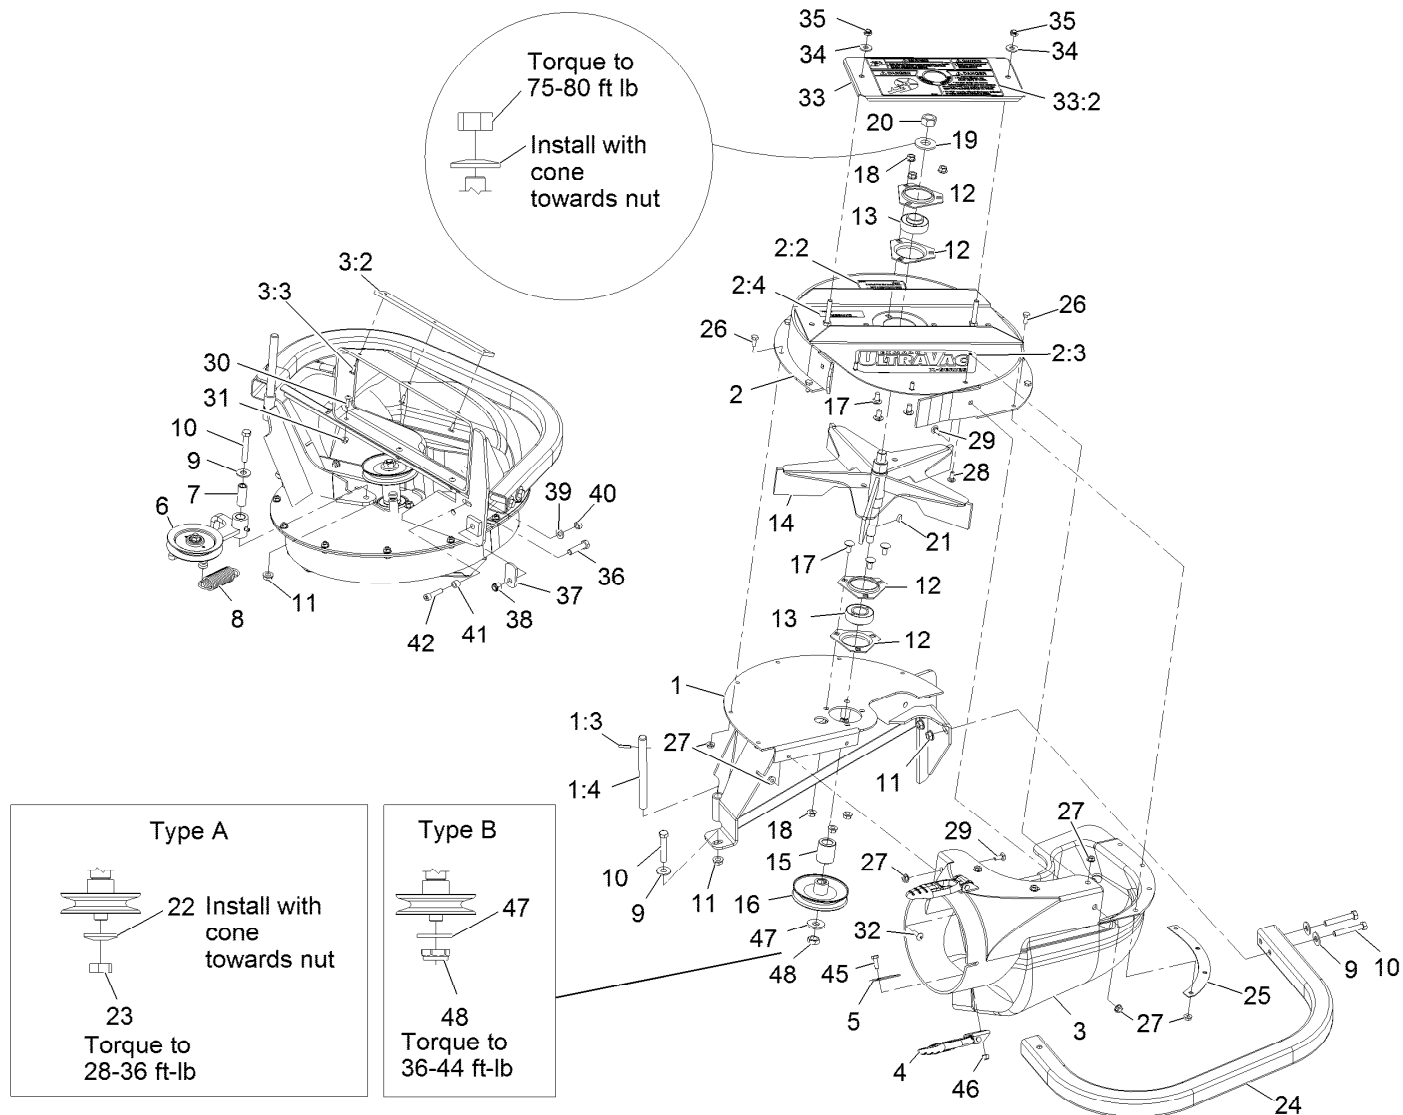

Blower Assembly No. 109-9836 (continued)

Ref.	Part Number	Qty.	Description
28	3229-11	3	Bolt-Carriage 1/4-20 X 5/8
29	3229-1	2	Bolt-Carriage 1/4-20 X 3/4
30	1-803075	3	Screw-Truss Head #10-24 X 3/4
31	3290-148	3	Nut-Whizlock #10-24
32	1-803076	2	Screw-PPH 1/4-20 X 3/4
33	103-3584-03	1	Cover, Bearing
33	103-3583	1	ASM, Bearing Cover
33:2	109-5890	1	Decal- Blower Warning
34	3256-3	2	Washer-5/16 Std
35	3296-47	2	Nut-Nyloc 5/16-18 Thin


Ref.	Part Number	Qty.	Description
36	323-8	1	Screw-HH 3/8-16 X 1 1/2
37	1-353054	1	Latch-Catcher, Grass
38	3296-39	1	Nut-Nyloc 3/8-16
39	1-303334	1	Washer-Spring Disc 5/16
40	3217-6	1	Nut-Hex 5/16-18
41	103-0126	1	Bushing
42	3274-18	1	Screw-Sh 5/16-18 X 1 1/4
45	321-4	2	Screw-HH 1/4-20 X 3/4
46	3296-42	2	Nut-Nyloc 1/4-20
47	3256-26	1	Washer-1/2 Sae
48	3296-28	1	Nut-Lock, NI

● Not serviced separately

■ Use Pro-Lock retaining type, Part no. 1-840023 (.5cc tube) on threads.


▲ Kit No. 103-4143 - Contains catch, rubber latch, and mounting hardware

◆ Apply Mobil HTS grease (P/N 103-5217 1.5 oz packet) (or a food-grade anti-seize). See operator s manual for locations.

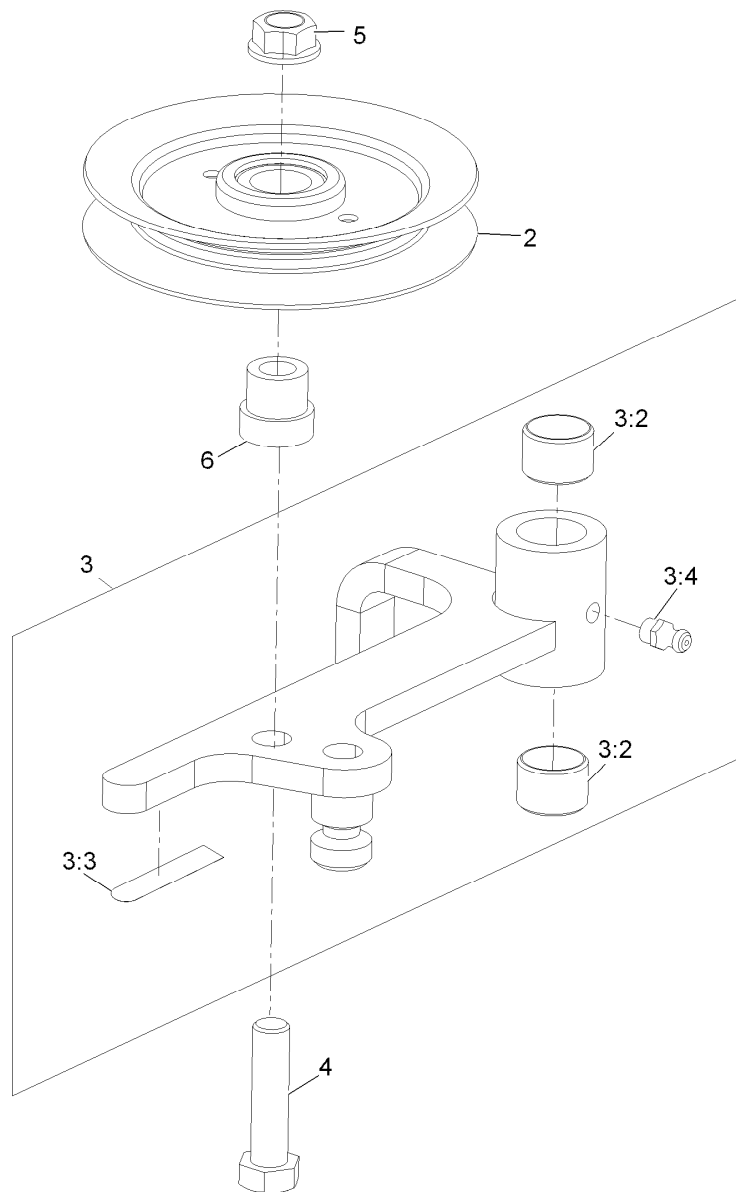

Idler Assembly


Ref.	Part Number	Qty.	Description
2	103-0483	1	Idler
3	103-0448	1	ASM, Idler Arm - Service Only
3:2	1-653600	2	Bearing
3:3	1-653558	1	Decal-Hot Sheave
3:4	302-19	1	Zerk-1/4-28 Str
4	323-8	1	Screw-HH 3/8-16 X 1 1/2
5	3290-357	1	Nut-Whizlock 3/8-16
6	1-653367	1	Hub,Spacer

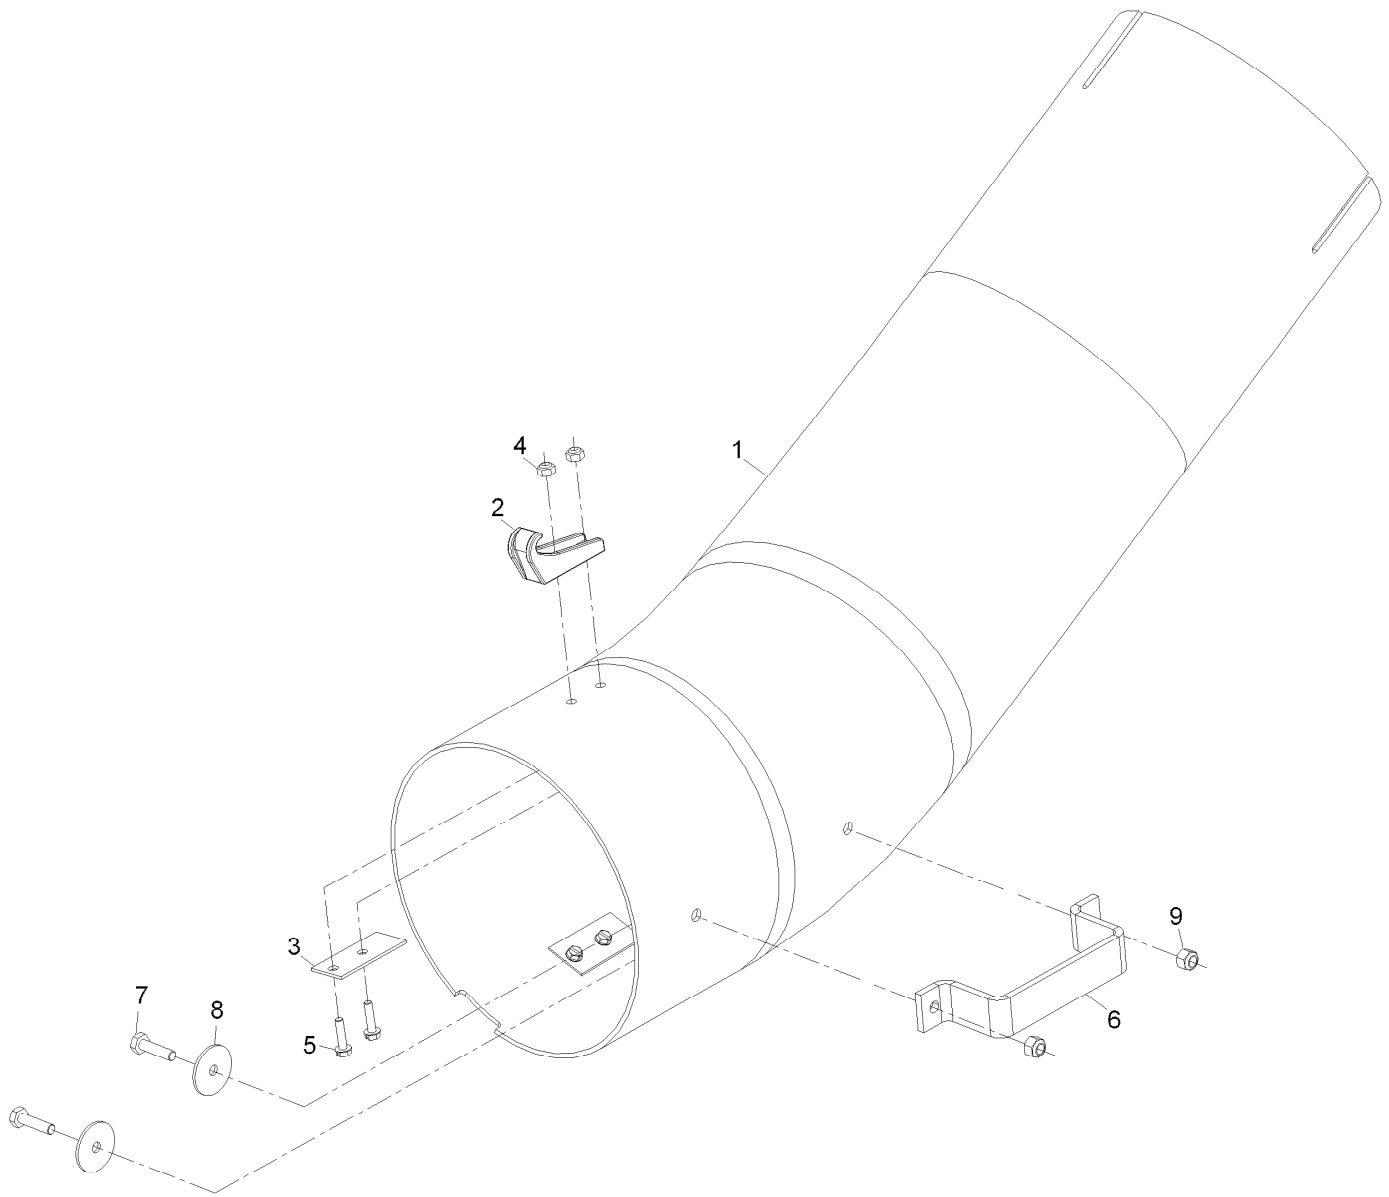

Lower Tube Assembly No. 109-1973


Ref.	Part Number	Qty.	Description
1	109-1974	1	Lower Tube Kit
2	103-2897	2	Latch-Catch ●
3	103-3079	2	Plate-Backing
4	3296-2	4	Nut-Nyloc #10-24
5	32105-13	4	Screw-HWH #10-24 X 3/4
6	1-353005-03	1	Handle
7	321-6	2	Screw-HH 1/4-20 X 1
8	3256-55	2	Washer
9	3296-42	2	Nut-Nyloc 1/4-20

● Kit No. 103-4143 - Contains catch, rubber latch, and mounting hardware

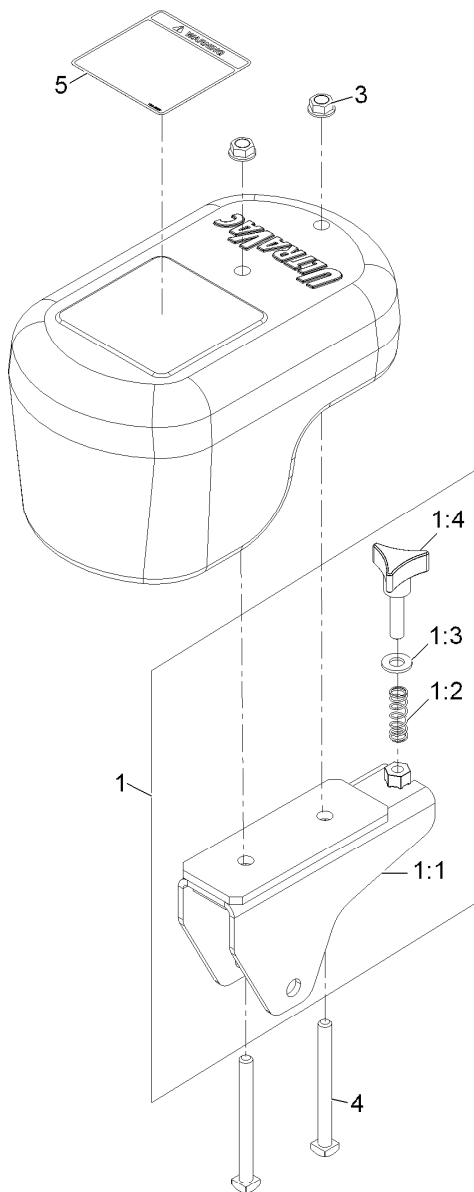


Caster Weight Assembly No. 109-8461

Ref.	Part Number	Qty.	Description
1	109-8460	1	ASM,Caster Weight Bracket
1:1	109-7711-01	1	Wld,Caster Weight Bracket
1:2	103-2188	1	Spring
1:3	3256-24	1	Washer-Flat
1:4	103-2187	1	Knob
3	3290-357	2	Nut-Whizlock 3/8-16
4	103-2189	2	Bolt-Square Hd 3/8-16 X 4
5	103-6607	1	Decal,Weight

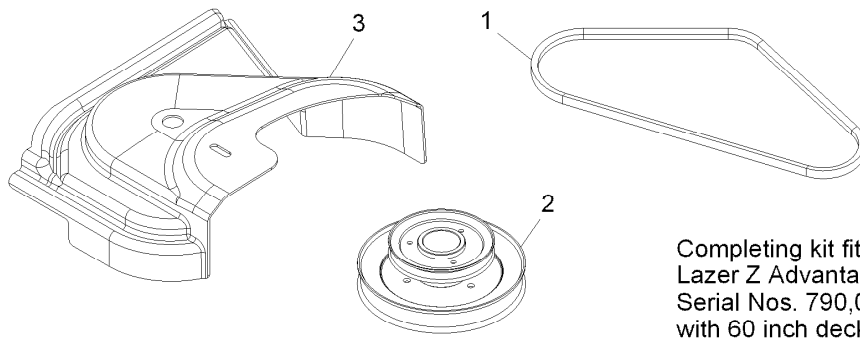


Completing kit fits all
Lazer Z Advantage Series (LZAS)
Serial Nos. 790,000-919,999
with 60 inch decks

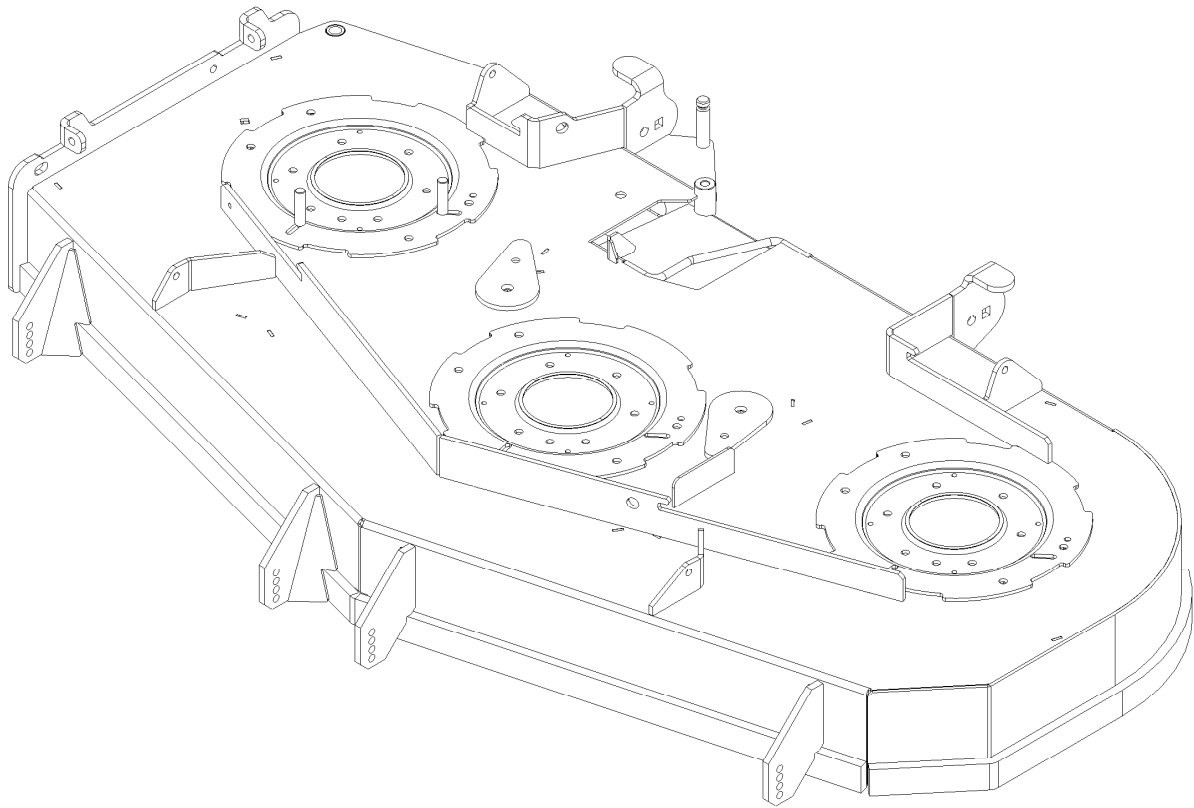


Completing Kit No. 109-9626

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	103-0866	1	Belt, Blower Drive 60
2	109-9634	1	Jackshaft,Uv Drive 604
3	109-9381	1	Cover,Belt Uv 60

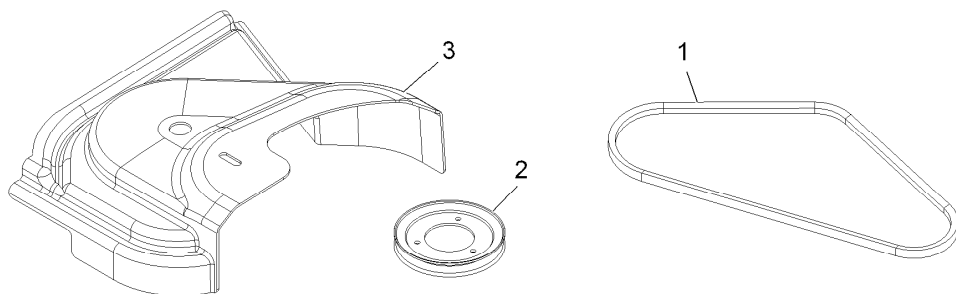


Completing kit fits all Lazer Z (LZZ)
Serial Nos. 790,000-919,999
and Lazer Z X-Series (LZX) Serial Nos.
920,000 and Higher with 60 inch decks

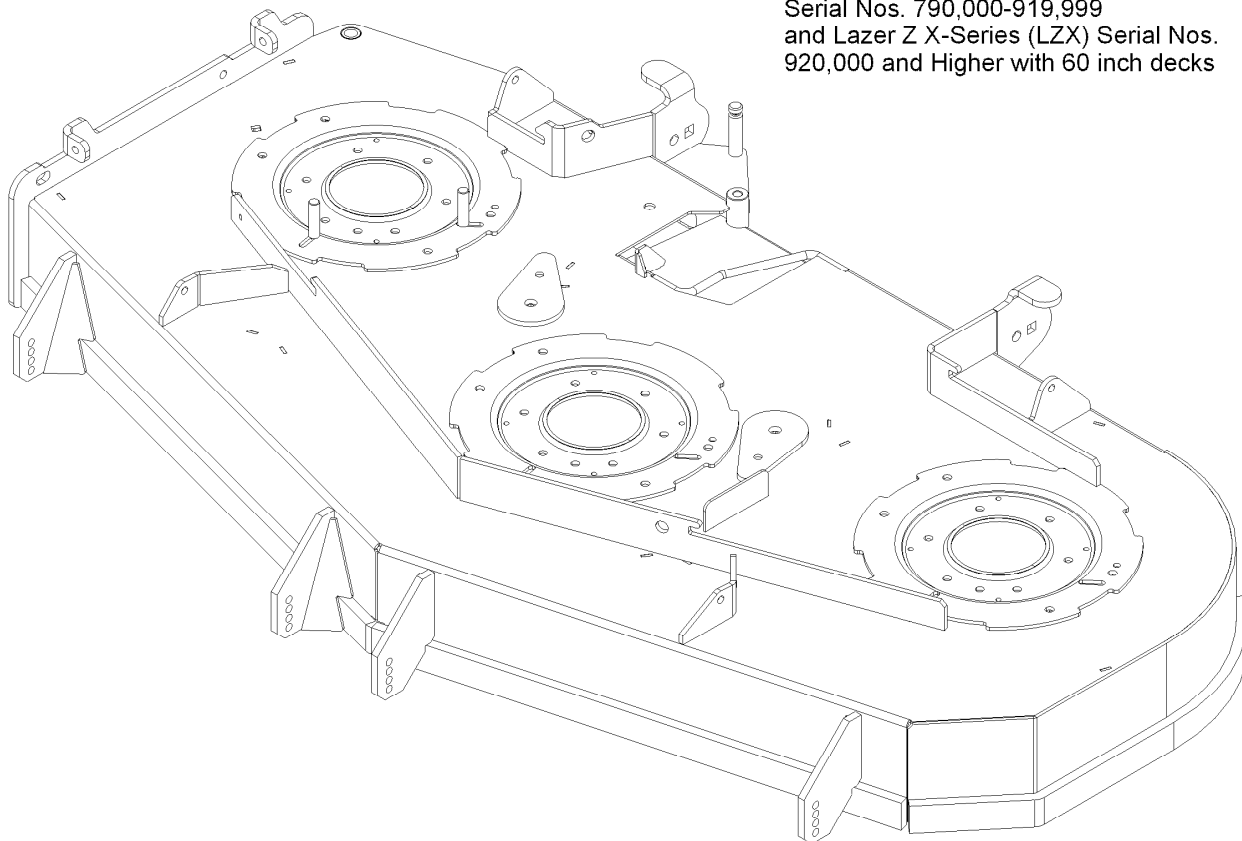


Completing Kit No. 109-9627

Ref.	Part Number	Qty.	Description
1	103-0866	1	Belt, Blower Drive 60
2	109-9635	1	Sheave, Drive Lzuv 606
3	109-9381	1	Cover, Belt Uv 60

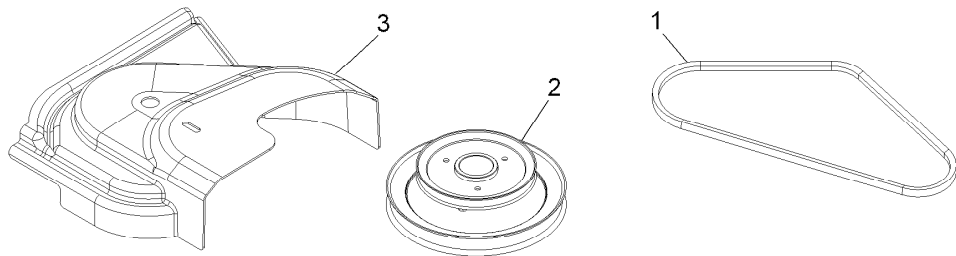


Completing kit fits all
Lazer Z Advantage Series (LZAS)
Serial Nos. 790,000-919,999
with 72 inch decks

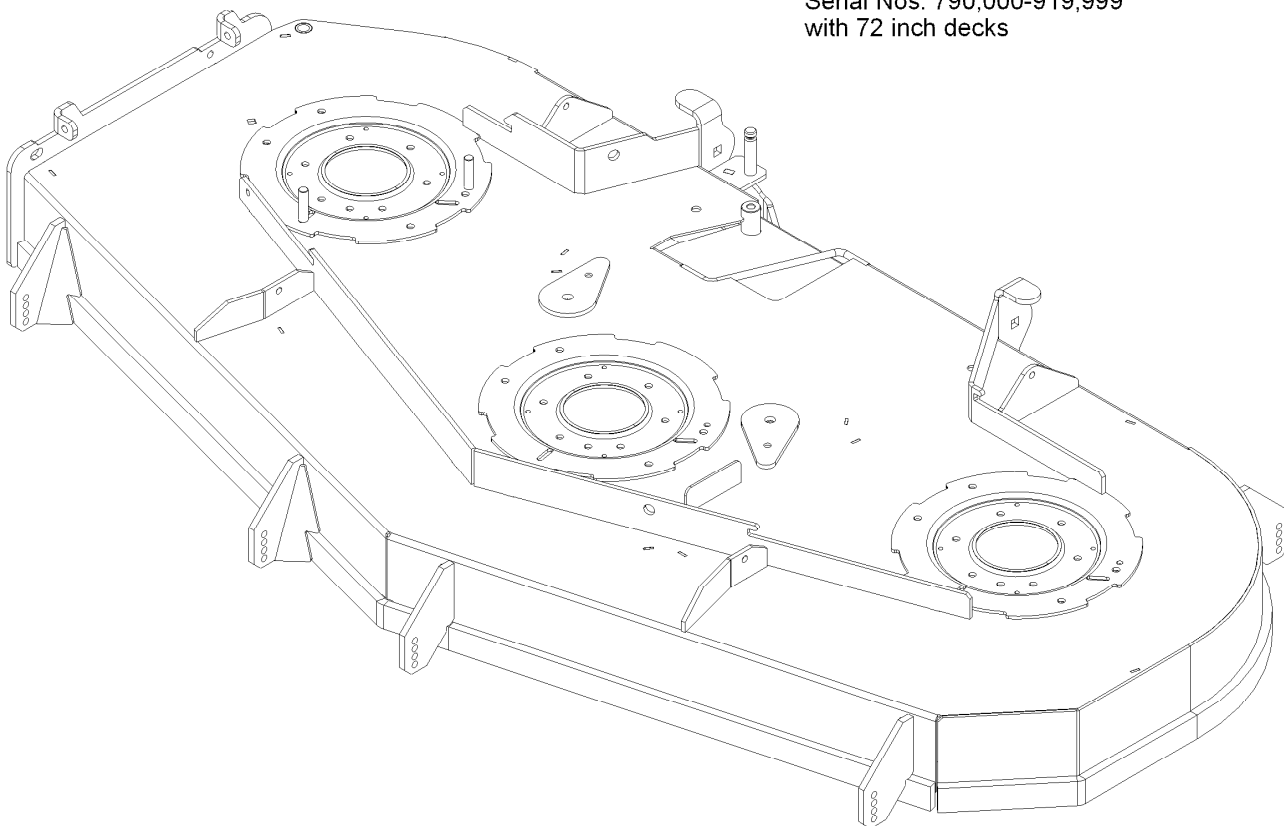


Completing Kit No. 109-9628

Ref.	Part Number	Qty.	Description
1	103-0867	1	Belt, Blower Drive 72
2	109-9636	1	Jackshaft,Uv Drive 724
3	109-8473	1	Cover,Belt Uv 72

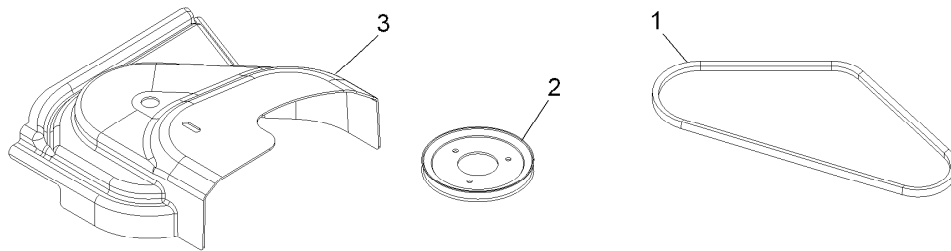


Completing kit fits all Lazer Z (LZZ)
Serial Nos. 790,000-919,999
and Lazer Z X-Series (LZX) Serial Nos.
920,000 and Higher with 72 inch decks

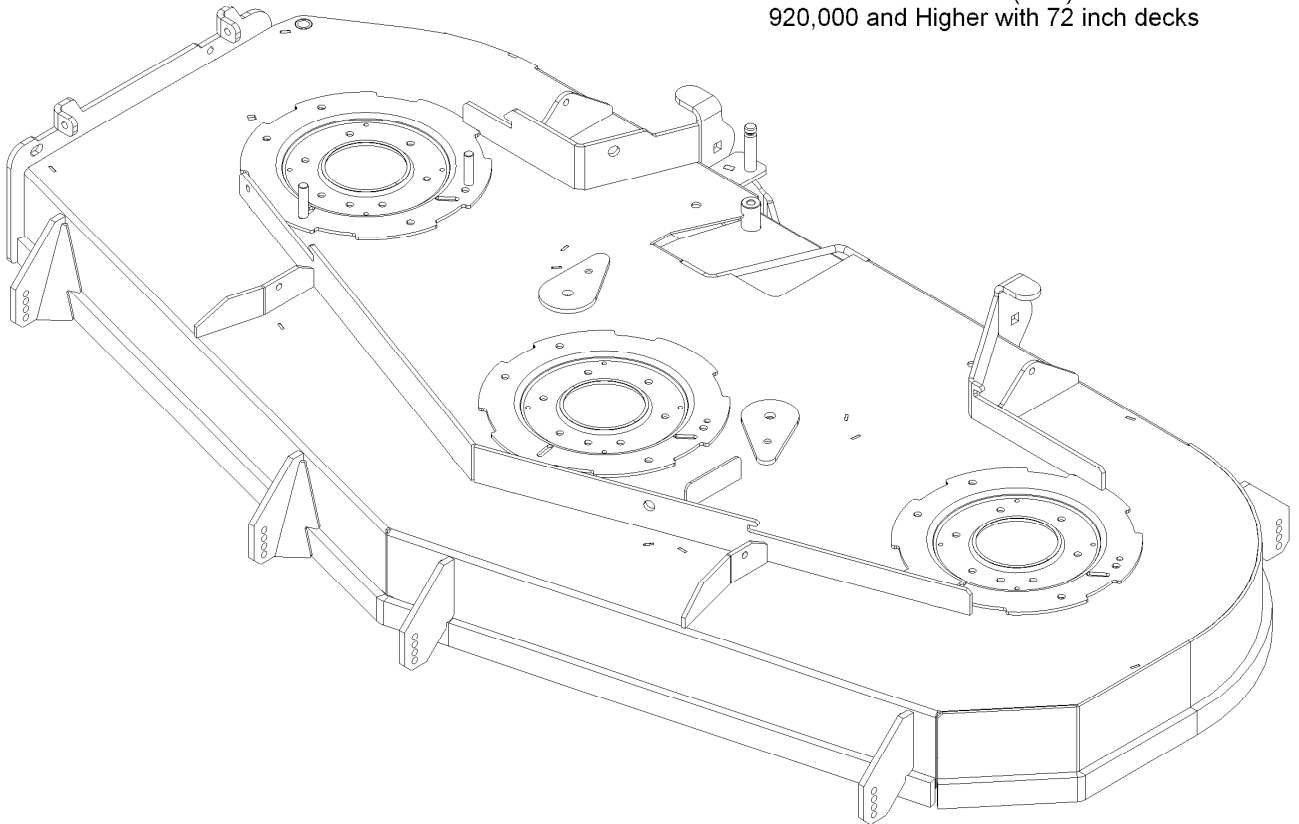


Completing Kit No. 109-9629

Ref.	Part Number	Qty.	Description
1	103-0867	1	Belt, Blower Drive 72
2	109-9637	1	Sheave, Drive Lzuv 726
3	109-8473	1	Cover, Belt Uv 72

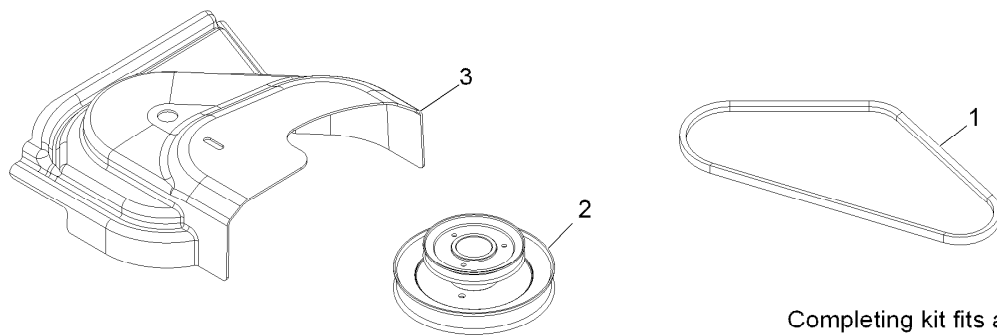


Completing kit fits all
Lazer Z Advantage Series (LZA)
Serial Nos. 850,000-919,999 and
Lazer Z E-Series (LZE) and
Lazer Z S-Series (LZS) Serial Nos.
920,000 and Higher with 60 inch decks

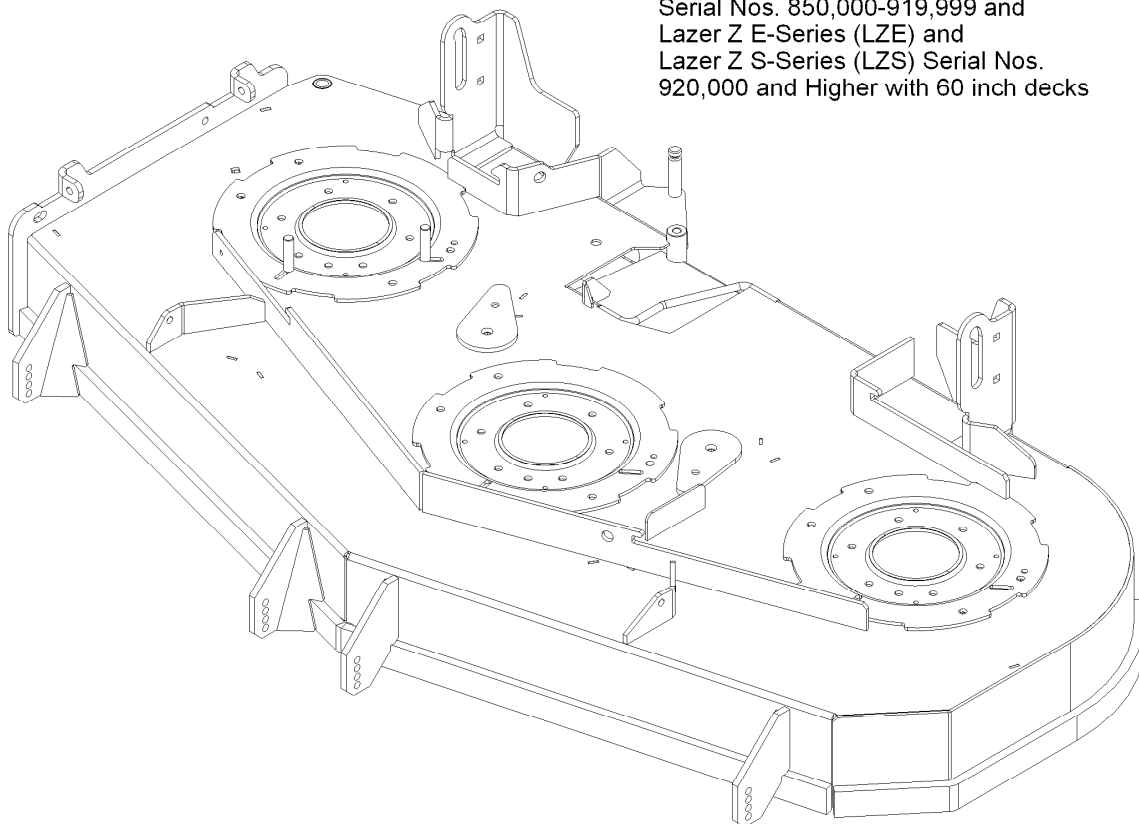


Completing Kit No. 116-2086

Ref.	Part Number	Qty.	Description
1	103-0866	1	Belt, Blower Drive 60
2	116-2090	1	Jackshaft,Uv Drive 604 Splined
3	109-9381	1	Cover,Belt Uv 60

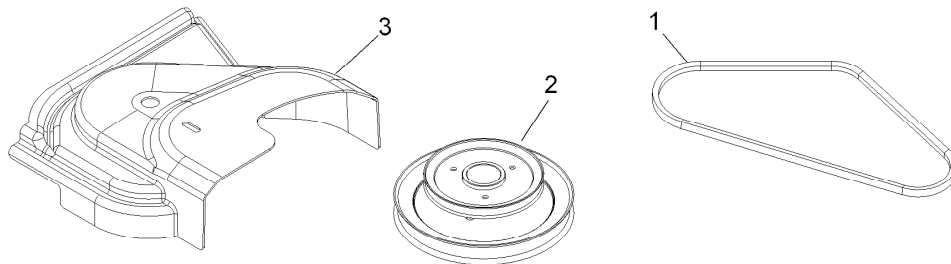

Completing kit fits all
Lazer Z S-Series (LZS)
Serial Nos. 920,000 and Higher
with 72 inch decks

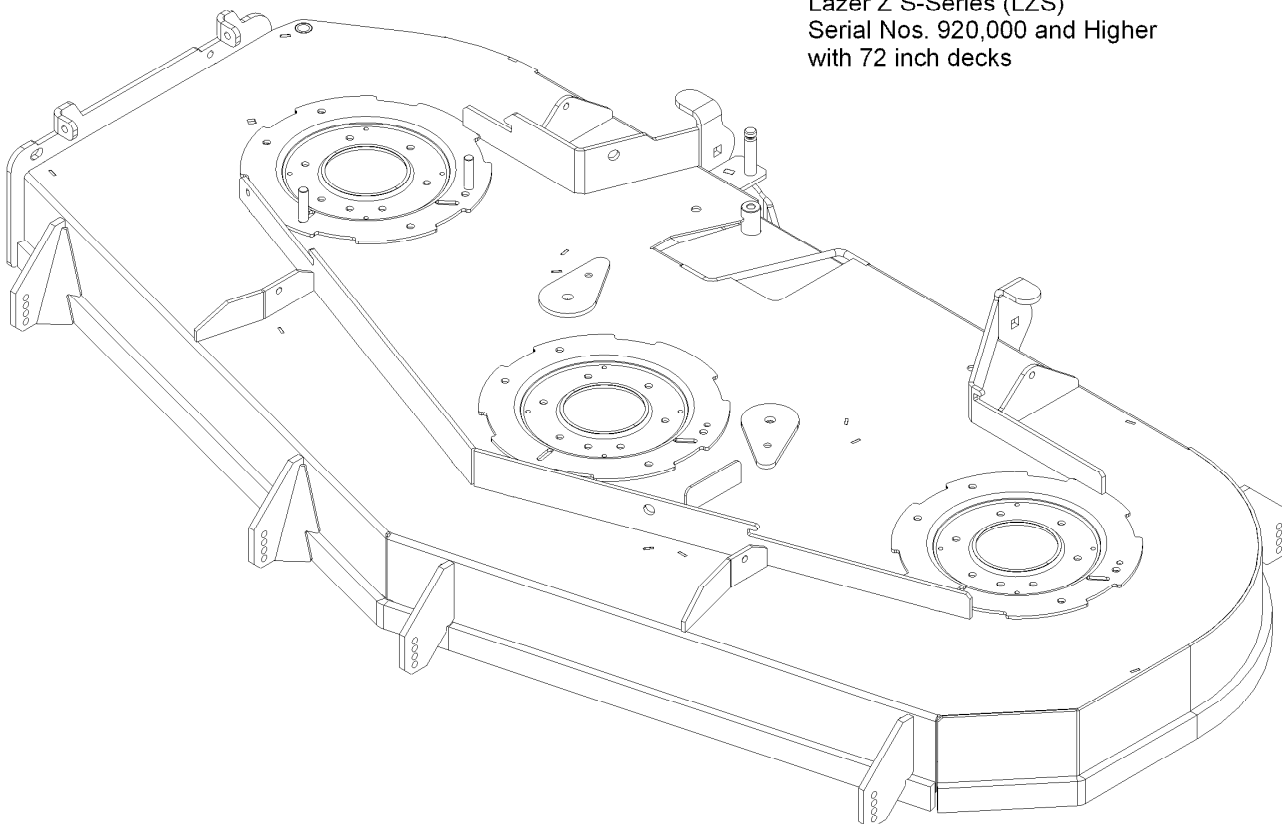

Completing Kit No. 116-2087

Ref.	Part Number	Qty.	Description
1	103-0867	1	Belt, Blower Drive 72
2	116-2091	1	Jackshaft,Uv Drive 724 Splined
3	109-8473	1	Cover,Belt Uv 72

Notes:

EXMARK ACCESSORIES AND OPTIONS*

MID-MOUNT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	OPERATOR CONTROLLED DISCHARGE
FULL SUSPENSION SEAT	SUN SHADE
DECK LIFT ASSIST KIT	TRASH CONTAINER
HITCH KIT	TURF STRIPER
LIGHT KIT	ULTRA VAC COLLECTION SYSTEM
12V POWER PORT	ULTRA VAC QUICK DISPOSAL SYSTEM
MICRO-MULCH SYSTEM	

OUT-FRONT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	SNOW BLADE
DUAL-TAIL WHEEL	SNOWBLOWER
FLOOR PAN EXTENDER	SUN SHADE
HITCH KIT	TRASH CONTAINER
LIGHT KIT	ULTRA VAC COLLECTION SYSTEM
MICRO-MULCH SYSTEM	ULTRA VAC QUICK DISPOSAL SYSTEM
ROLL OVER PROTECTION SYSTEM (ROPS)	WEATHER CAB

WALK-BEHIND ACCESSORIES AND OPTIONS

GRASS CATCHER	TURF STRIPER
MICRO-MULCH SYSTEM	STANDON

*Some accessories and options not available for some models.

Place Model No. and Serial No.
Label Here (Included in the Literature
Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____

© 2012 Exmark Mfg. Co., Inc.
Industrial Park Box 808
Beatrice, NE 68310
All Rights Reserved

Part No. 4501-062 Rev. A
(402) 223-6300
Fax (402) 223-5489
Printed in the USA.

