




STAND-ON AERATOR

Model No. SAR481KA30—Serial No. 312000000 and Up

Picture below may not reflect actual product.

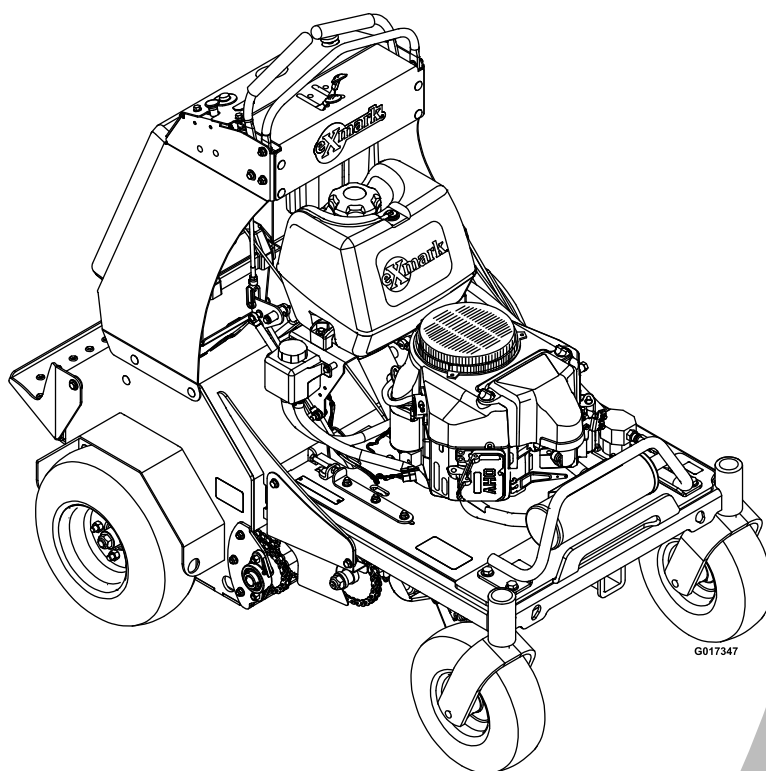

Parts Manual

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required	HJ: hex jam	PTH: phillips truss head
ASM: assembly	HLH: hex lag head	PTO: power-take-off
BBC: blade brake control	HOC: height-of-cut	RH: right hand
BHTF: button head thread forming	HSBH: hex socket button head	ROPS: roll-over protection system
CARR: carriage	HSFH: hex socket flat head	RRB: rear roller brush
CCW: counter clockwise	HSH: hex socket head	SFH: slotted fillister head
CW: clockwise	HWH: hex washer head	SHH: slotted hex head
DEG: degrees	HWHTF: hex washer head thread forming	SHWH: slotted hex washer head
DPA: Dual Point Adjustment	HYD: hydraulic	SPH: slotted pan head
ECM: electronic control module	LH: left hand	SQH: square head
EXT: external	LPG: Liquid Propane Gas	SRH: slotted round head
FH: flat head	NI: nylon insert	STD: standard
GA: gauge	NPTF: national pipe thread fine	TAP: self tapping
HD: heavy-duty	PFH: phillips flat head	TTH: torx truss head
HF: hex flange	PPH: phillips pan head	
HH: hex head	PPHTF: phillips pan head thread forming	
HHF: hex head flange	PRH: phillips round head	
HHFTF: hex head flange thread forming		

Touch Up Paint

Exmark black touch up spray paint – gloss black.


Exmark red touch up paint (spray paint – P/N 1-850337 - .6 oz liquid bottle – P/N 103-9140).



If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE Guaranteed!! (Some restrictions apply. See your participating Exmark Dealer for details.)

Contents

Main Frame Assembly	4
Main Frame W/Decals Assembly No. 116-6938	5
Caster Wheel and Fork Assembly	6
Tower Assembly	7
Motion Controls Assembly	8
Ground Drive Assembly	9
LH and RH Transaxle Assembly Nos. 116-6614 and 116-6615	11
Axle and Bearing Assembly No. 116-7645	12
Auxiliary Hydraulic Assembly	13
Tine Assembly	15
RH Tine Wheel Assembly No. 116-6738	16
LH Tine Wheel Assembly No. 116-6739	17
Fuel Assembly	18
Engine Assembly	19
Electrical Assembly	20

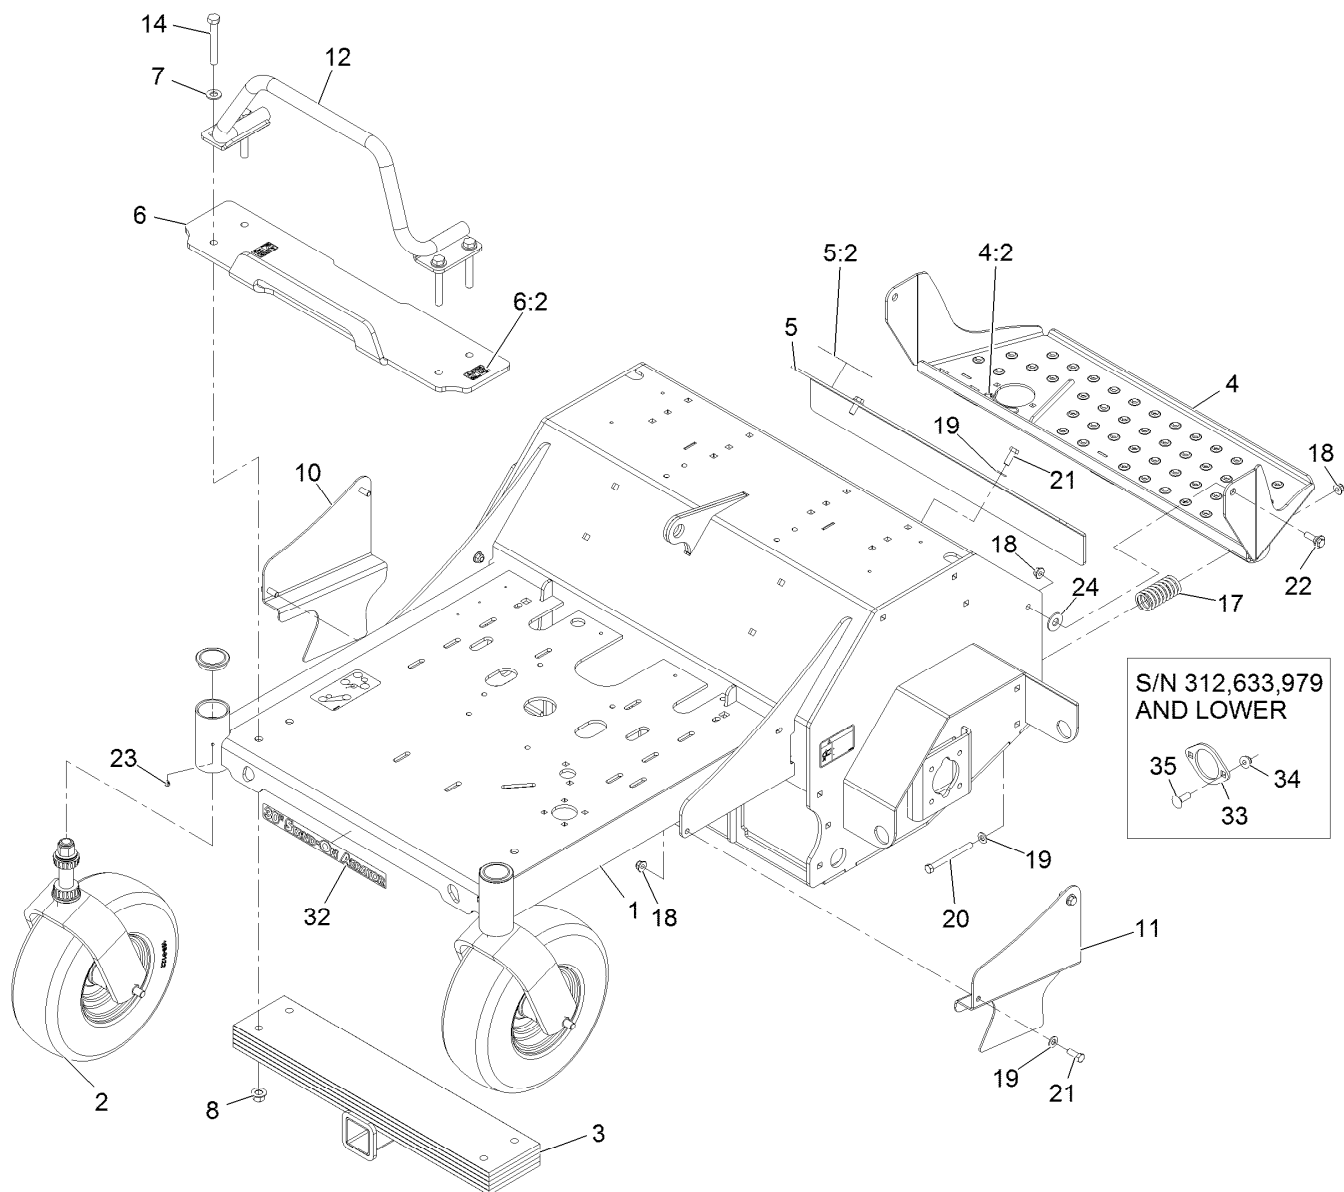


Main Frame Assembly

Ref.	Part Number	Qty.	Description
1	116-6938	1	Main Frame And Decal ASM
2		2	Front Caster ASM W/Fork ●
3	116-6536-01	1	Weight
4	116-6940	1	Platform ASM W/Decals
4:2	116-6460	1	Decal-Tine Ground Engagement
5	116-6939	1	Access Cover ASM
5:2	116-6459	1	Decal-Tine Ground Operation
6	116-6968	1	Weight Mount Plate ASM
6:2	103-2076	2	Decal-Caution
7	3256-26	4	Washer-1/2 Sae
8	99-5107	4	Nut-Lock 1/2-13
10	116-6612-01	1	Guard-Chain, RH
11	116-6611-01	1	Guard-Chain, LH


Ref.	Part Number	Qty.	Description
12	116-6763-03	1	Guard-Muffler
14	325-14	4	Screw-HH 1/2-13 X 3 1/2
17	116-6767	3	Spring-Compression
18	104-8301	9	Nut-Nyloc 3/8-16 Flg
19	3256-24	9	Washer-3/8 Sae
20	323-16	3	Screw-HH 3/8-16 X 4
21	323-6	6	Screw-HH 3/8-16 X 1
22	614672	2	Screw-Shoulder 3/8-16 X 1.295
23	1-811010	2	Plug
24	3256-6	2	Washer
32	116-6952	1	Decal-Stand-On Aerator 30
33	116-6605	3	Retainer-Spring
34	104-7201	6	Nut-Nyloc 1/4-20 Flg
35	3229-1	6	Bolt-Carriage 1/4-20 X 3/4

● Not serviced separately

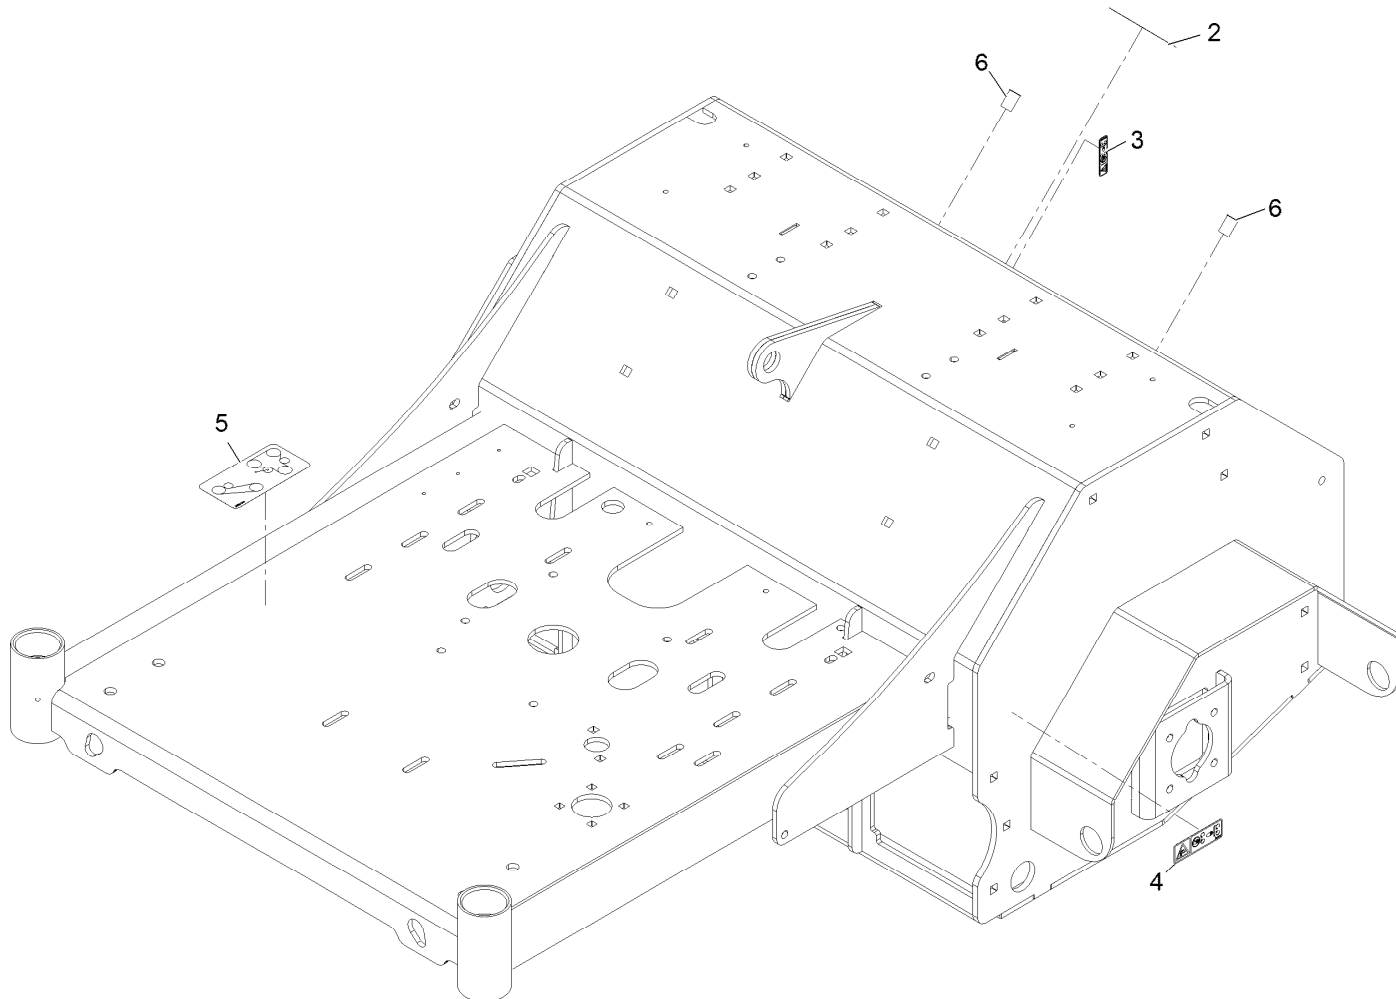

Main Frame W/Decals Assembly No. 116-6938

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	116-6455	1	Decal-Danger Rotating Tines
3	98-5954	1	Decal-Cover, Missing
4	116-6456	2	Decal-Danger Chain Drive
5	116-6462	1	Decal-Belt Routing
6	32148-10	2	Insert-Nut

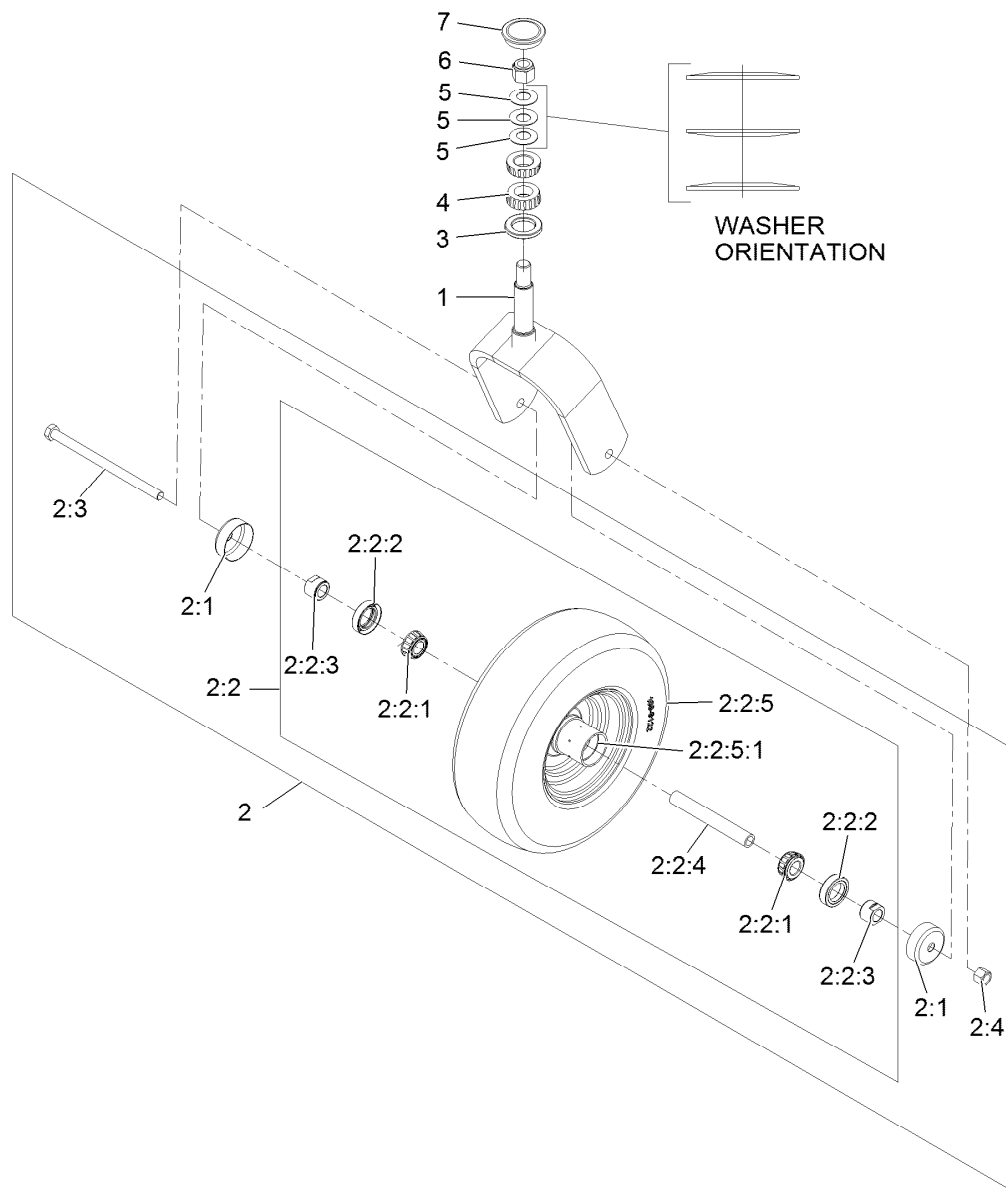


Caster Wheel and Fork Assembly

Ref.	Part Number	Qty.	Description
1	116-1963-01	1	Caster
2	109-9126	1	Wheel And Tire ASM
2:1	103-2768	2	Guard-Seal
2:2		1	Wheel And Tire ASM ●
2:2:1	1-633585	2	Bearing-Cone Tapered Roller
2:2:2	103-0063	2	Seal-Double Lip
2:2:3	103-3051	2	Spacer-Nut ■
2:2:4	103-3155	1	Axle-Caster
2:2:5		1	Wheel And Tire ASM ●

Ref.	Part Number	Qty.	Description
2:2:5:1	1-633584	1	Bearing-Cup
2:3	325-42	1	Screw-HH 1/2-13 X 8
2:4	3296-23	1	Nut-Nyloc 1/2-13
3	1-543511	1	Seal-Grease
4	1-543509	2	Cone-Bearing Tapered Roller
5	1-633508	3	Washer-Spring Disc
6	3296-51	1	Nut-Nyloc 3/4-10
7	103-4882	1	Cap-Grease

● Not serviced separately


■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

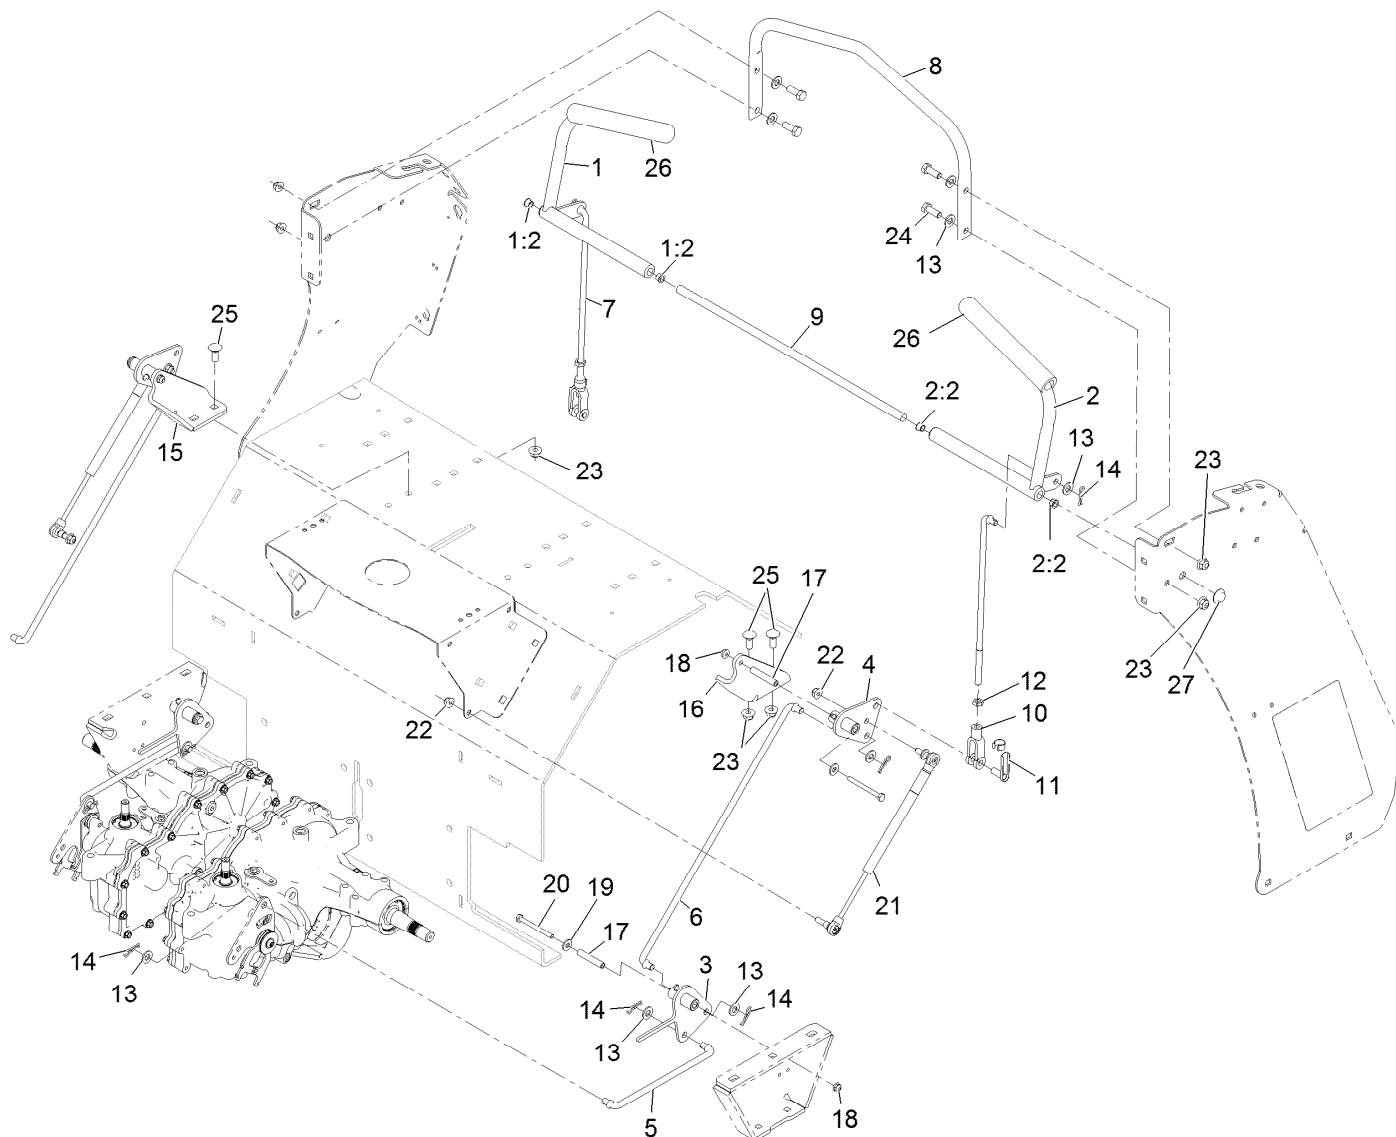

Motion Controls Assembly


Ref.	Part Number	Qty.	Description
1	116-6567	1	Control Handle-ASM, RH
1:2	116-4279	2	Bearing-Flange
2	116-6566	1	Control Handle-ASM, LH
2:2	116-4279	2	Bearing-Flange
3	116-6573-03	2	Bellcrank-W/ Arm [black]
4	116-6617-03	2	Bellcrank-W/Arm [black]
5	116-6722	2	Link-Hydro Control
6	116-6726	2	Link-Bellcrank Control
7	116-6730	2	Link-Bellcrank Control
8	116-6608-03	1	Bar-Reference
9	116-6607	1	Shaft-Control Pivot
10	1-633131	2	Yoke-Linkage, Brake
11	103-2399	2	Pin-Clevis Spring 3/8
12	3219-3	2	Nut-Hex 3/8-24
13	3256-24	14	Washer-3/8 Sae

Ref.	Part Number	Qty.	Description
14	1-806003	10	Hairpin-Cotter
15	116-6576-03	1	Bracket-Pivot, RH
16	116-6577-03	1	Bracket-Pivot LH
17	116-7224	4	Spacer
18	104-7201	4	Nut-Nyloc 1/4-20 Flg
19	3256-2	4	Washer-1/4 Std
20	321-14	4	Screw-HH 1/4-20 X 2 3/4
21	116-0027	2	Damper-Control, Motion
22	104-8300	4	Nut-Nyloc 5/16-18 Flg
23	104-8301	8	Nut-Nyloc 3/8-16 Flg
24	323-6	4	Screw-HH 3/8-16 X 1
25	3231-2	4	Bolt-Carriage 3/8-16 X 1
26	103-8153	2	Grip,Control Lever
27	32112-14	2	Nut-Push

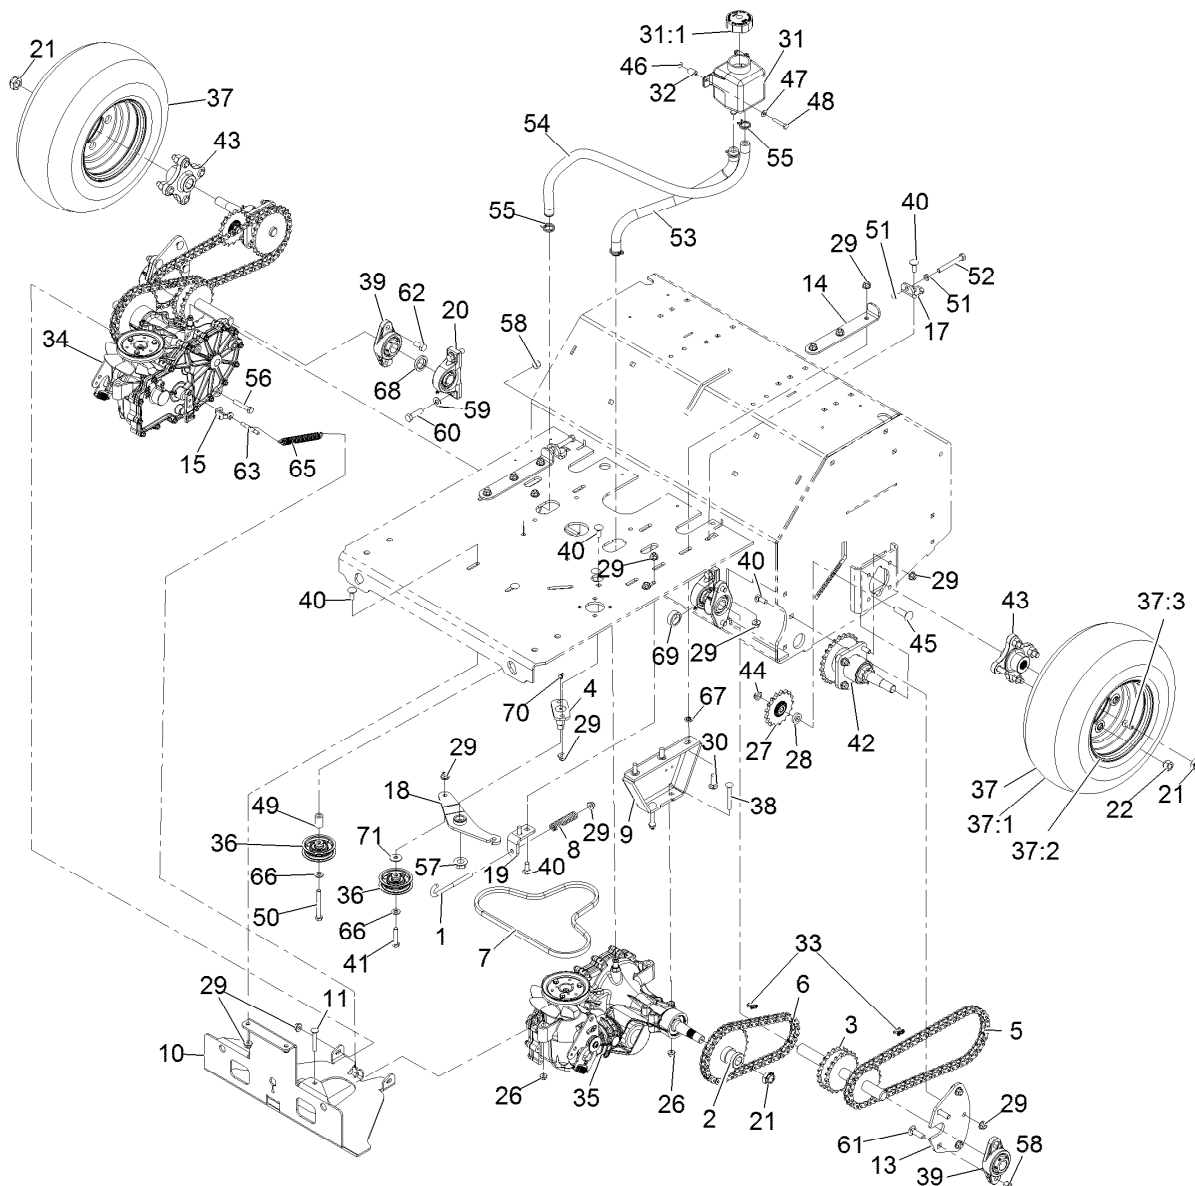


Ground Drive Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	116-6740	1	Hook-J	26	104-8300	6	Nut-Nyloc 5/16-18 Flg
2	116-6624	2	Hub-Chain Drive	27	116-6719	2	Sprocket-Idler 17T 50
3	116-6627	2	Jackshaft	28	104-8417	2	Washer
4	116-6735-03	1	Pivot-Idler [black]	29	104-8301	33	Nut-Nyloc 3/8-16 Flg
5	116-6895	2	Links-#50 Roller Chain, 65	30	3231-25	6	Bolt-Carriage 3/8-16 X 1 1/4
6	116-6896	2	Link-#50 Roller Chain, 47	31	109-2250	1	Vent-Tank, Hydro
7	1-653333	1	Belt, Blower 48"dk	31:1	109-3320	1	Cap-Reservoir, HYD
8	116-6771	1	Spring-Comp .72 X 3.00	32	49-0390	2	Spacer
9	116-6572-03	2	Mount-Transmission	33	116-6897	4	Link-#50 Connecting
10	116-7588-03	1	Guard-Transmission	34	116-6614	1	ASM-Zt3400 RH
11	3230-7	2	Bolt-Carriage 5/16-18 X 2 1/4	35	116-6615	1	ASM-Zt3400 LH
13	116-6596-01	2	Plate-Jackshaft	36	116-6760	2	Pulley-Idler Flat
14	116-6619	2	Plate-Trans Adjustment	37	116-6932	2	ASM,Tire 16X6.50-8 K500
15	116-7597	1	Yoke, Park Brake	37:1	116-6977	1	Rim 8 X 5.375
17	116-6723	2	Bracket-Hydro Adjust	37:2	116-6978	1	Tire, K500 16 X 6.50-8 4P
18	116-6568	1	Idler Arm-ASM	37:3	232-27	1	Stem-Valve
19	116-6724	1	Bracket-Idler Spring	38	3230-9	4	Bolt-Carriage 5/16-18 X 2 3/4
20	116-6756	2	Bearing,Pillow Block 1.00	39	116-6777	4	Bearing, Flange -2 Bolt
21	116-2839	4	Nut-Lock	40	3231-2	14	Bolt-Carriage 3/8-16 X 1
22	242-50	8	Nut-Lug 1/2-20	41	323-9	1	Screw-HH 3/8-16 X 1 3/4

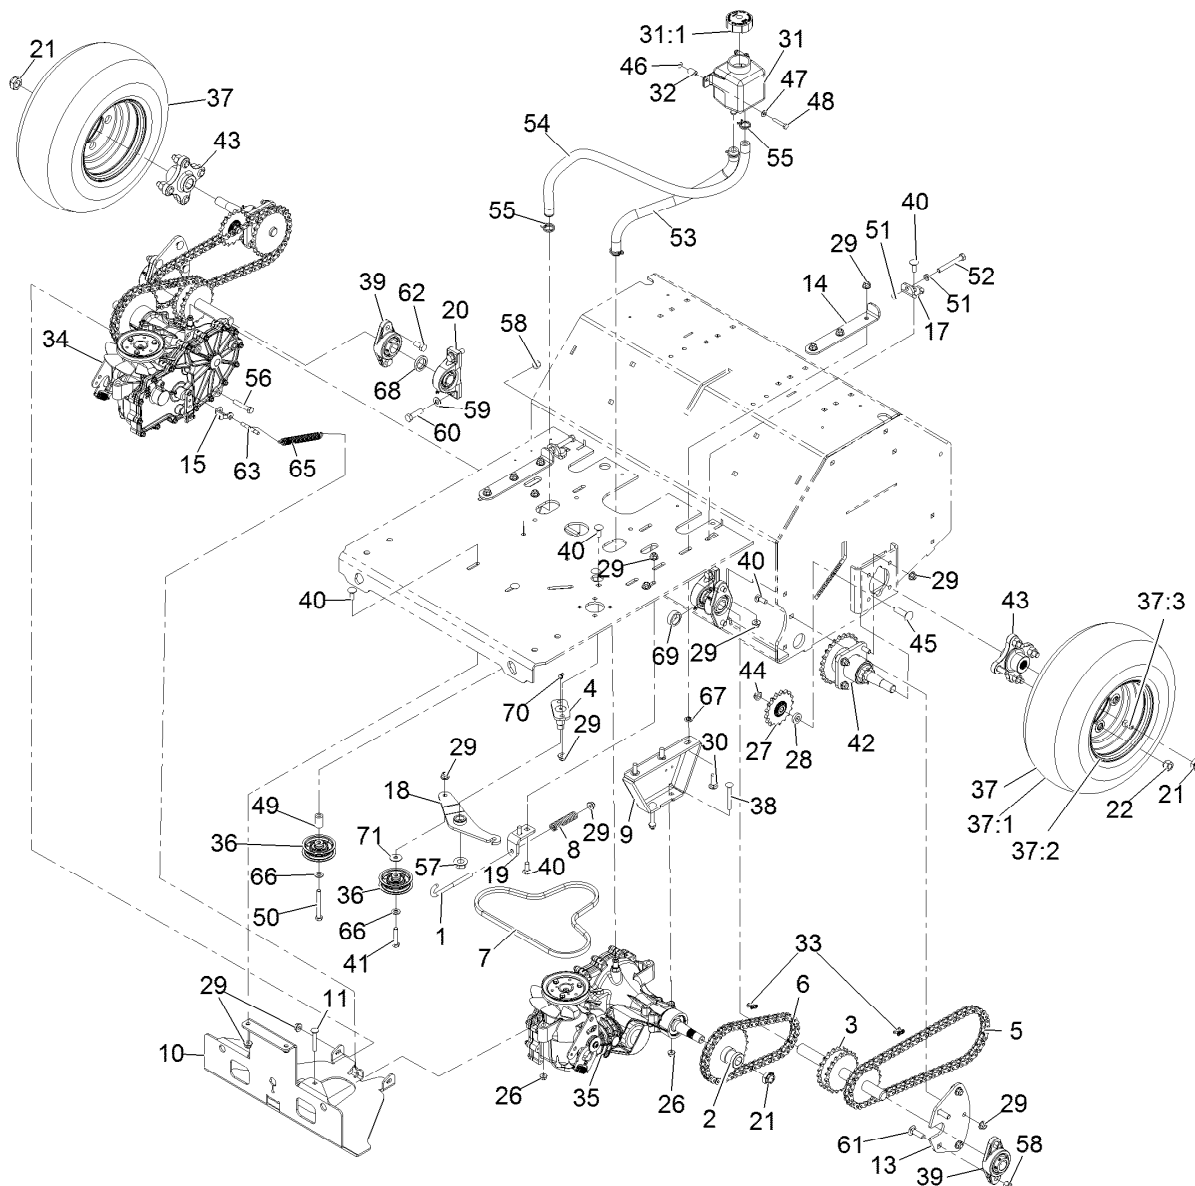

Ground Drive Assembly (continued)


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
42	116-7645	2	ASM-Axle And Bearing	58	3296-48	8	Nut-Nyloc 7/16-14
43	116-3872	2	Hub-Offset	59	3256-25	4	Washer-7/16 Sae
44	3296-45	2	Nut-Nyloc 1/2-13 Thin	60	324-6	4	Screw-HH 7/16-14 X 1 1/2
45	3233-14	2	Screw-CARR	61	3232-3	4	Bolt-Carriage 7/16-14 X 1 1/2
46	104-7201	2	Nut-Nyloc 1/4-20 Flg	62	116-7109	4	Screw-HH
47	3256-22	2	Washer-1/4 Sae	63	116-7596	1	Pin, Park Brake
48	321-9	2	Screw-HH 1/4-20 X 1 1/2	65	76-4660	1	Spring-Door
49	116-7598	1	Spacer-Idler	66	3256-24	2	Washer-3/8 Sae
50	323-14	1	Screw-HH 3/8-16 X 3	67	107-3154	6	Nut-Push 3/8-16
51	3217-7	4	Nut-Hex 3/8-16	68	116-7253	1	Spacer
52	99-8664	2	Bolt-HH 3/8-16 X 3 Tap	69	116-7254	1	Spacer
53	116-6775	1	Hose-Hydraulic	70	302-61	1	Zerk-45° 1/4-28
54	116-6776	1	Hose-Hydraulic	71	52-2860	1	Washer
55	109-3322	4	Clamp-Hose				
56	323-10	2	Screw-HH 3/8-16 X 2				
57	109-7033	1	Nut-Flange 5/8-18 Centerlock				

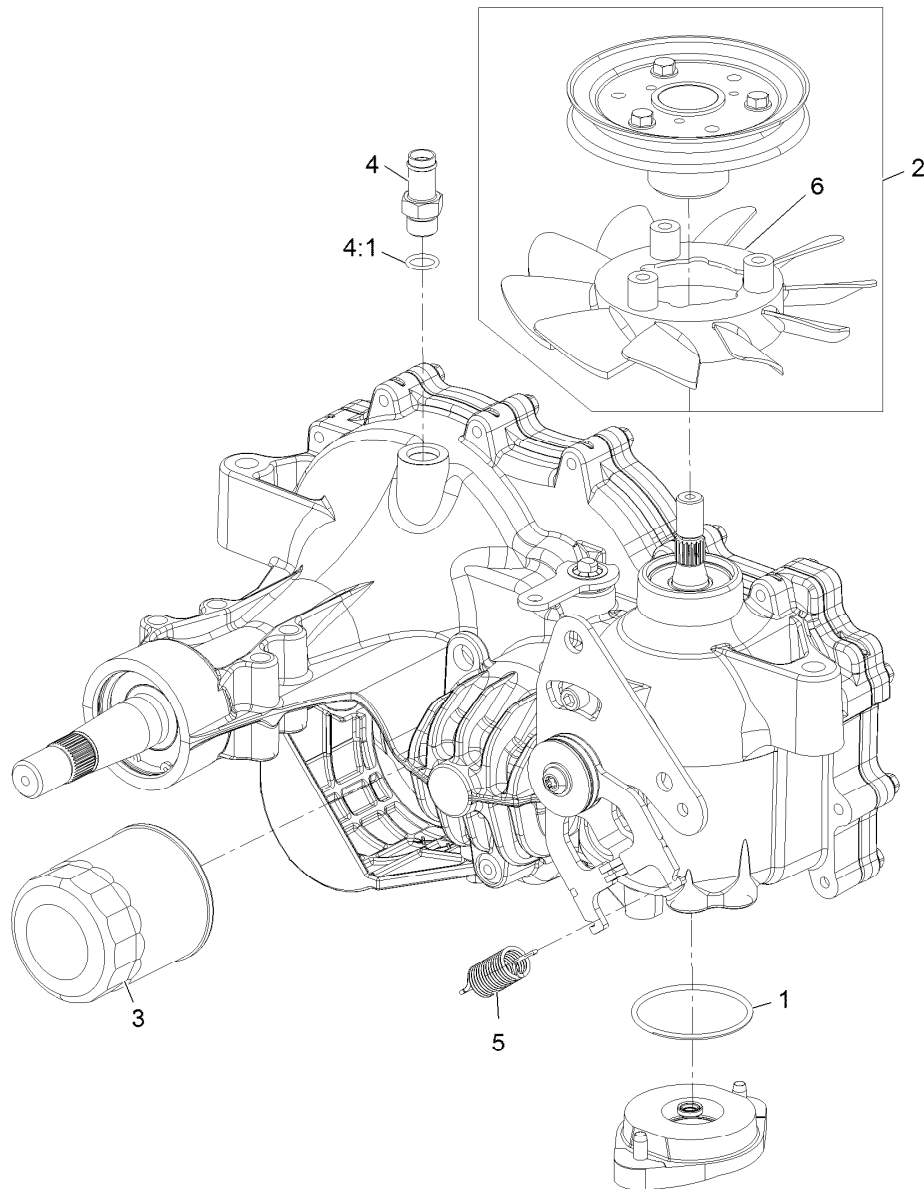

LH and RH Transaxle Assembly Nos. 116-6614 and 116-6615

Ref.	Part Number	Qty.	Description
1	109-3540	1	O-Ring-Charge Seal Cover
2	116-6743	1	Kit-Fan And Pulley
3	109-3321	1	Filter-Hydraulic
4	109-3278	1	Adapter-Straight
4:1	1-603921	1	O-Ring
5	109-5592	1	Spring
6	116-6742	1	Fan-Hydrogear Offset
99	109-3537	1	Complete Seal Kit ●


● Not illustrated

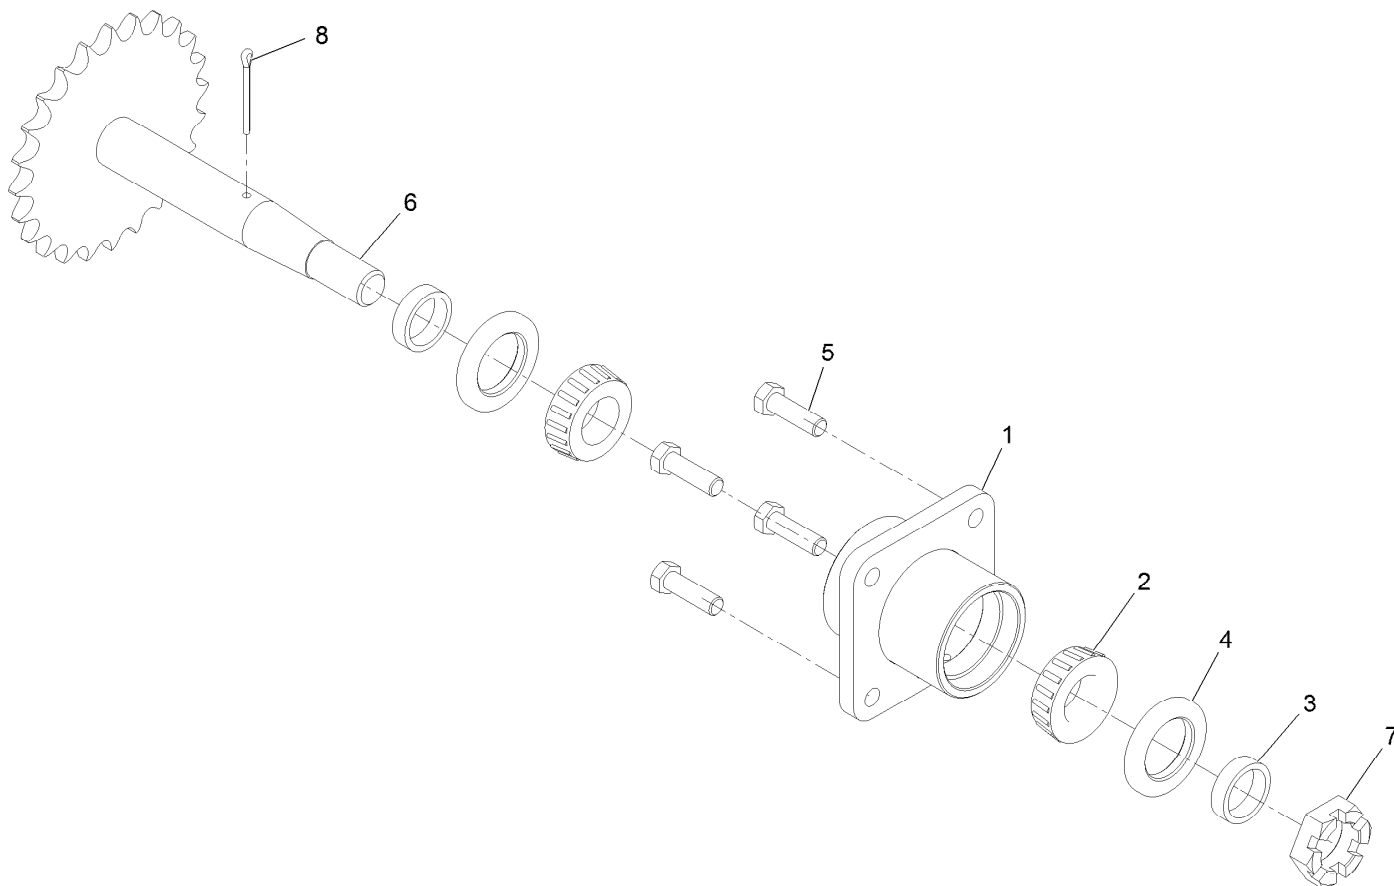

Axle and Bearing Assembly No. 116-7645

Ref.	Part Number	Qty.	Description
1	116-6746-01	1	Mount, Wheel Bearing [red]
2	1-543509	2	Cone-Bearing Tapered Roller
3	116-6758	2	Spacer, 1.250 X 1.000 X .330
4	1-543511	2	Seal-Grease
5	323-7	4	Screw-HH 3/8-16 X 1 1/4
6		1	Axle ●
7	99-3139	1	Nut
8	1-806800	1	Pin-Cotter


● Not serviced separately

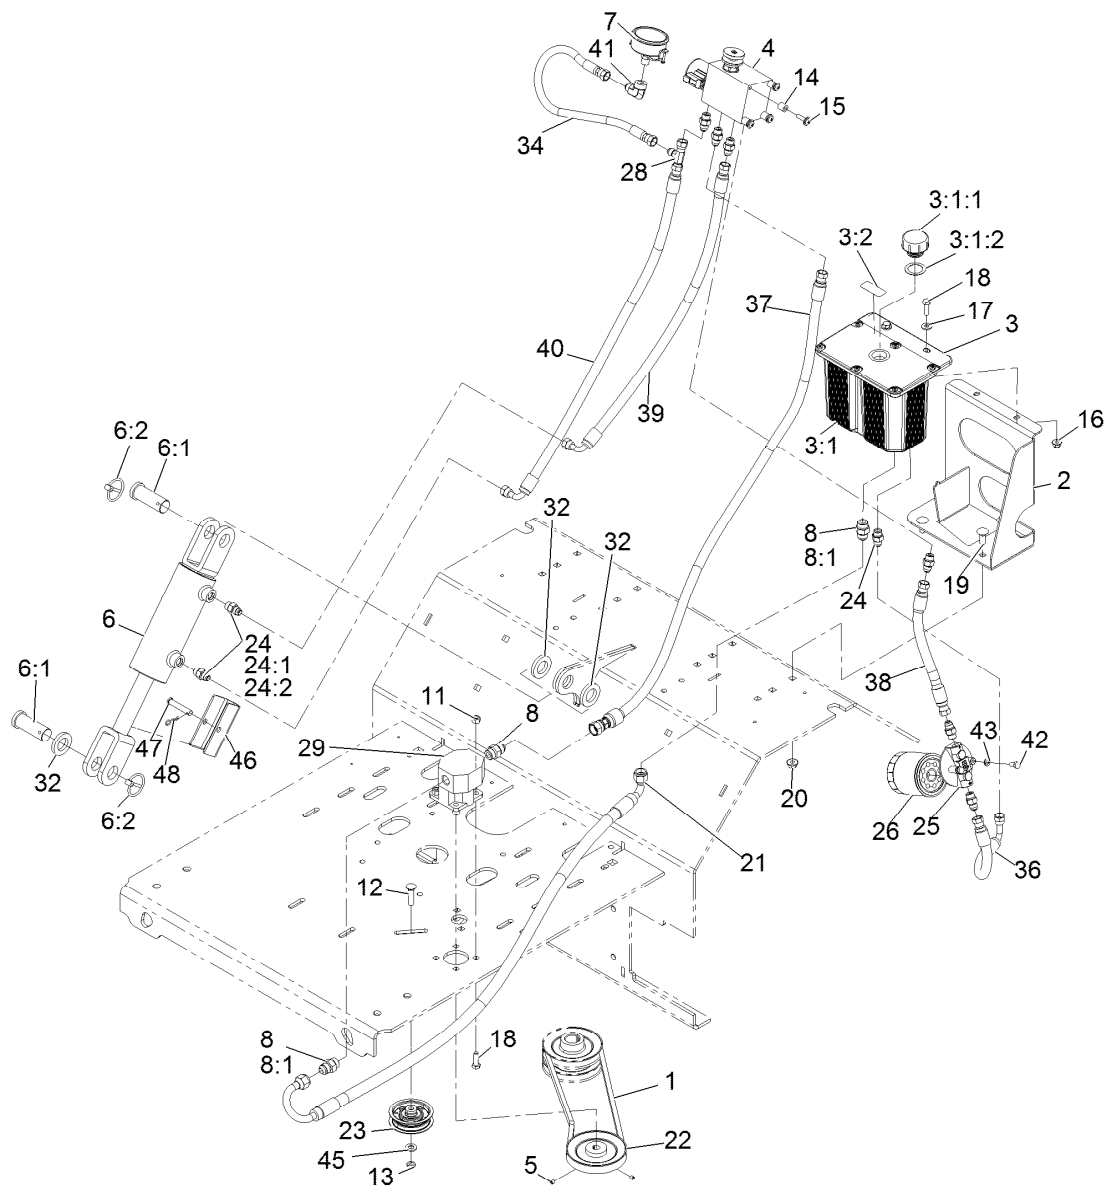

Auxiliary Hydraulic Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	116-6894	1	Belt-A, 37	15	110-9361	4	Screw-PPH, Sems
2	116-6618-03	1	Bracket-HYD Tank	16	104-8300	2	Nut-Nyloc 5/16-18 Flg
3	116-7556	1	ASM-Reservoir W/Decal	17	3256-2	2	Washer-1/4 Std
3:1		1	Tank-Hydraulic ●	18	322-5	6	Screw-HH 5/16-18 X 1
3:1:1	103-1948	1	Cap-Reservoir, HYD	19	3231-2	4	Bolt-Carriage 3/8-16 X 1
3:1:2	103-1949	1	Gasket-Cap	20	104-8301	4	Nut-Nyloc 3/8-16 Flg
3:2	116-6990	1	Decal-Hydro Oil Aw-32	21	116-6993	1	ASM-Hydraulic Hose
4	116-6752	1	Valve	22	116-6667	1	Pulley
5	3245-1	2	Screw-Set, HSH	23	116-6760	1	Pulley-Idler Flat
6	116-6969	1	Cylinder-HYD	24	103-2156	5	Adapter-Straight
6:1	116-7290	2	Pin-Clevis 1" X 2.00	24:1	1-603921	1	O-Ring-Sae #6
6:2	92-1298	2	Pin-Lynch	24:2	103-1020	1	O-Ring-37 Flare #6
7	116-6753	1	Gauge-Pressure	25	104-7836	1	Filter-Head
8	353-388	3	Fitting-Straight	26	109-4180	1	Filter,25 Micron
8:1	237-79	1	O-Ring				Bi-Directional
11	3296-29	4	Nut-Nyloc 5/16-18	28	353-877	1	Fitting-HYD, Tee (Swivel)
12	3231-4	1	Bolt-Carriage 3/8-16 X 1 1/2	29	116-6751	1	Pump-Gear
13	3296-59	1	Nut-Nyloc 3/8-16 Thin	32	116-6781	5	Spacer
14	22-7810	4	Spacer	34	116-6679	1	Hose ASM-HYD Hp

● Not serviced separately

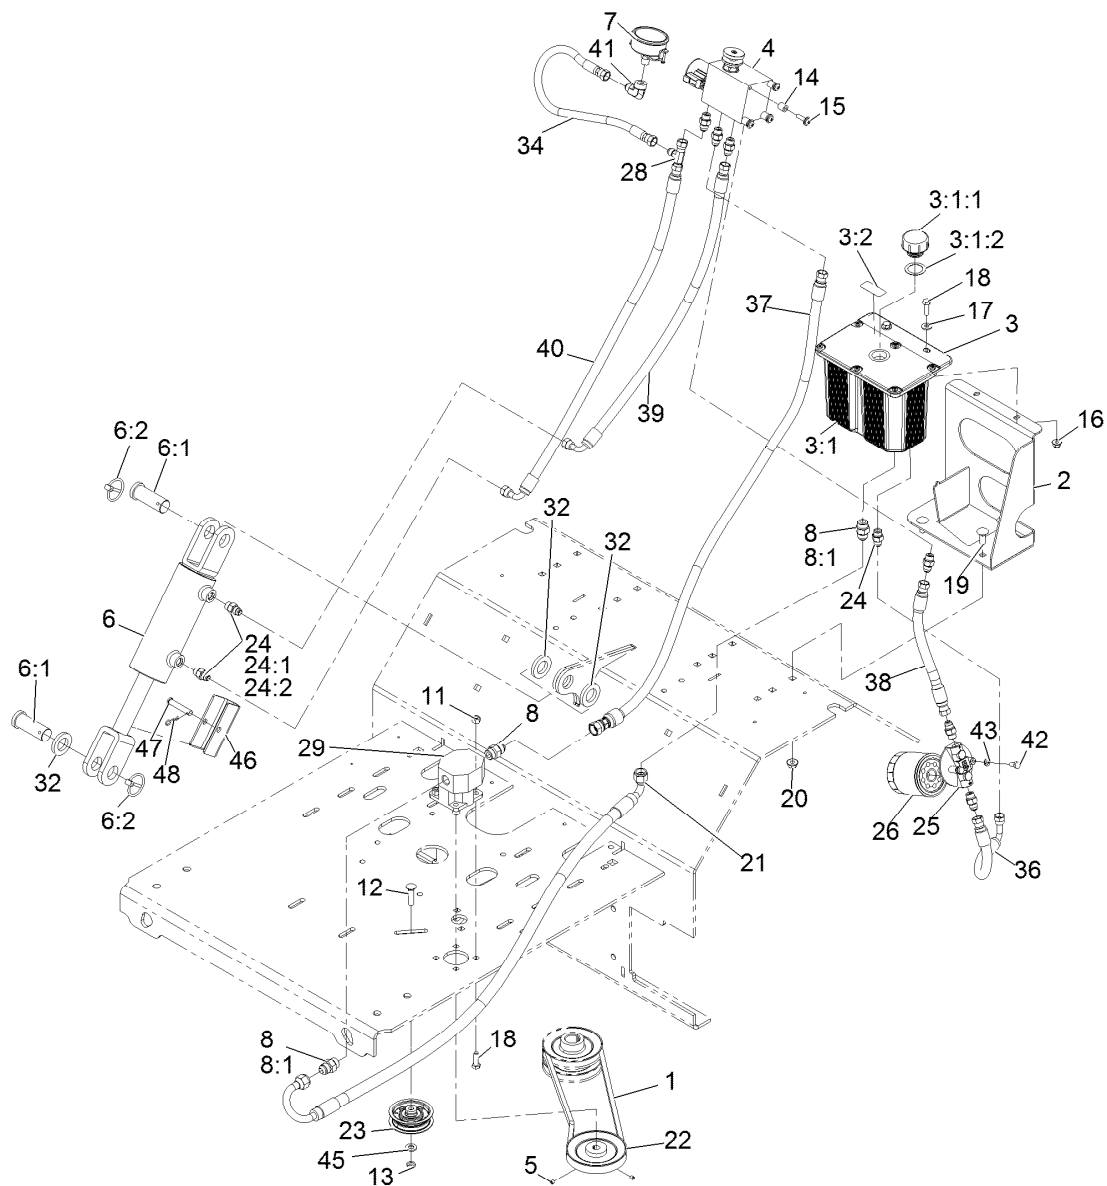


Auxiliary Hydraulic Assembly (continued)

Ref.	Part Number	Qty.	Description
36	116-6675	1	Hose ASM-HYD Lp
37	116-6676	1	Hose ASM-HYD Hp
38	116-6680	1	ASM-Hydrualic Hose
39	116-6677	1	ASM-Hydrualic Hose
40	116-6678	1	Hose ASM-HYD Hp 3/8X28
41	116-6686	1	Fitting-Elbow-90

Ref.	Part Number	Qty.	Description
42	321-3	2	Screw-HH 1/4-20 X 5/8
43	1-805004	2	Washer-Lock 1/4 Heavy
45	3256-24	1	Washer-3/8 Sae
46	116-7307-01	1	Stop-Cylinder
47	283-82	1	Pin-Clevis
48	1-806003	1	Hairpin-Cotter


● Not serviced separately

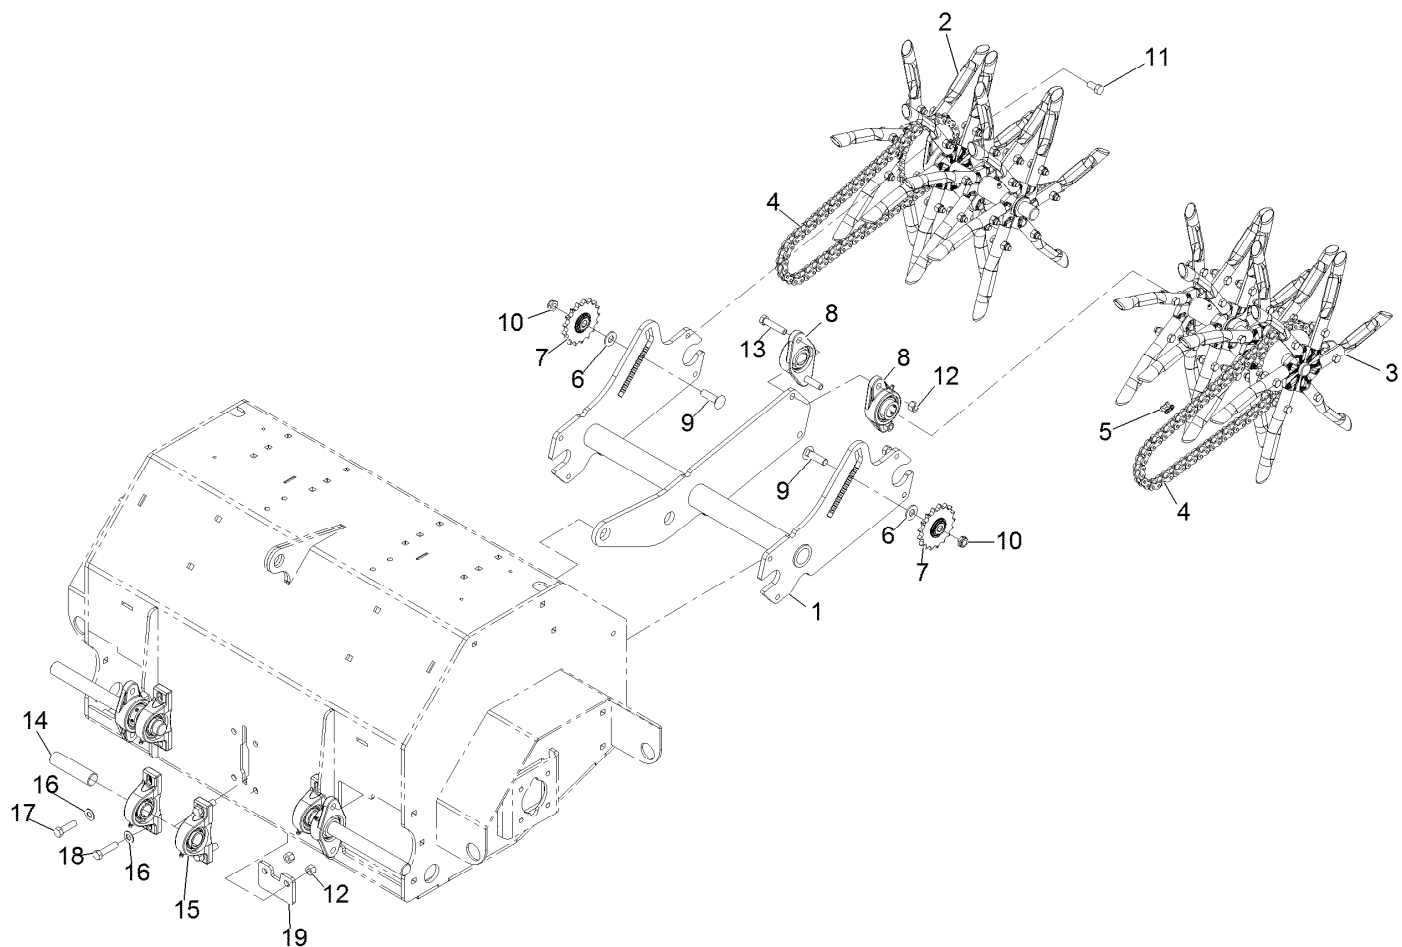

Tine Assembly


Ref.	Part Number	Qty.	Description
1	116-6553-03	1	Trail Arm ASM
2	116-6738	1	RH Tine Wheel ASM
3	116-6739	1	LH Tine Wheel ASM
4	116-6895	2	Links-#50 Roller Chain, 65
5	116-6897	2	Link-#50 Connecting
6	87-7270	2	Washer-Thrust
7	116-6719	2	Sprocket-Idler 17T 50
8	116-6777	2	Bearing, Flange -2 Bolt
9	3233-14	2	Screw-CARR
10	3296-45	2	Nut-Nyloc 1/2-13 Thin

Ref.	Part Number	Qty.	Description
11	116-7109	4	Screw-HH
12	3296-48	6	Nut-Nyloc 7/16-14
13	324-8	2	Screw-HH
14	116-6629	1	Shaft-1.00 X 4.00
15	116-6756	2	Bearing,Pillow Block 1.00
16	3256-25	4	Washer-7/16 Sae
17	324-6	2	Screw-HH 7/16-14 X 1 1/2
18	324-7	2	Screw-HH
19	116-7327-01	1	Plate-Downstop [red]

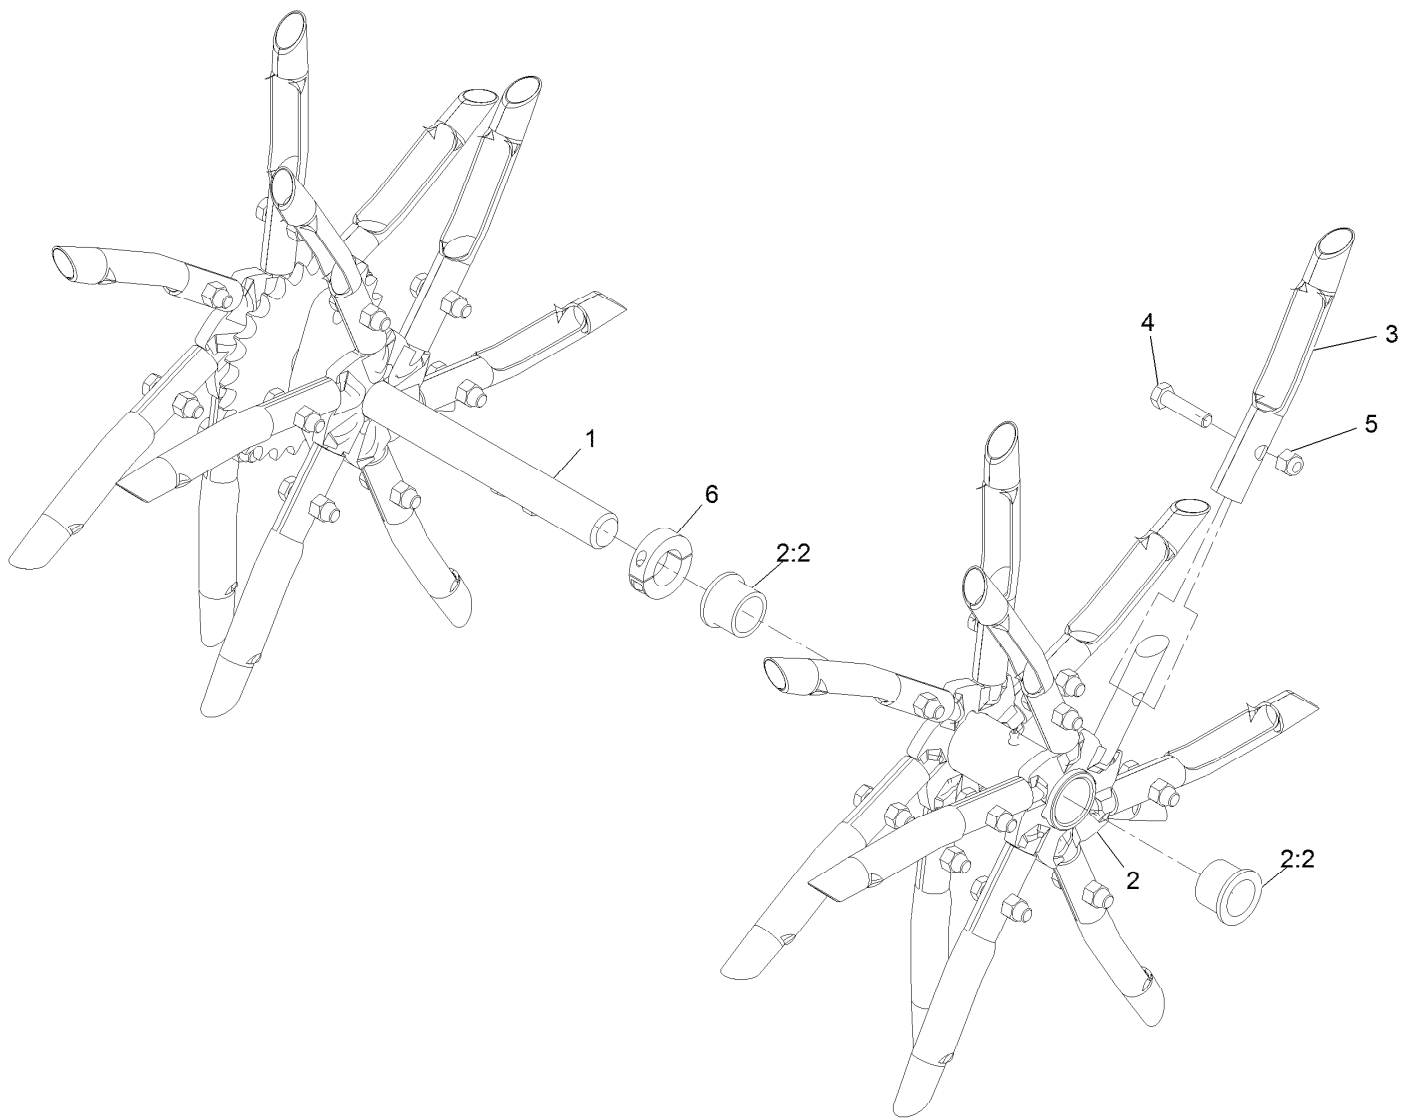


RH Tine Wheel Assembly No. 116-6738

Ref.	Part Number	Qty.	Description
1	116-6727	1	Tine Shaft-RH
2	116-6731	1	Float Tine Shaft-ASM
2:2	94-8949	2	Bushing-Flange
3	121-4894	24	Tine-Coring
4	323-8	24	Screw-HH 3/8-16 X 1 1/2
5	3296-39	24	Nut-Nyloc 3/8-16
6	116-7271	1	Collar-Locking 1.00"

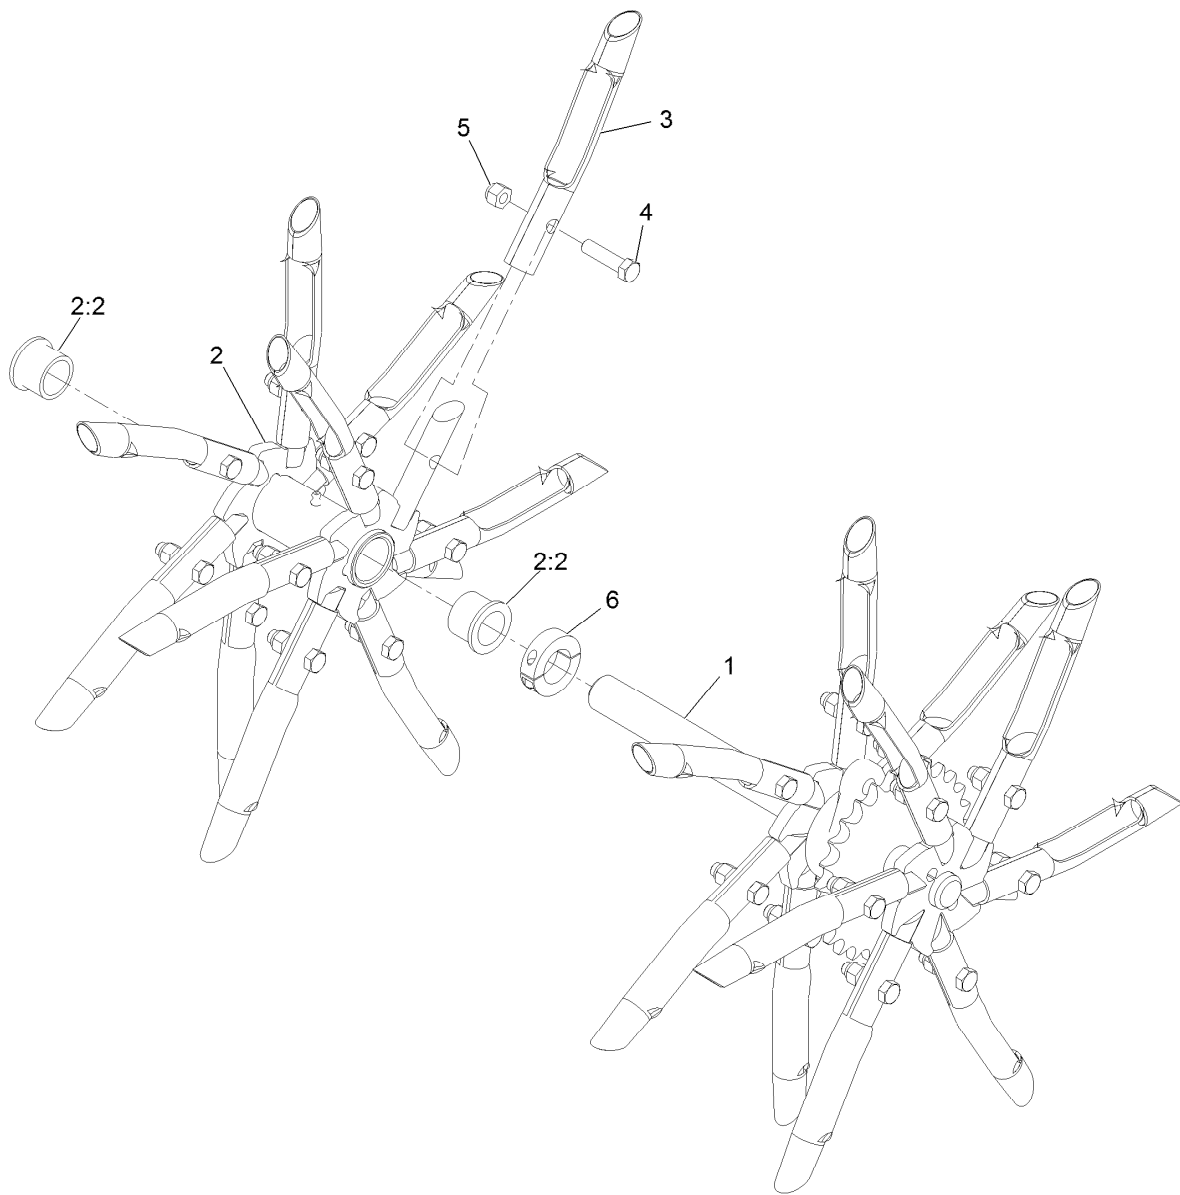

LH Tine Wheel Assembly No. 116-6739


Ref.	Part Number	Qty.	Description
1	116-6728	1	Tine Shaft-LH
2	116-6731	1	Float Tine Shaft-ASM
2:2	94-8949	2	Bushing-Flange
3	121-4894	24	Tine-Coring
4	323-8	24	Screw-HH 3/8-16 X 1 1/2
5	3296-39	24	Nut-Nyloc 3/8-16
6	116-7271	1	Collar-Locking 1.00"

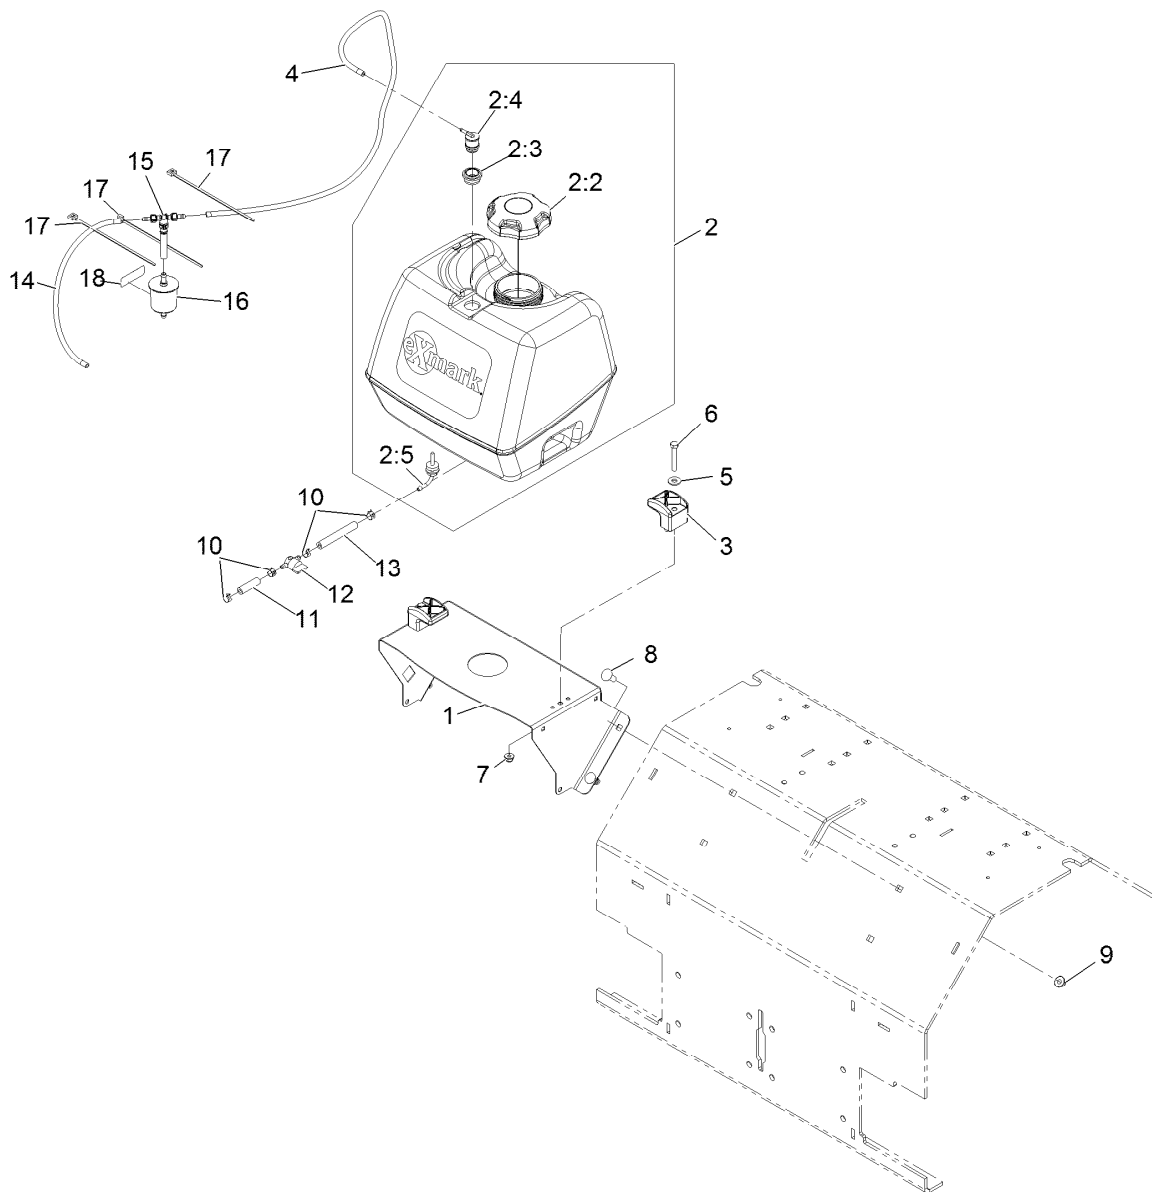

Fuel Assembly

Ref.	Part Number	Qty.	Description
1	116-7243-01	1	Support-Fuel Tank
2	116-3656	1	ASM, Fuel Tank
2:2	120-5461	1	Cap-Fuel, Ratcheting
2:3	114-0284	1	Grommet
2:4	114-0285	1	Valve-Rollover
2:5	103-2605	1	Fitting-Fuel Bulkhead W/Strainer
3	107-4543	2	Clamp
4	116-4346	1	Hose-Emissions
5	3256-3	2	Washer-5/16 Std
6	322-10	2	Screw-HH 5/16-18 X 2
7	104-8300	2	Nut-Nyloc 5/16-18 Flg

Ref.	Part Number	Qty.	Description
8	3231-2	4	Bolt-Carriage 3/8-16 X 1
9	104-8301	4	Nut-Nyloc 3/8-16 Flg
10	2412-98	4	Clamp-Hose
11	119-7856	1	Hose-Fuel
12	1-603770	1	Valve-Fuel
13	105-8342	1	Hose-Fuel
14	115-7872	1	Hose-Fuel
15	116-5464	1	Tee And Check ASM
16	120-2235	1	Filter-Air
17	1-303335	3	Tie-Cable 7 15/16 (Large)
18	116-4769	1	Decal-Filter, Emissions

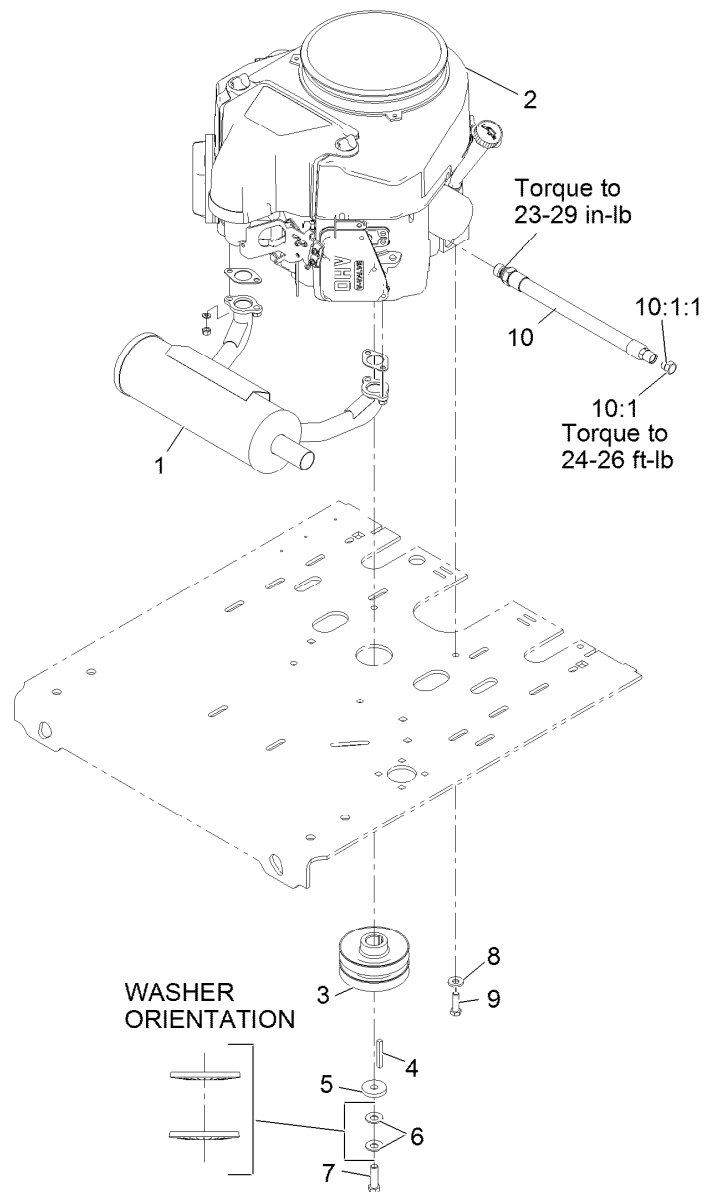

Engine Assembly


Ref.	Part Number	Qty.	Description
1	116-3735	1	Muffler,Horizontal
2		1	Engine-Kawasaki, Fs730V ●■
3	116-6666	1	Pulley
4	103-4177	1	Key
5	1-543610	1	Washer
6	1-603610	2	Washer-Spring Disc 7/16
7	109-9761	1	Screw-HH 7/16-20 X 1 1/2 W/Loctite ◆
8	98-5975	4	Washer-Spring Disc 3/8
9	323-7	4	Screw-HH 3/8-16 X 1 1/4
10	116-4924	1	Asm-Hose Oil Drain W/Plug ▲
10:1	353-508	1	Plug-W/O-Ring
10:1:1	237-42	1	O-Ring

● Not serviced separately

▲ Use a Teflon Pipe Sealant or equivalent on threads.

◆ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

■ Obtain parts from www.kawpowerepc.com

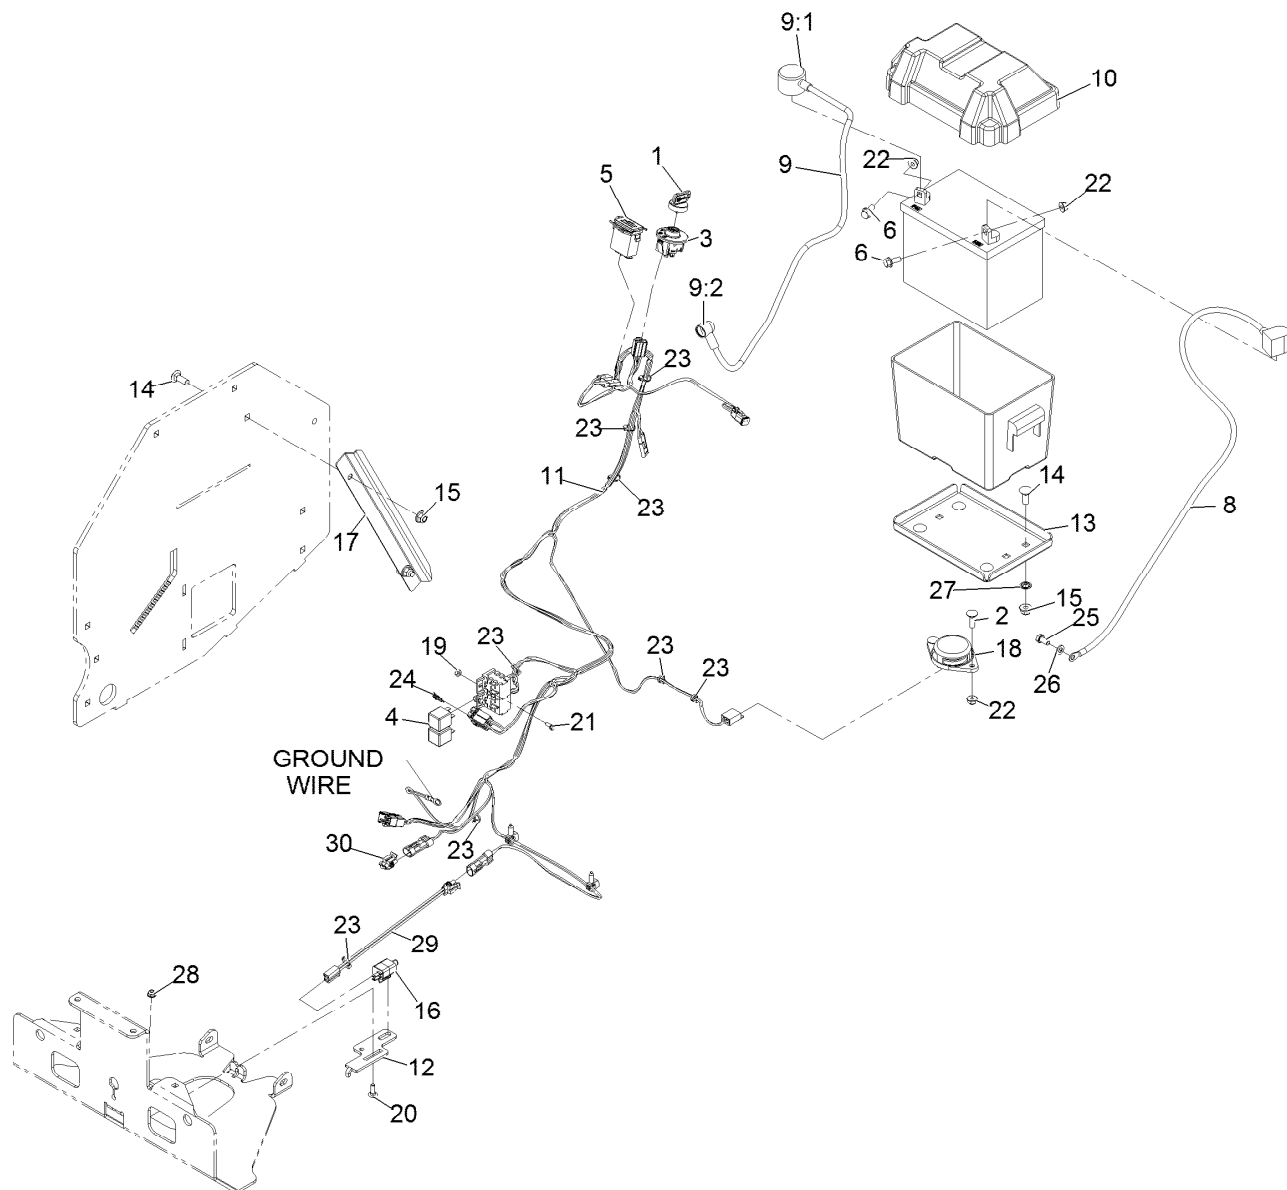

Electrical Assembly

Ref.	Part Number	Qty.	Description
1	1-603511	1	Key-Ignition
1	103-2106	1	Key-Exmark Logo
2	3230-2	2	Bolt-Carriage 5/16-18 X 1
3	117-2221	1	Switch-Ignition
4	1-643275	2	Relay-12Vdc 40 Amp
5	1-513374	1	Meter-Engine Hours
6	3234-5	2	Screw-HH Flg 5/16-18 X 3/4
8	117-6422	1	Cable-Battery, Black
9	109-7630	1	Positive Battery Cable ASM
9:1	109-2407	1	Insulator-Battery
9:2	1-543393	1	Insulator-Solenoid
10	116-6673	1	Battery Box ASM U1
			Pn03188
11	116-6890	1	Harness-30 Aerator ●
12	116-7589	1	Mount-Switch
13	116-6609-03	1	Tray-Battery
14	3231-2	6	Bolt-Carriage 3/8-16 X 1

Ref.	Part Number	Qty.	Description
15	104-8301	6	Nut-Nyloc 3/8-16 Flg
16	110-6765	1	Switch-Single Pole No
17	116-6768-03	1	Guard-Harness
18	92-6282	1	Switch-Seat
19	3296-2	2	Nut-Nyloc #10-24
20	3229-1	2	Bolt-Carriage 1/4-20 X 3/4
21	3290-321	2	Screw-HWH
22	104-8300	4	Nut-Nyloc 5/16-18 Flg
23	1-303287	9	Tie-Cable 5 1/2 (Small)
24	1-816001	2	Fuse-Blade Type, 20 Amp
25	33114-016	1	Screw-HH M8-1.25 X 16Mm
26	33094-00	1	Washer
27	109-9190	4	Nut, Push .375
28	104-7201	1	Nut-Nyloc 1/4-20 Flg
29	116-7502	1	Jumper-Switch
30	116-7505	1	Plug-Neutral Switch

● Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.

Notes:

Notes:

MAXIMIZE THE PERFORMANCE OF YOUR EXMARK.

4-CYCLE PREMIUM ENGINE OIL

Part No. 116-3373

Both SAE 30 and SAE 10W-30 in one bottle.

Contains increased levels of zinc and phosphorus for better lubricity.

No Viscosity Index Improvers that tend to shear down in high heat.

Synthetic formulation.

Gas & Diesel compatible.

Anti-corrosion additives.

API 'SL' and JASO rated with wet clutch compatibility for other machines.


PREMIUM HYDRO OIL

Part No. 109-9828

Commercial quality for tough, high-heat conditions.

Designed specifically for zero-turn mower hydraulic systems.

Superior shear resistance under heavy loads.

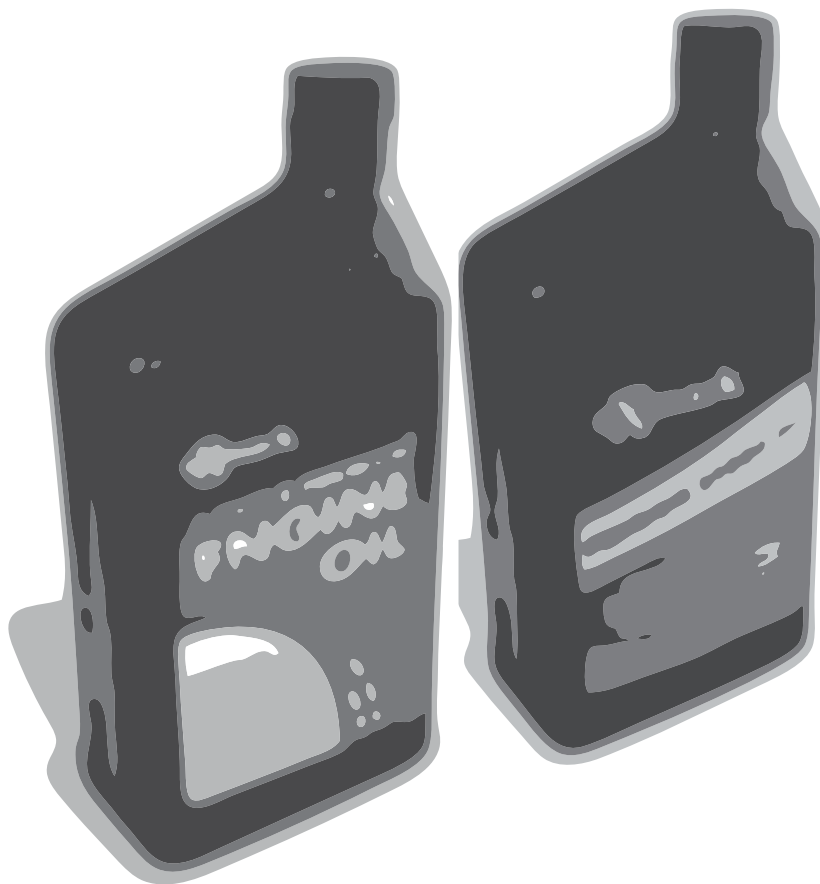

Available from your local Exmark dealer. Find your closest dealer at exmark.com

EXMARK ACCESSORIES AND OPTIONS*

MID-MOUNT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	OPERATOR CONTROLLED DISCHARGE
FULL SUSPENSION SEAT	SUN SHADE
DECK LIFT ASSIST KIT	TRASH CONTAINER
HITCH KIT	TURF STRIPER
LIGHT KIT	ULTRA VAC COLLECTION SYSTEM
12V POWER PORT	ULTRA VAC QUICK DISPOSAL SYSTEM
MICRO-MULCH SYSTEM	

OUT-FRONT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	SNOW BLADE
DUAL-TAIL WHEEL	SNOWBLOWER
FLOOR PAN EXTENDER	SUN SHADE
HITCH KIT	TRASH CONTAINER
LIGHT KIT	ULTRA VAC COLLECTION SYSTEM
MICRO-MULCH SYSTEM	ULTRA VAC QUICK DISPOSAL SYSTEM
ROLL OVER PROTECTION SYSTEM (ROPS)	WEATHER CAB

WALK-BEHIND ACCESSORIES AND OPTIONS

GRASS CATCHER	TURF STRIPER
MICRO-MULCH SYSTEM	STANDON

*Some accessories and options not available for some models.

Place Model No. and Serial No.
Label Here (Included in the Literature
Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____

© 2012 Exmark Mfg. Co., Inc.
Industrial Park Box 808
Beatrice, NE 68310
All Rights Reserved

Part No. 4501-143 Rev. B
(402) 223-6300
Fax (402) 223-5489
Printed in the USA.



www.exmark.com