




VANTAGE® S-SERIES

Model No. VTS691CKA48400—Serial No. 316000000 and Up

Picture below may not reflect actual product.

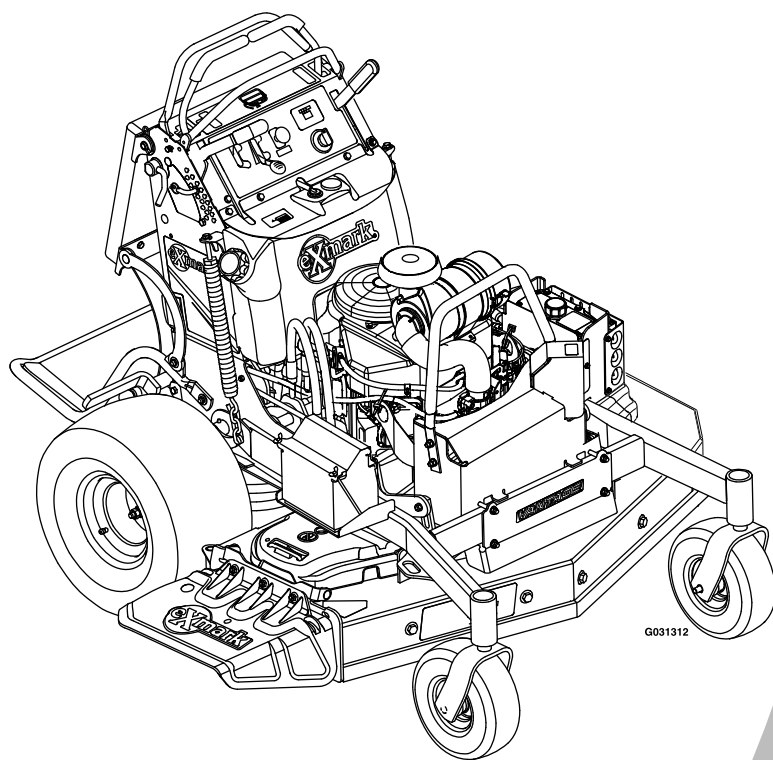

Parts Manual

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required	HLH: hex lag head	PTH: phillips truss head
ASM: assembly	HOC: height-of-cut	PTO: power-take-off
BBC: blade brake control	HP: high pressure	RH: right hand
BHTF: button head thread forming	HSBH: hex socket button head	ROPS: roll-over protection system
CARR: carriage	HSFH: hex socket flat head	RRB: rear roller brush
CCW: counter clockwise	HSH: hex socket head	SFH: slotted fillister head
CW: clockwise	HWH: hex washer head	SHH: slotted hex head
DEG: degrees	HWHTF: hex washer head thread forming	SHWH: slotted hex washer head
DPA: Dual Point Adjustment	HYD: hydraulic	SPH: slotted pan head
ECM: electronic control module	LH: left hand	SQH: square head
EXT: external	LP: low pressure	SRH: slotted round head
FH: flat head	LPG: Liquefied Petroleum Gas	STD: standard
GA: gauge	NI: nylon insert	TAP: self tapping
HD: heavy-duty	NPTF: national pipe thread fine	TTH: torx truss head
HF: hex flange	PFH: phillips flat head	
HH: hex head	PPH: phillips pan head	
HHF: hex head flange	PPHTF: phillips pan head thread forming	
HHFTF: hex head flange thread forming	PRH: phillips round head	
HJ: hex jam		

Touch Up Paint

Exmark black touch up spray paint – gloss black.

Exmark red touch up paint (spray paint – P/N 1-850337 - .6 oz liquid bottle – P/N 103-9140).




If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE Guaranteed!! (Some restrictions apply. See your participating Exmark Dealer for details.)

Contents

Complete Deck Assembly.....	4
Deck Assembly.....	6
Deck W/Decals Assembly No. 116-3999.....	8
Idler Arm Assembly No. 116-3806.....	10
Main Frame Assembly.....	12
Control Tower W/Decals Assembly No. 116-5013.....	14
Wheel and Bearing Assembly No. 112-3810.....	16
Park Brake Assembly.....	18
Deck Lift Assembly.....	20
Platform Group.....	22
Cushion Assembly No. 126-1210.....	24
Platform Assembly No. 116-1804.....	26
Ground Drive Assembly.....	28
Pump Idler Assembly No. 116-9980.....	30
Control Assembly.....	32
LH Tracking Control Linkage Assembly No. 116-4936.....	34
RH Tracking Control Linkage Assembly No. 116-4937.....	36
Fuel Assembly.....	38
Fuel Tank Assembly No. 126-6922.....	40
Engine Assembly.....	42
Electrical Assembly.....	44


Complete Deck Assembly

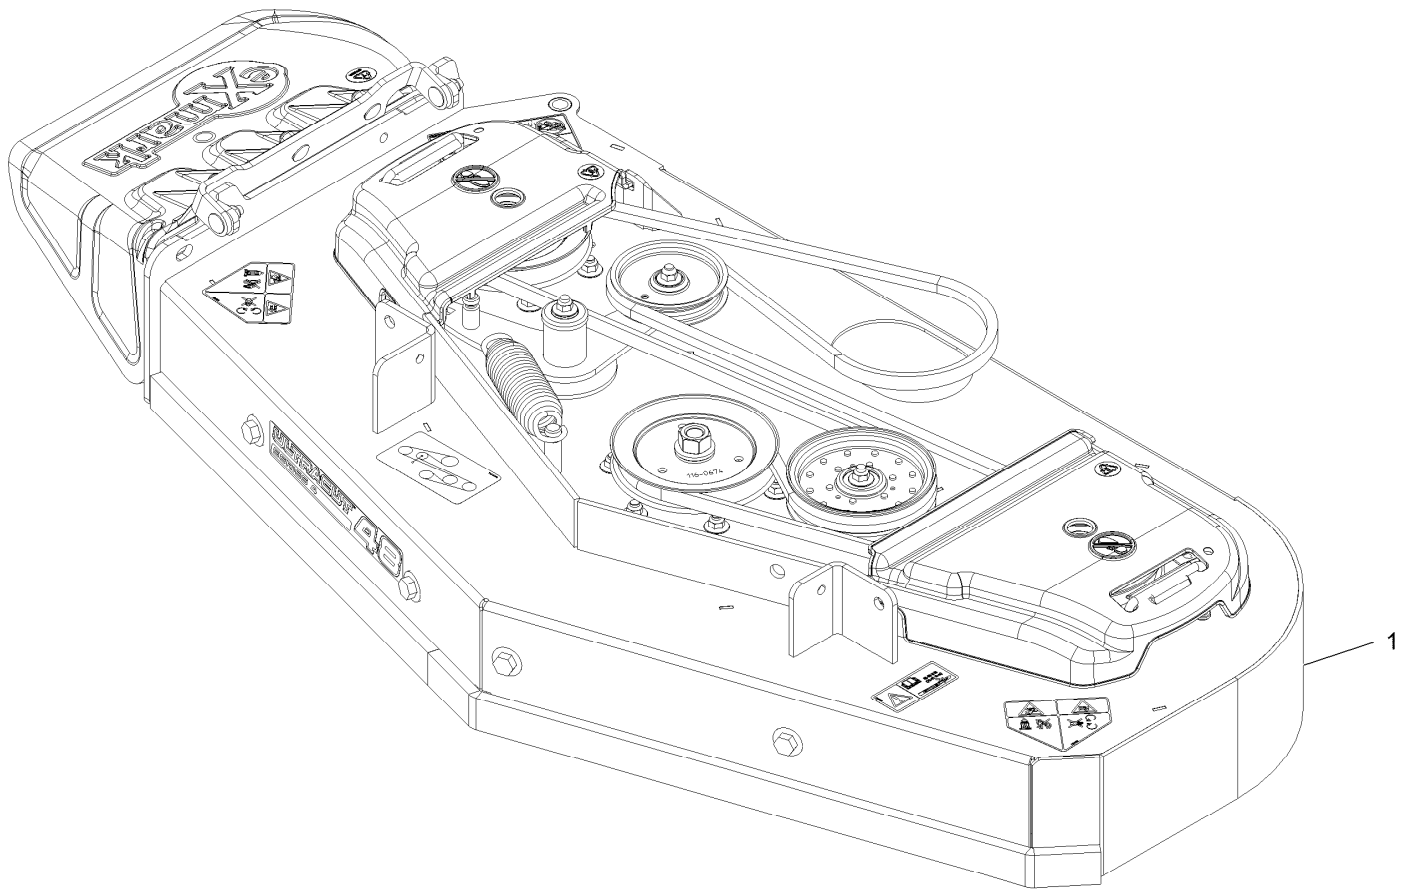

Complete Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-5011	1	ASM-Deck Complete 484

Deck Assembly

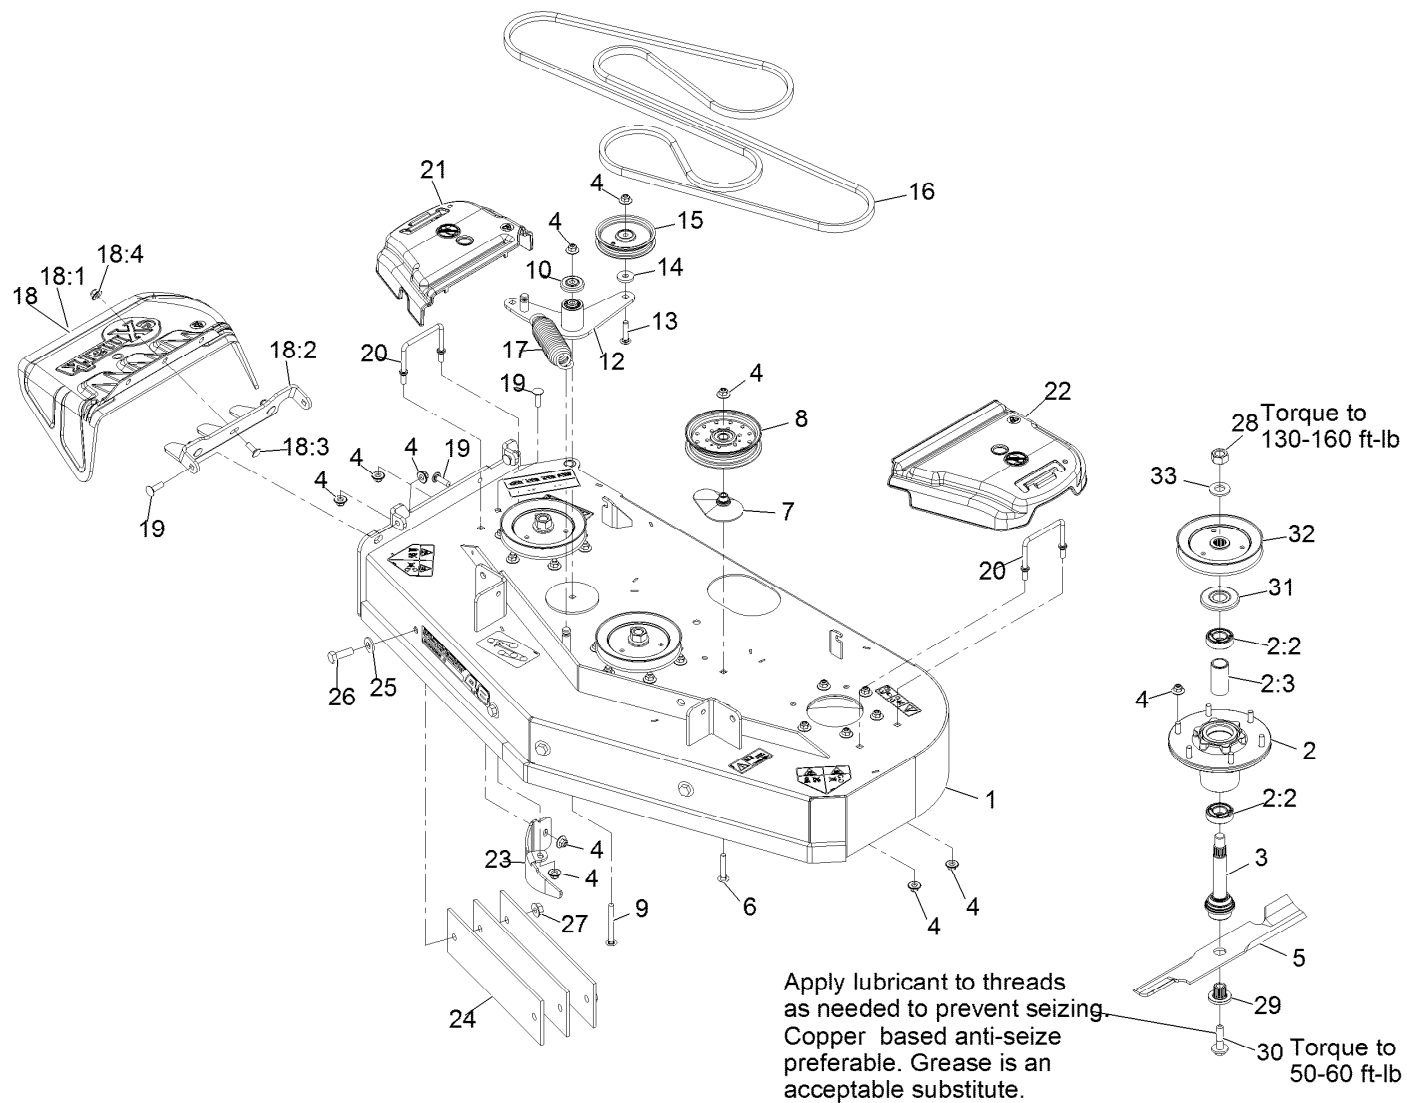


Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-3999	1	Deck ASM-484	17	116-6317	1	Spring-Extension
2	116-3344	3	ASM-Cutter Hsg With Bearings	18	109-7188	1	ASM,Discharge Chute
2:2	116-0720	2	Bearing-Ball	18:1	109-2738	1	Chute, Discharge
2:3	116-3312	1	Spacer-Bearing	18:2	109-8675-01	1	Bracket,Discharge Chute
3	116-3341	3	ASM-Spindle And Seal ■	18:3	3231-22	3	Bolt-Carriage 3/8-16 X 1
4	109-6658	29	Nut-Nyloc 3/8-16 Flg	18:4	109-6658	3	Nut-Nyloc 3/8-16 Flg
5	103-6391	3	Blade, Mulching ●	19	3231-28	4	Bolt-Carriage 3/8-16 X 1 1/4
5	116-5177	3	Blade-Extreme 2, 16.25"	20	109-6982	2	Wireform-Cover
5	103-6401	3	Blade-Notched	21	109-6935	1	Cover-Belt, RH
5	103-6386	3	Blade, Low Lift	22	109-6936	1	Cover-Belt, LH
5	103-6381	3	Blade, Solid	23	116-5995-01	1	Baffle-Dogleg,Lzs Lzx Vt48
6	3231-7	1	Bolt-Carriage 3/8-16 X 2 1/4	24	116-1822-01	6	Bar,Weight
7	109-2872	1	Spacer-Pulley	25	1-513435	4	Washer-Spring Disc 1/2
8	116-4665	1	Idler-Pulley, Flat	26	325-6	4	Screw-HH 1/2-13 X 1 1/2
9	3231-11	1	Bolt-Carriage 3/8-16 X 3 1/2	27	32128-49	4	Nut-Whizlock 1/2-13
10	103-2916	1	Guard-Top	28	116-7306	3	Nut-Hex
12	116-3806	1	Idler Arm ASM W/Bearings	29	103-3037	3	Bushing, Splined
13	116-3381	1	Bolt-Carriage 3/8-16 X 1 3/4	30	109-9220	3	Screw-Sems 1/2-20 X 2.19
14	1-373034	1	Washer	31	116-1286	3	Guard,Bearing Top .989
15	93-1622	1	Pulley-Idler	32	116-0674	3	Sheave,Blade Drive 5.90 ■
16	99-4627	1	V-Belt	33	103-2802	3	Washer-Spring Disc 3/4

● Requires installation of mulch kit for proper mulching. See your Exmark dealer for details.

■ Apply Mobil HTS grease (P/N 103-5217 1.5 oz packet) (or a food-grade anti-seize). See operator s manual for locations.

Deck W/Decals Assembly No. 116-3999

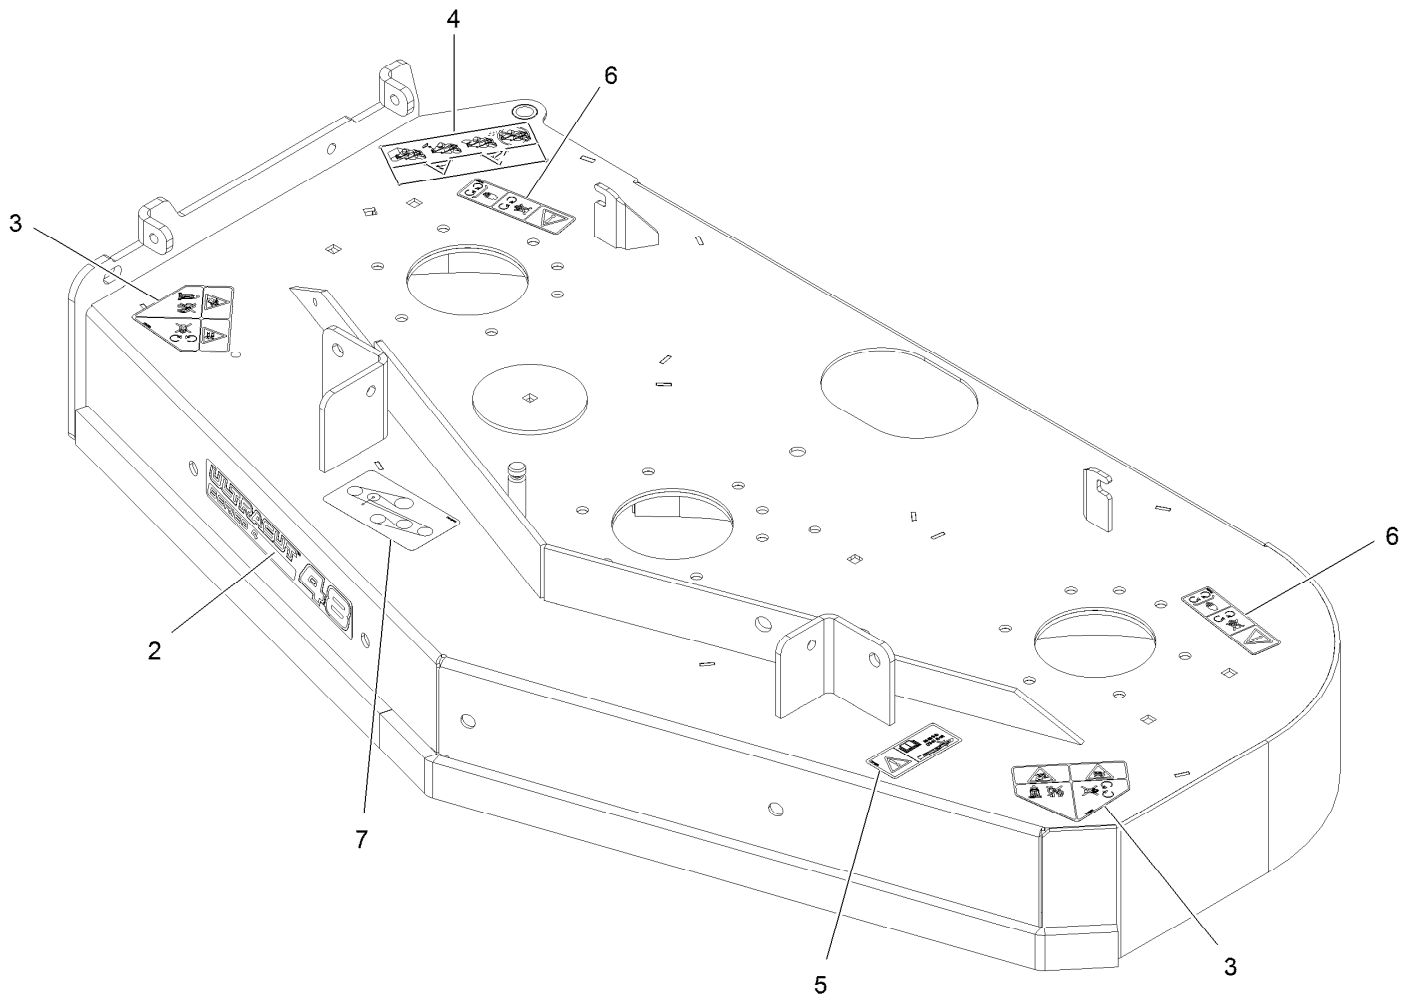


Deck W/Decals Assembly No. 116-3999 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	126-6587	1	Decal, 484
3	112-8760	2	Decal-Danger
4	114-3489	1	Decal-Warning, Bagger

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	116-8283	1	Decal-Bolt Torque
6	112-9028	2	Decal-Missing, Cover
7	116-8774	1	Decal-Belt Routing

Idler Arm Assembly No. 116-3806

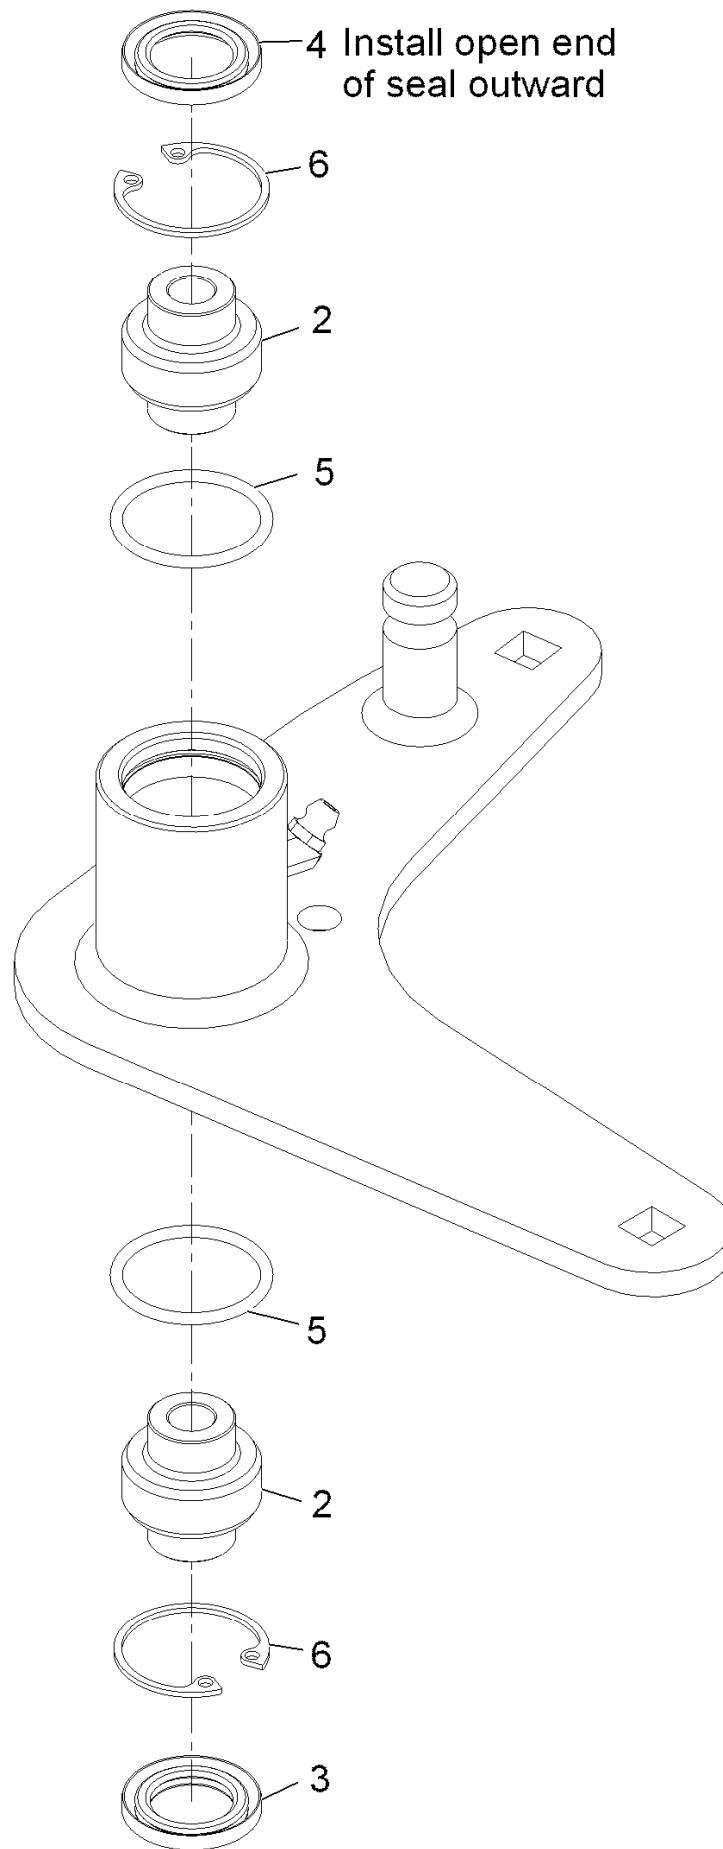


Idler Arm Assembly No. 116-3806 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	103-3504	2	Bearing-Spherical
3	103-3505	1	Seal-Double Lip
4	103-3506	1	Seal-Single Lip

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	106-7159	2	O-Ring
6	32120-10	2	Ring-Retaining


Main Frame Assembly

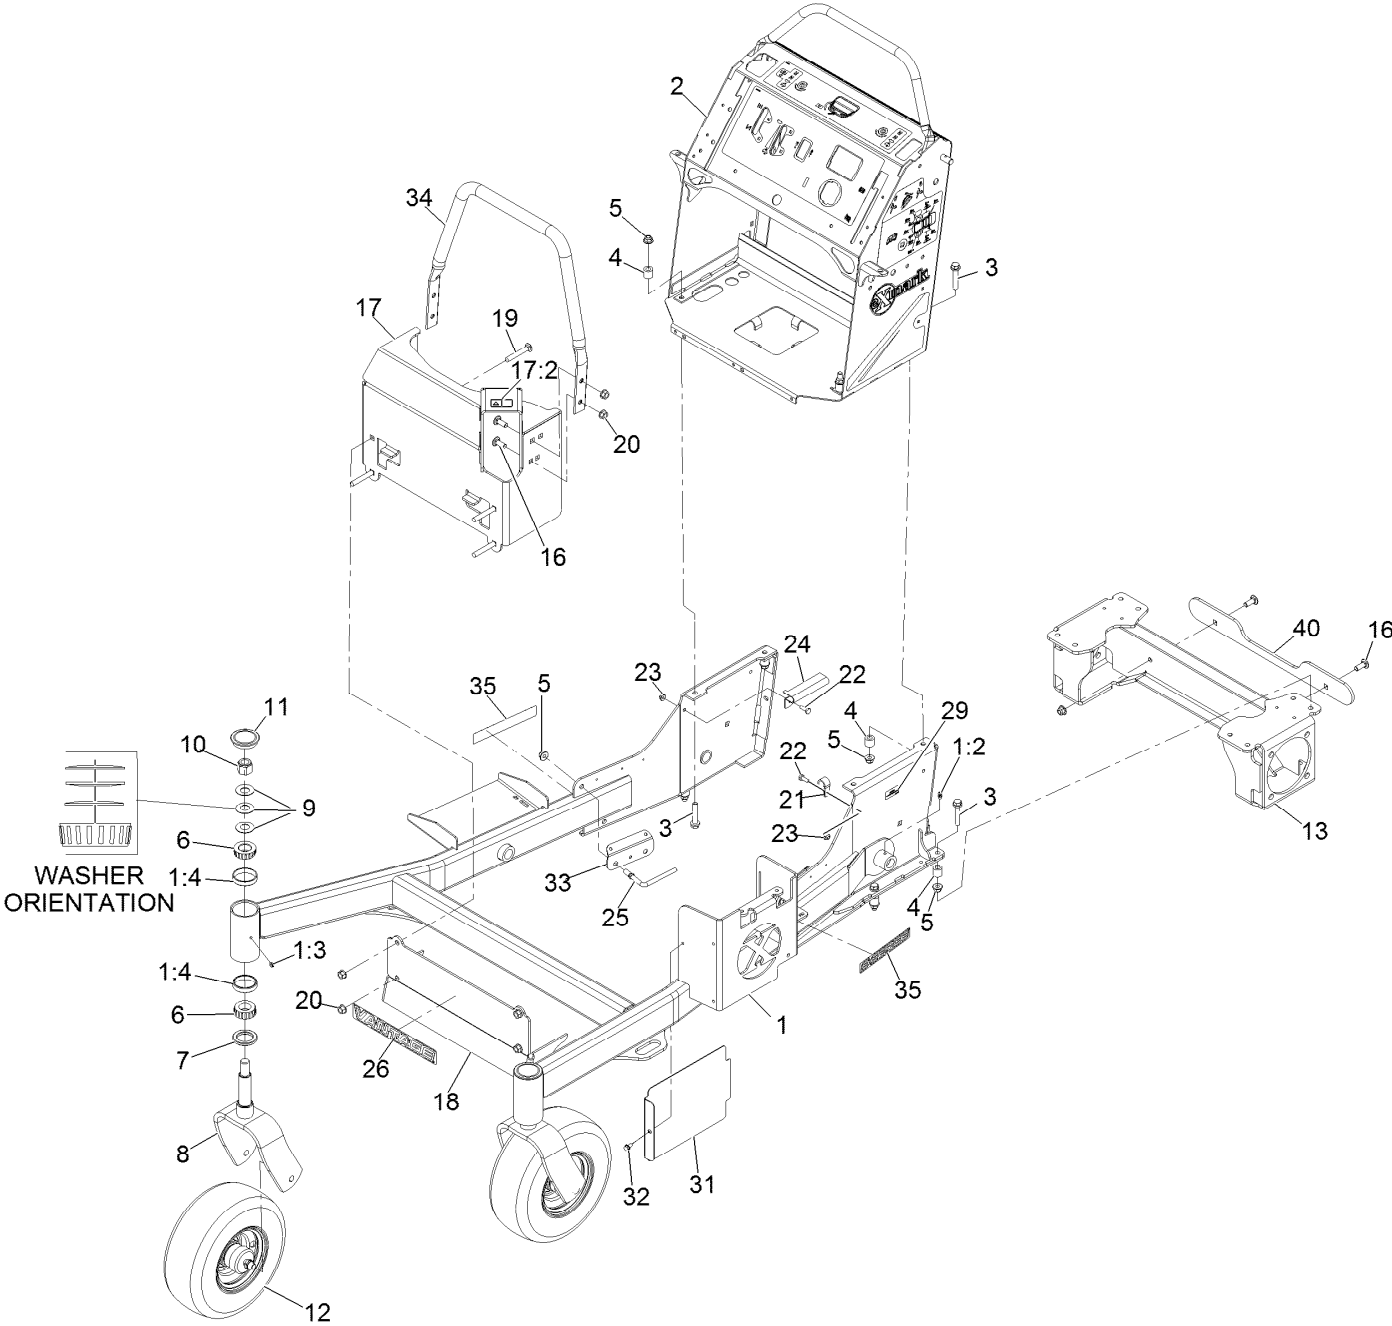

Main Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-7045	1	Front Frame ASM	17	126-5015	1	ASM, Muffler Guard W/ Decal
1:2	302-5	4	Zerk 1/4-28 Str Thrd Forming	17:2	106-5517	1	Decal-Warning, Hot Surface
1:3	1-811010	2	Plug	18	116-3113-01	1	Panel-Guard
1:4	1-543508	4	Cup-Bearing Tapered Roller	19	3231-31	4	Bolt-Carriage 3/8-16 X 2 1/2
2	116-5013	1	Control Tower ASM	20	32128-21	8	Nut-3/8-16 Flanged Side Lock
3	108-3742	8	Screw-HH Flg 3/8-16 X 2	21	2412-87	1	Clamp-Cable
4	121-1760	8	Spacer	22	321-4	2	Screw-HH 1/4-20 X 3/4
5	104-8301	12	Nut-Nyloc 3/8-16 Flg	23	104-7201	2	Nut-Nyloc 1/4-20 Flg
6	1-543509	4	Cone-Bearing Tapered Roller	24	116-5067	1	Bracket-Hose, Fuel (Double)
7	116-5647	2	Seal-Grease	25	116-3382	2	Guide-Hose, Support
8	121-7988-01	2	Fork-Caster	26	126-7200	1	Decal-Vantage Logo
9	1-633508	6	Washer-Spring Disc	29	126-4345	1	Decal-Patent Ttco.Com
10	3296-51	2	Nut-Nyloc 3/4-10	31	116-6981-01	1	Shield-Heat, Tall
11	103-4882	2	Cap-Grease	32	32144-4	1	Screw-HWH 1/4-20 X 1/2 Taptite
12	112-3810	2	Wheel/Tire And Bearing ASM	33	116-6997-01	2	Guard-Hose
13	116-9560-03	1	Motor Frame Weldment [black]	34	116-8152-03	1	Tube-Guard
16	3231-22	6	Bolt-Carriage 3/8-16 X 1	35	126-6572	2	Decal-S-Series
				40	126-1364-03	1	Plate, Bumper Spacer

Control Tower W/Decals Assembly No. 116-5013

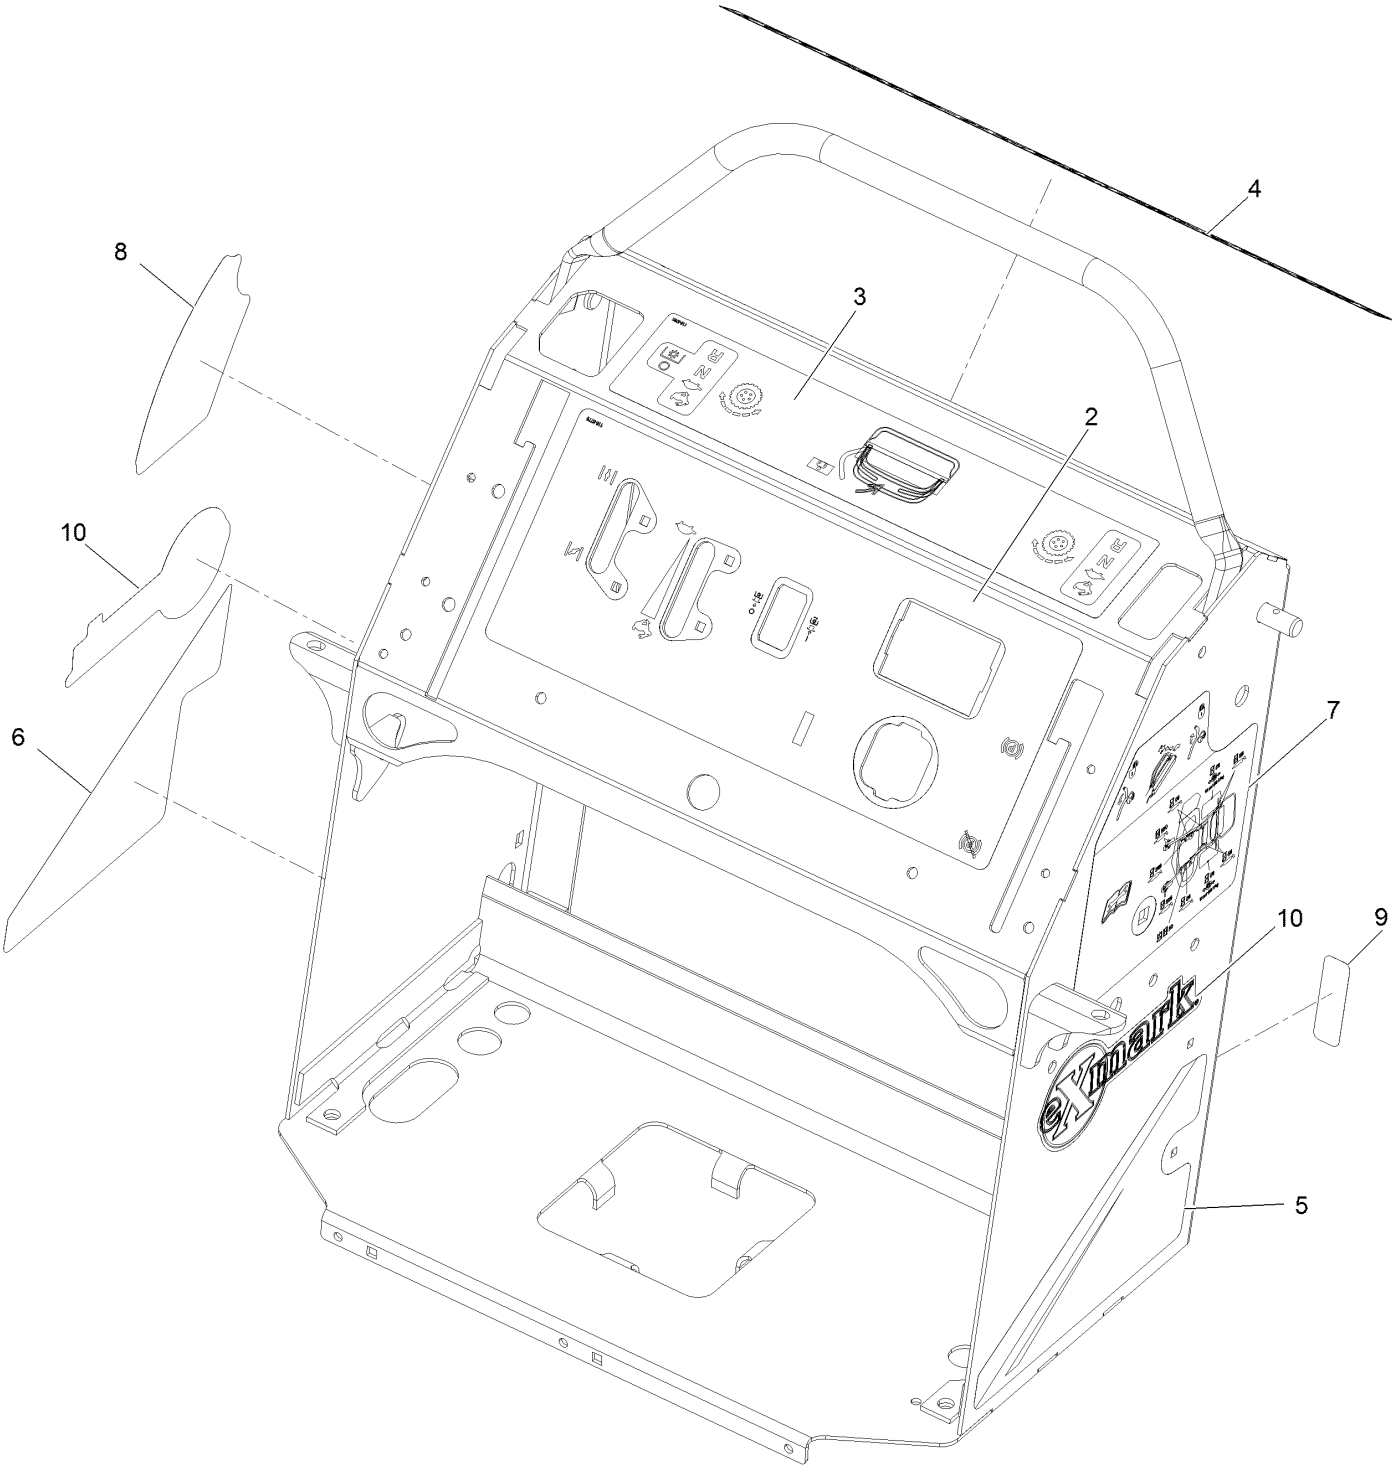


Control Tower W/Decals Assembly No. 116-5013 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	116-8779	1	Decal-Control Panel
3	116-8781	1	Decal-Motion Control
4	116-8780	1	Decal-Warning
5	126-7202	1	Decal-LH Panel
6	126-7203	1	Decal-RH Panel

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
7	116-8777	1	Decal-Service Aid
8	116-2040	1	Decal-Height Of Cut
9	116-8772	1	Decal-Fuse
10	126-6971	2	Decal-Exmark Logo

Wheel and Bearing Assembly No. 112-3810

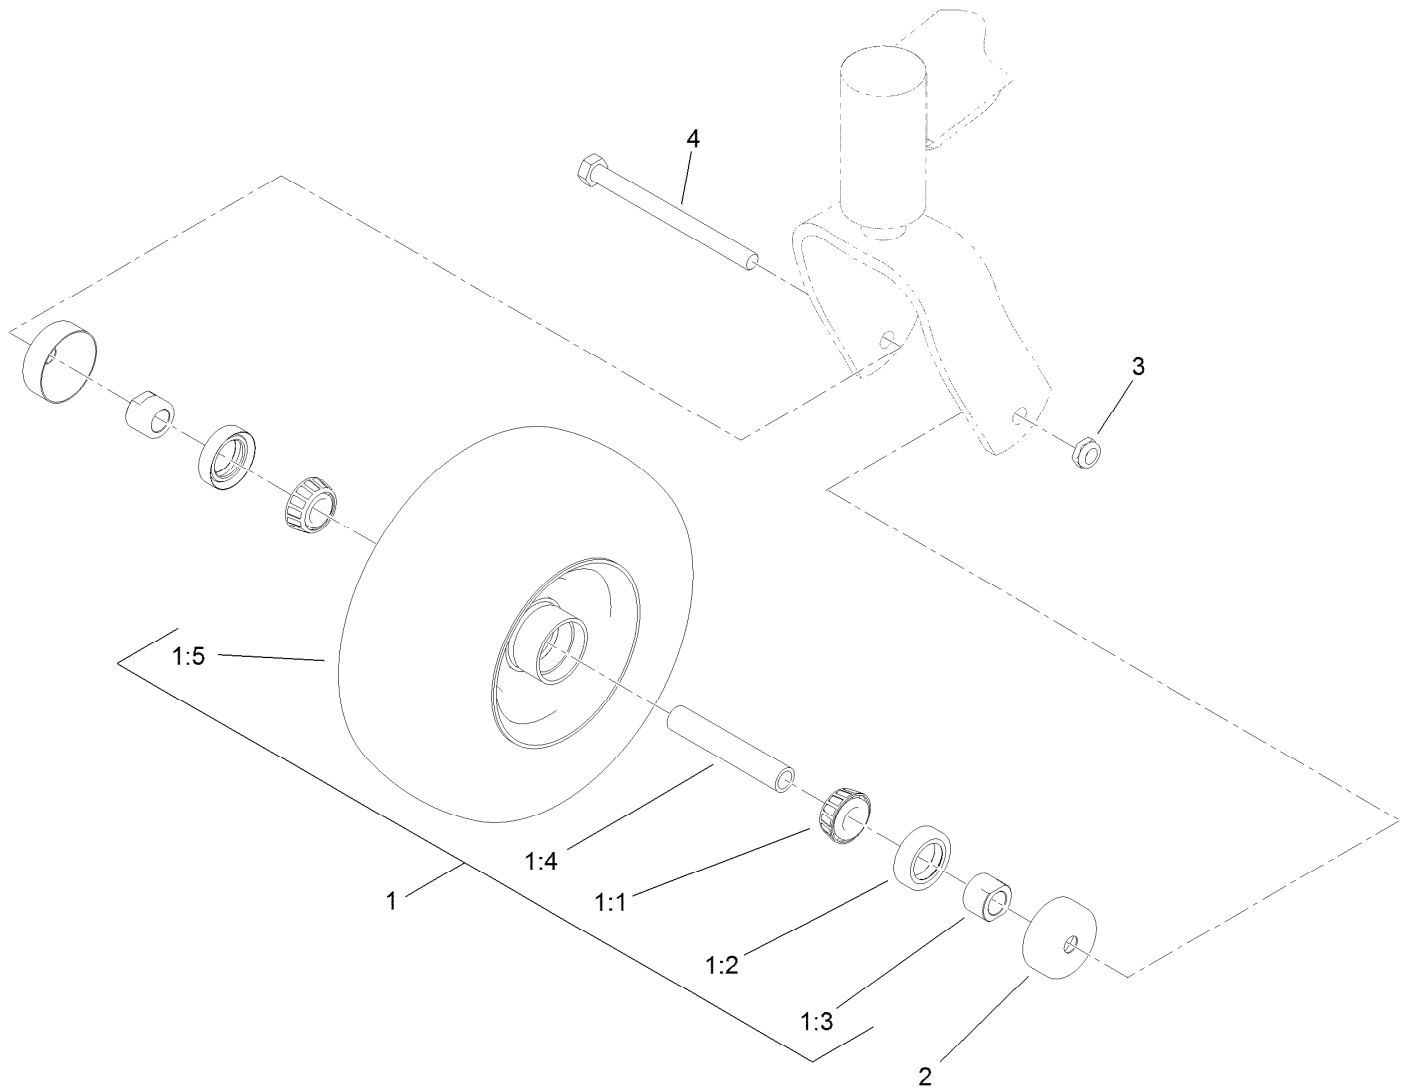

Wheel and Bearing Assembly No. 112-3810 (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Wheel And Bearing ASM ●
1:1	1-633585	2	Bearing-Cone, Taper
1:2	103-0063	2	Seal-Caster
1:3	103-3051	2	Spacer-Nut ■
1:4	103-3157	1	Axle-Caster

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1:5	110-9965	1	Wheel And Tire ASM
2	103-2768	2	Guard-Seal
3	3296-45	1	Nut-Lock, NI
4	325-20	1	Screw-HH

● Not serviced separately

■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on spacer nut


Park Brake Assembly

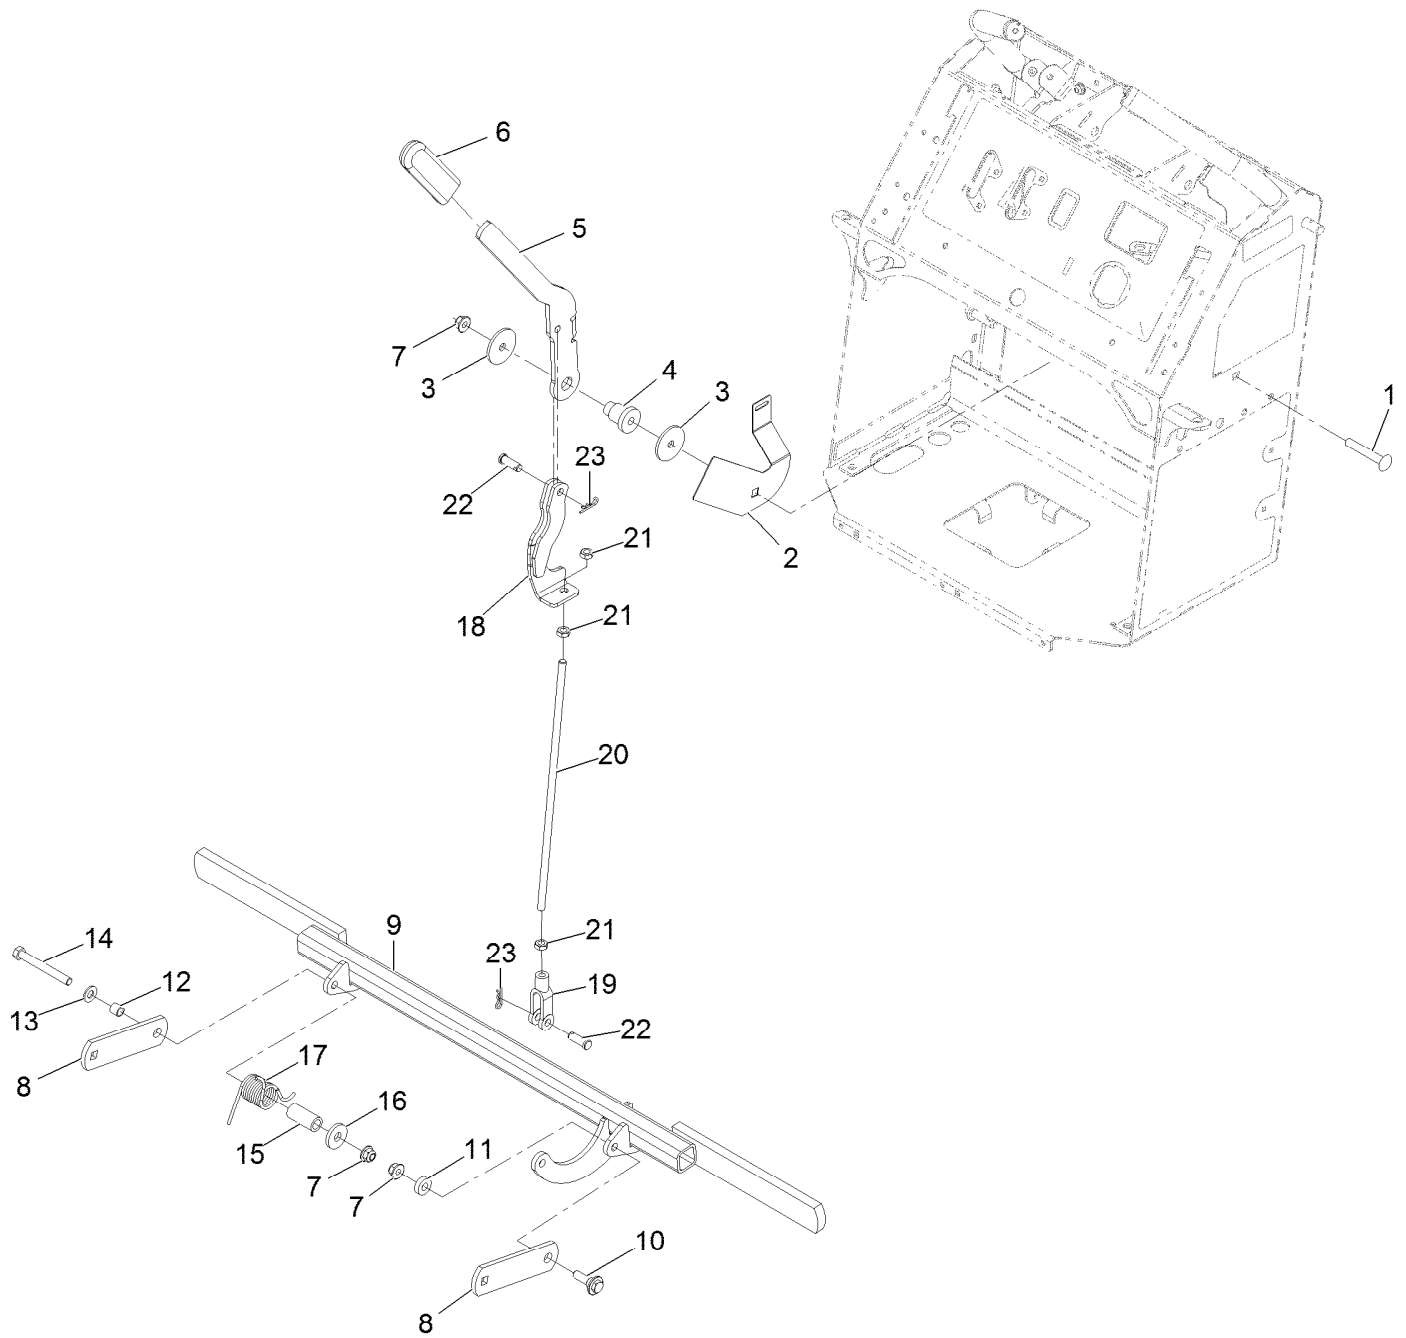

Park Brake Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3231-44	1	Bolt-Carriage 3/8-16 X 2 1/2	12	117-9684	1	Spacer
2	117-0452-03	1	Plate-Switch, Brake	13	3256-24	1	Washer-3/8 Sae
3	63-7400	2	Washer-Rebound	14	323-20	1	Screw-HH 3/8-16 X 3-1/4
4	106-3214	1	Mount-Pulley	15	117-9683	1	Spacer
5	117-5759-03	1	Lever-Brake	16	117-9682	1	Spring-Torsion
6	1-633268	1	Grip-Lever	17	1-373034	1	Washer
7	104-8301	3	Nut-Nyloc 3/8-16 Flg	18	119-8780-03	1	Arm-Brake
8	114-5186-01	2	Support-Brake	19	1-633131	1	Yoke-Linkage, Brake
9	119-8730-03	1	Bar-Brake	20	119-7244	1	Rod-Brake
10	614672	1	Screw-Shoulder 3/8-16 X 1.295	21	3220-3	3	Nut-Jam 3/8-24
11	5-0652	1	Spacer	22	283-2	2	Pin-Clevis 3/8 X 1 1/6
				23	3290-307	2	Pin-Cotter


Deck Lift Assembly

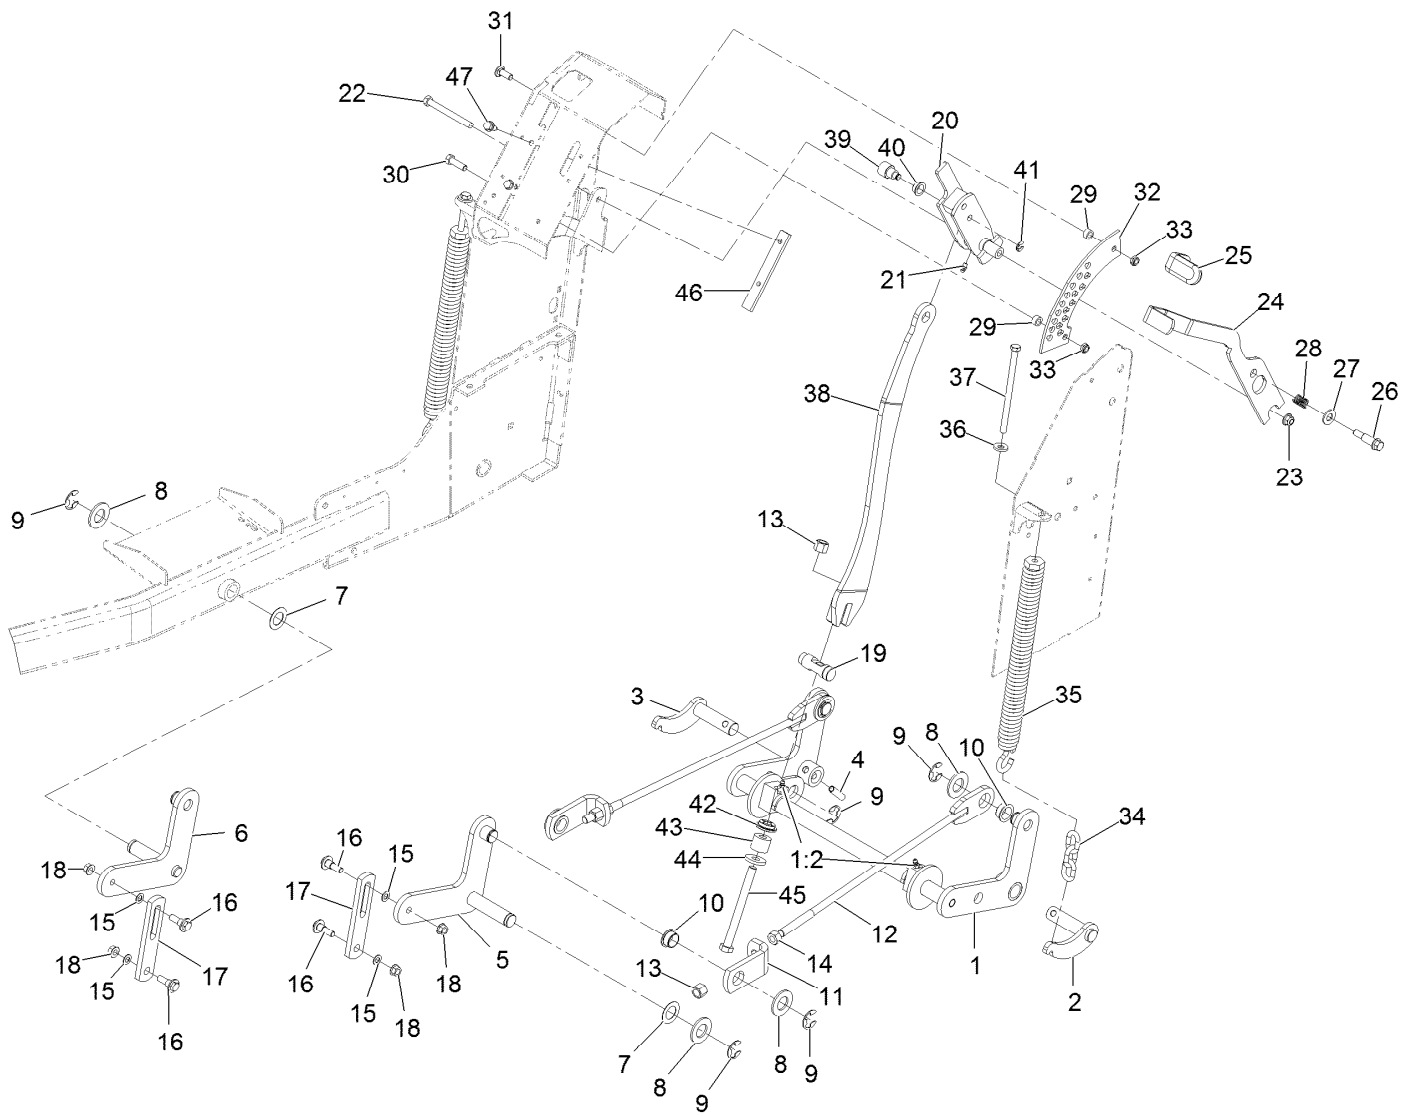

Deck Lift Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-3103	1	Rear Crossshaft ASM	24	114-1878-03	1	Lever-HOC
1:2	302-11	2	Zerk-45° 1/4-28	25	1-633268	1	Grip-Lever
2	116-3104-01	1	Shaft-Pivot, LH	26	66-0561	1	Screw-Shoulder
3	116-3105-01	1	Shaft-Pivot, RH	27	3256-26	1	Washer-1/2 Sae
4	116-3107	2	Pin-Spiral	28	65-9940	1	Spring
5	121-5993-01	1	Arm-Lift, LH	29	111044	2	Bushing
6	121-5994-01	1	Arm-Lift, RH	30	323-7	1	Screw-HH 3/8-16 X 1 1/4
7	110-6767	2	Washer-Thrust	31	3231-22	1	Bolt-Carriage 3/8-16 X 1
8	3256-29	6	Washer-7/8 Sae	32	114-5307	1	Bracket-HOC
9	32151-103	7	E-Ring	33	3296-59	2	Nut-Nyloc 3/8-16 Thin
10	116-2909	4	Bearing-Flange	34	103-9859	2	Chain-Decklift
11	116-2901	2	Bracket-Lift Rod	35	116-0886	2	Extension Spring ASM
12	116-8676	2	Lift Rod ASM	36	98-5975	2	Washer-Spring Disc 3/8
13	3296-23	3	Nut-Nyloc 1/2-13	37	323-58	2	Bolt-HH 3/8-16 X 6 Tap
14	3217-9	2	Nut-Hex 1/2-13	38	116-2939	1	Bar-Lift
15	40-1940	4	Washer	39	116-3048	1	Hub-Pivot
16	109-9840	4	Screw-Hex Flange 3/8-16 X .80	40	116-3047	1	Bearing-Flange
17	117-0519	2	Link-Lift	41	32151-47	1	Ring-Retaining
18	32128-21	4	Nut-3/8-16 Flanged Side Lock	42	116-3625	1	Seat-Spring
19	114-5274	1	Pin-HOC	43	116-3241	1	Spring-Urethane
20	114-3512	1	HOC Handle ASM	44	92-2651	1	Washer
21	302-5	1	Zerk 1/4-28 Str Thrd Forming	45	325-22	1	Screw-HH 1/2-13 X 5 1/2
22	323-42	1	Screw-HH 3/8-16 X 3 3/4	46	116-3124	1	Skid-Handle, Lift
23	104-8301	1	Nut-Nyloc 3/8-16 Flg	47	32144-70	2	Screw-HWH 5/16-18 X 3/4 Tf


Platform Group

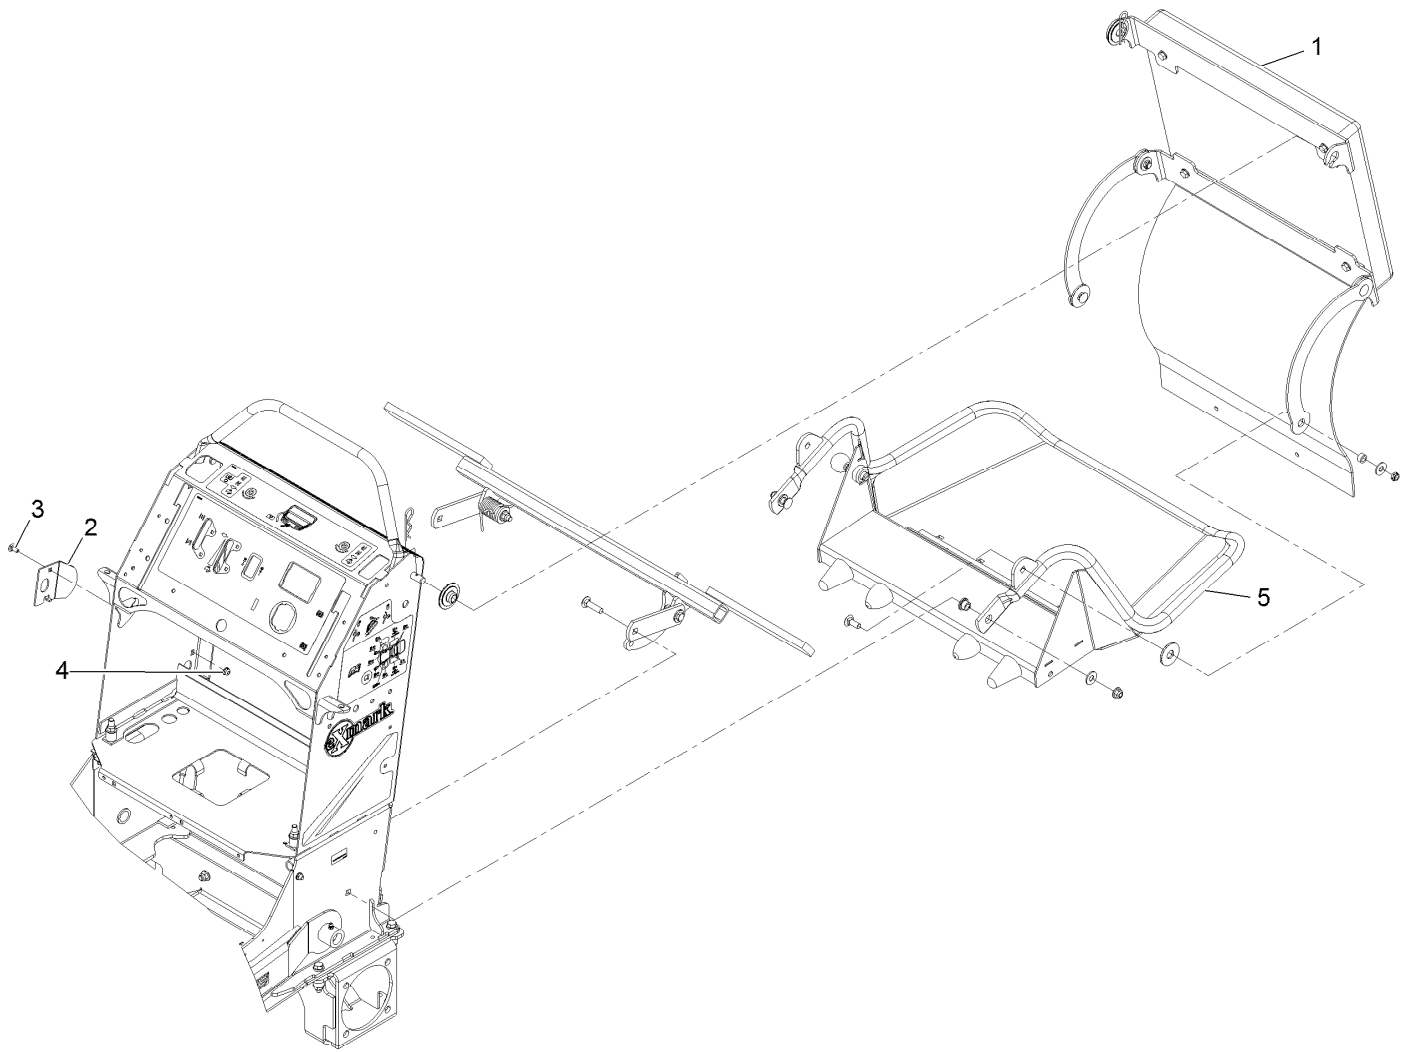

Platform Group (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-1210	1	ASM, Cushion	4	104-7201	1	Nut-Nyloc 1/4-20 Flg
2	119-7312	1	Plate-Striker	5	116-1804	1	ASM,Platform
3	3229-11	1	Bolt-Carriage 1/4-20 X 5/8				


Cushion Assembly No. 126-1210

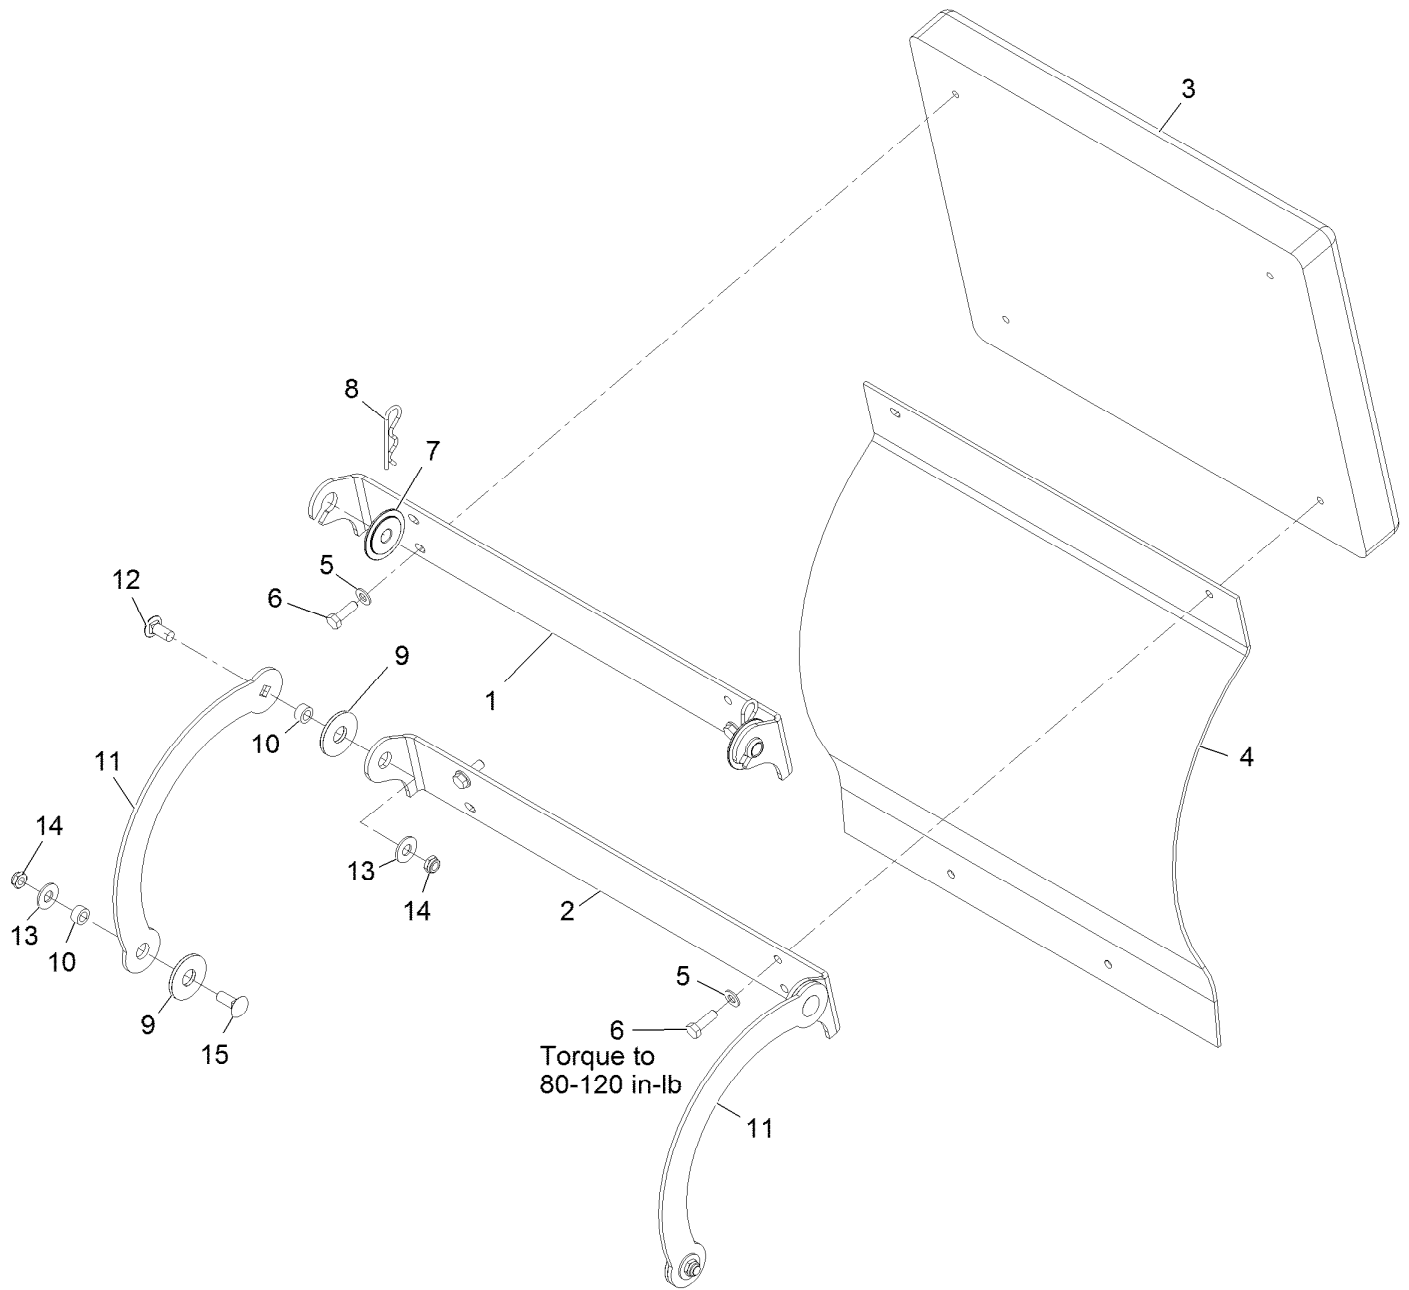

Cushion Assembly No. 126-1210 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-2757-03	1	Hinge-Pad	8	3290-355	2	Pin-Hair
2	116-2061-03	1	Hinge-Pad	9	114-0463	4	Washer-Friction, Composite
3	116-1790	1	Pad,Grey Cushion	10	111044	4	Bushing
4	126-0362	1	Shield, Rear	11	114-1915-03	2	Link-Pad
5	3256-23	4	Washer-5/16 Sae	12	3231-27	2	Bolt-Carriage 3/8-16 X 7/8
6	116-0648	4	Screw-HH 5/16-18 X 1 W/Patch	13	3256-4	4	Washer-3/8 Std
7	116-2886	2	Slide-Bushing	14	3296-59	4	Nut-Nyloc 3/8-16 Thin
				15	3231-2	2	Bolt-Carriage 3/8-16 X 1

Platform Assembly No. 116-1804

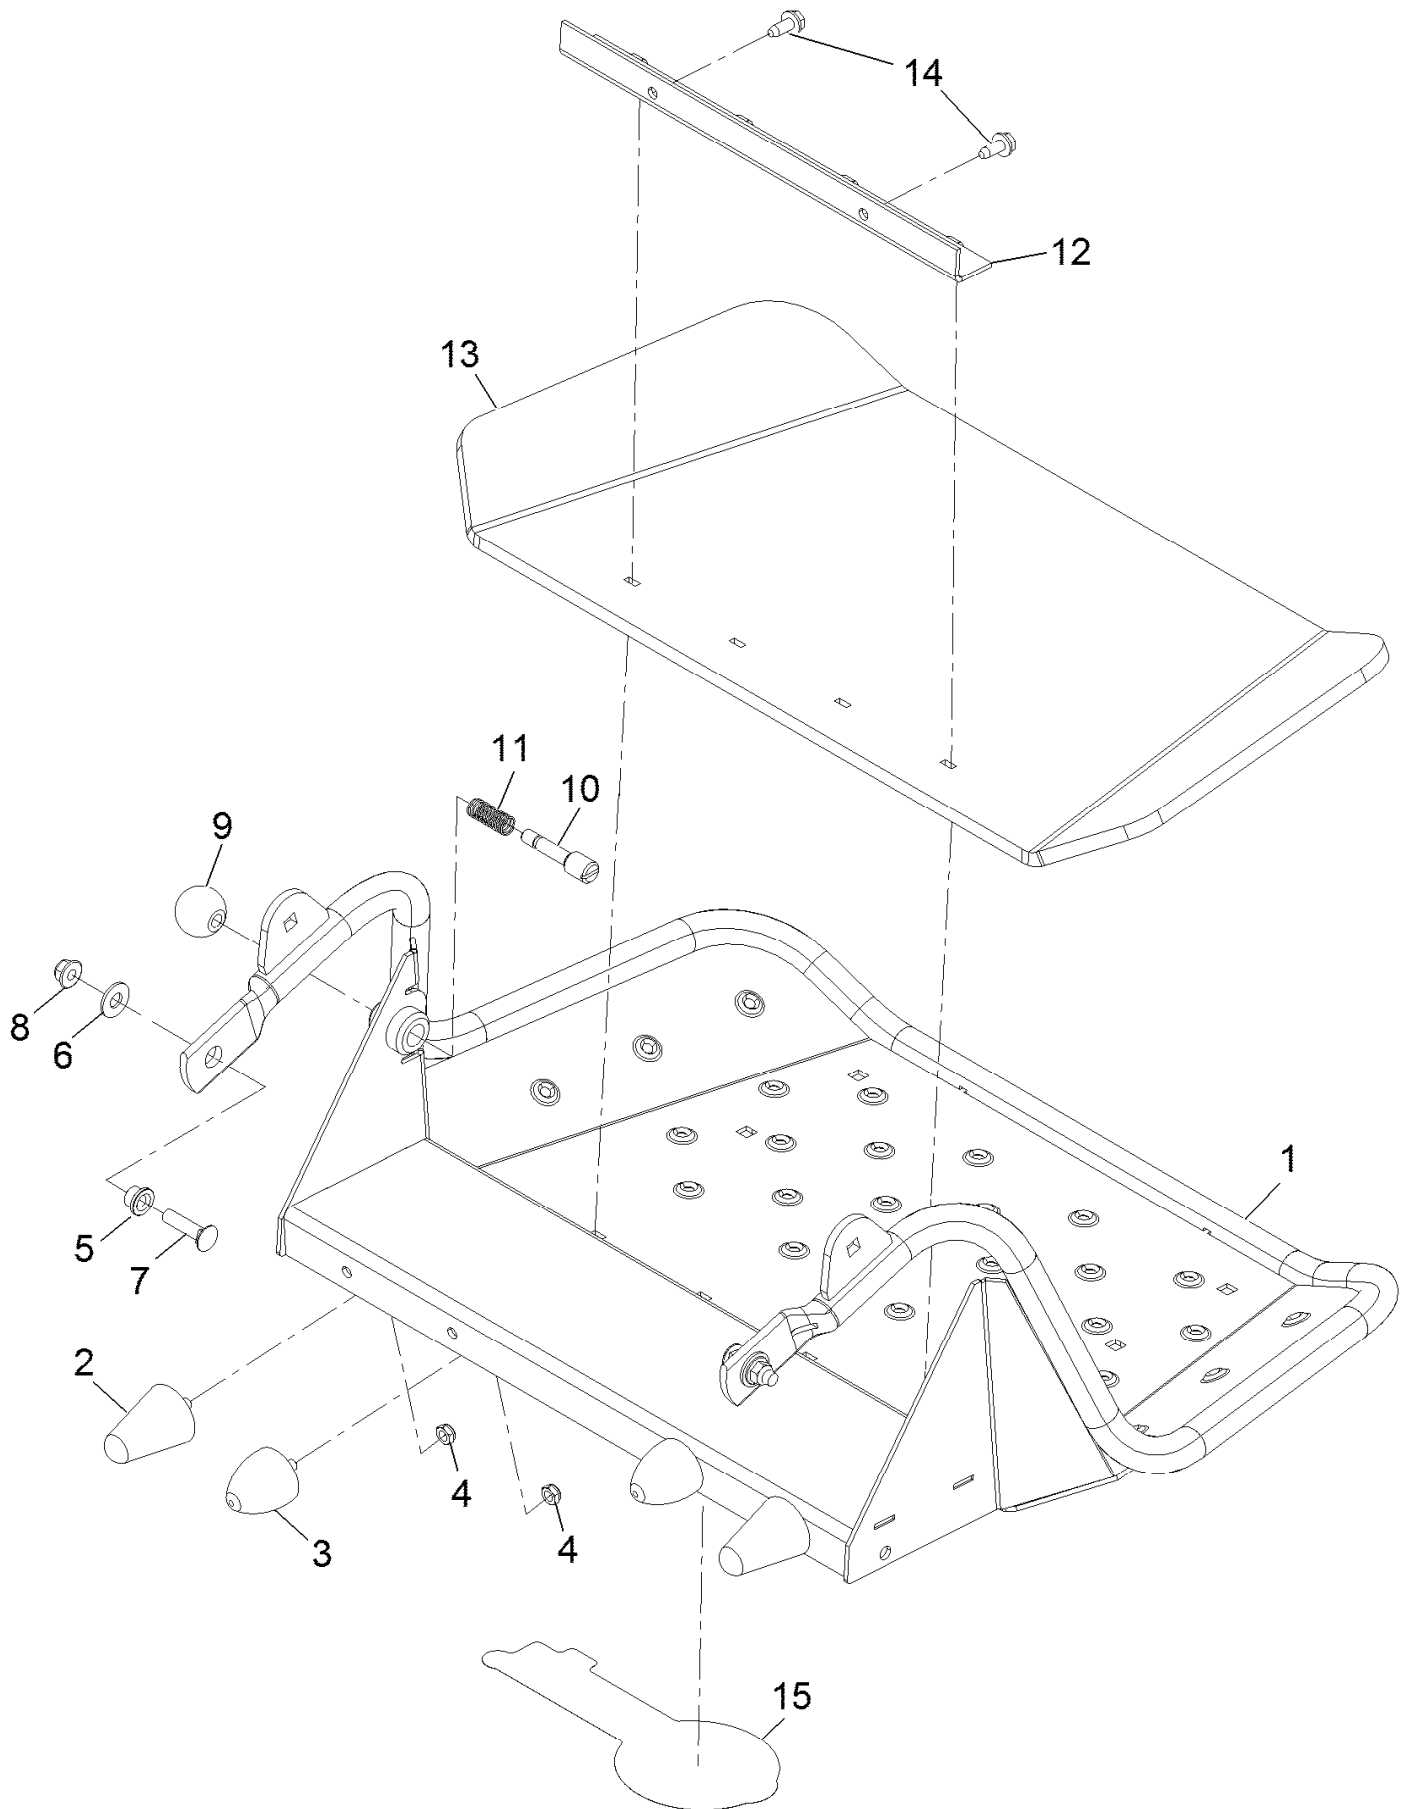


Platform Assembly No. 116-1804 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	117-9641-03	1	Platform ASM	9	1-603175	1	Knob-Ball
2	114-1925	2	Bumper-Rubber	10	119-8650	1	Pin-Latch ●
3	114-1926	2	Bumper-Rubber	11	114-5348	1	Spring
4	3296-47	4	Nut-Nyloc 5/16-18 Thin	12	114-1920-03	1	Clamp-Shield
5	109-8788	2	Bushing-Flanged	13	114-5349	1	Mat-Foot
6	3256-4	2	Washer-3/8 Std	14	32144-70	2	Screw-HWH 5/16-18 X 3/4 Tf
7	3231-4	2	Bolt-Carriage 3/8-16 X 1 1/2	15	126-6991	1	Decal-Exmark Logo
8	104-8301	2	Nut-Nyloc 3/8-16 Flg				

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

Ground Drive Assembly

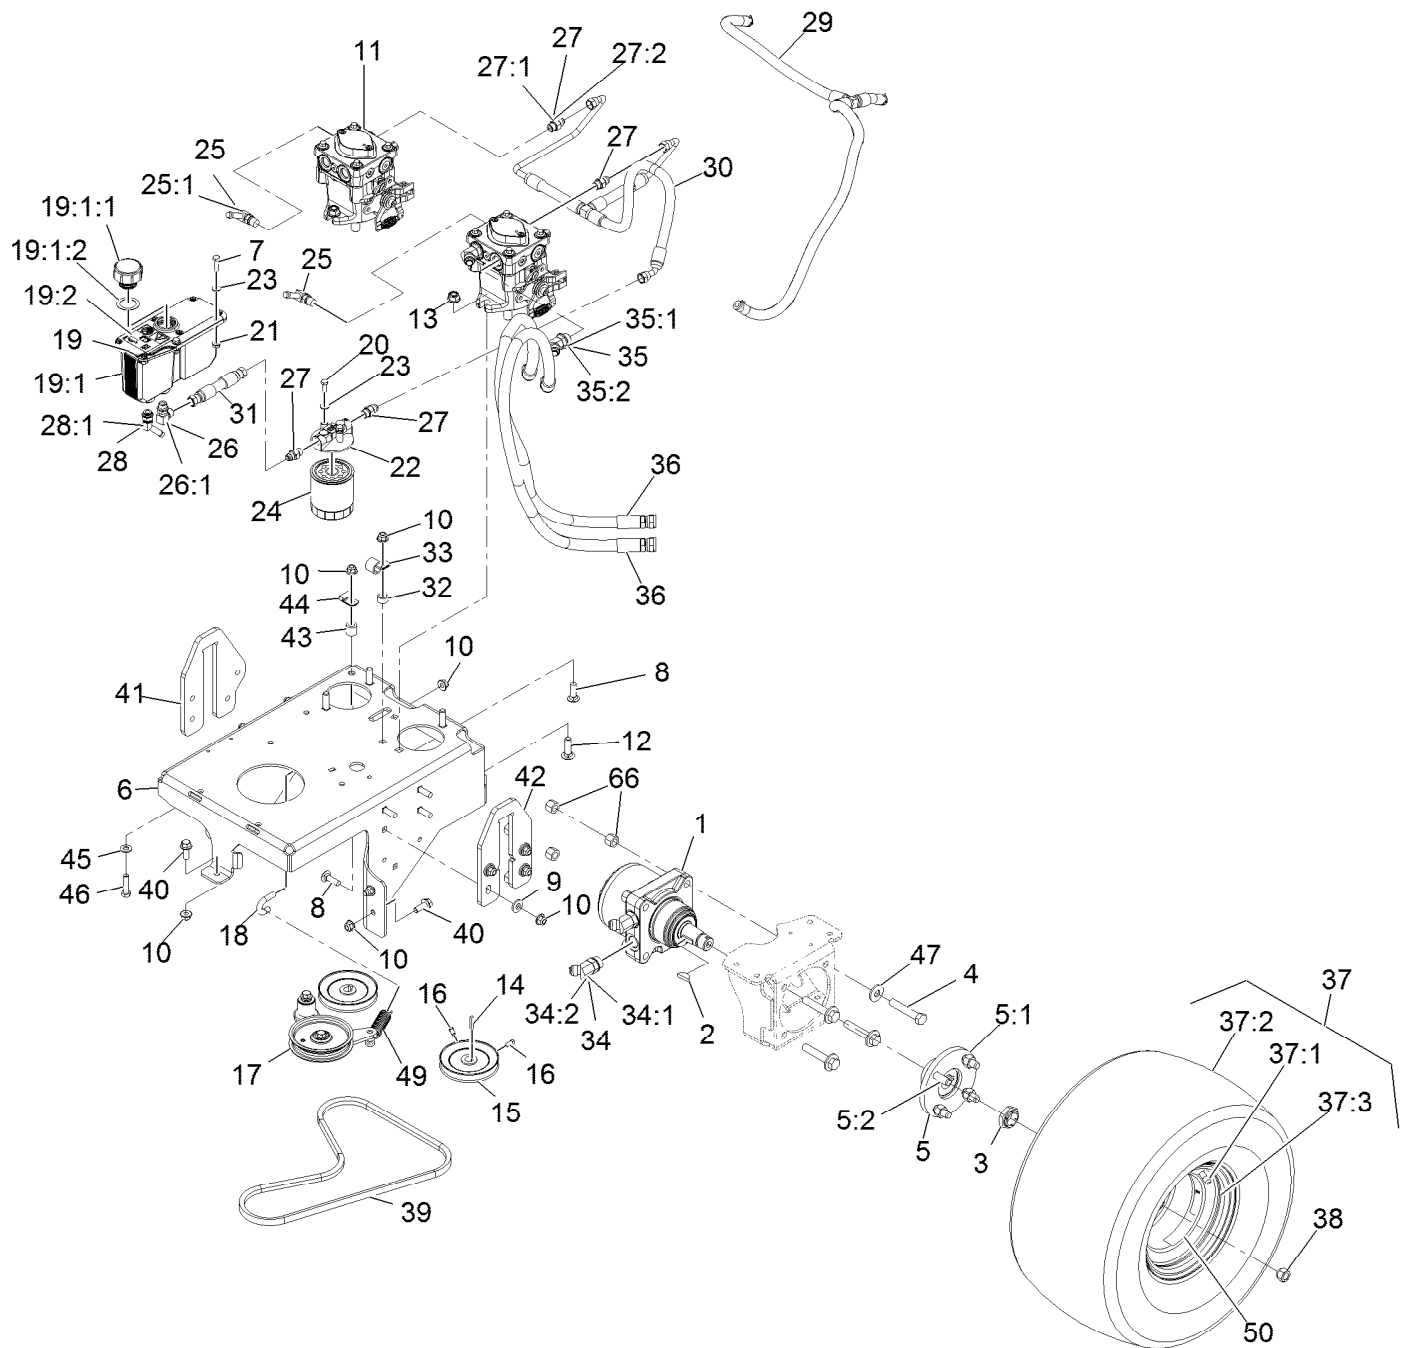

Ground Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-0524	2	Motor-Wheel	27	103-2156	4	Adapter-Straight
2	3257-8	2	Key-Woodruff	27:1	1-603921	1	O-Ring-Sae #6
3	116-1399	2	Locknut	27:2	103-1020	1	O-Ring-37 Flare #6
4	325-11	8	Screw-HH 1/2-13 X 2 3/4	28	103-1807	1	Fitting-Barbed, 45 DEG
5	18-3209	2	Wheel Hub / Stud ASM	28:1	237-42	1	O-Ring
5:1	10-6870-03	1	Hub-Wheel	29	116-2579	1	Tank Hose ASM
5:2	10-6830	4	Stud-Type, Drive	30	116-2650	1	Hose Assembly - Charge
6	116-8525-01	1	Base, Engine [red]	31	116-2604	1	HYD Hose ASM
7	321-6	2	Screw-HH 1/4-20 X 1	32	1-653069	1	Spacer-Wheel
8	3231-25	9	Bolt-Carriage 3/8-16 X 1 1/4	33	1-633396	1	Clip-Loom 5/8
9	98-5975	8	Washer-Spring Disc 3/8	34	1-523222	4	Fitting-HYD, 45 DEG
10	104-8301	16	Nut-Nyloc 3/8-16 Flg	34:1	1-603919	1	O-Ring-Sae #10
11	116-2572	2	Pump - Hydraulic	34:2	1-603992	1	O-Ring-37 Flare #8
12	3232-3	4	Bolt-Carriage 7/16-14 X 1 1/2	35	1-523221	4	Fitting-HYD, 45 DEG
13	114-8417	4	Nut-HF, NI	35:1	1-603920	1	O-Ring-Sae #8
14	1-807272	2	Key-5Mm X 5Mm X 25Mm	35:2	1-603992	1	O-Ring-37 Flare #8
15	105-5648	2	Pulley-Pump ■	36	116-6902	4	HYD Hose ASM
16	3241-5	4	Setscrew-SQH 1/4-20 X 5/8	37	120-6465	2	Wheel/Tire ASM
17	116-9980	1	Pump Idler ASM	37:1	116-4605	1	Rim-8 Inch
18	116-8526	1	Anchor, Spring	37:2	120-6466	1	Tire
19	116-2066	1	ASM,Reservoir W/Decals ▲	37:3	232-27	1	Stem-Valve
19:1		1	Reservoir-HYD ●	38	242-50	8	Nut-Lug 1/2-20
19:1:1	103-1948	1	Cap-Reservoir, HYD	39	114567	1	Belt-V
19:1:2	103-1949	1	Gasket-Cap	40	3234-42	5	Screw HHF 3/8-16 X 1
19:2	115-4212	1	Decal-Warning	41	116-4922	1	Plate-Lift, RH
20	321-4	2	Screw-HH 1/4-20 X 3/4	42	116-3546	1	Plate, Lift LH
21	32128-32	2	Nut-Hex 1/4-20 Side Lock	43	121-1760	1	Spacer
22	104-7836	1	Filter-Head	44	116-3362	1	Clip-Tube
23	3256-22	4	Washer-1/4 Sae	45	3256-24	1	Washer-3/8 Sae
24	109-4180	1	Element, Oil Filter	46	323-8	1	Screw-HH 3/8-16 X 1 1/2
25	100-4887	2	Fitting-Barbed, 90 DEG	47	1-513435	8	Washer-Spring Disc 1/2
25:1	237-42	1	O-Ring	49	108-4056	1	Spring-Extension
26	103-1802	1	Fitting-HYD, 90 DEG	50	126-2055	2	Decal-Torque, Wheel Hub Lug
26:1	1-603921	1	O-Ring-Sae #6	66	3296-23	8	Nut-Lock, NI


● Not serviced separately

▲ Use Exmark Premium Hydro Oil P/N 109-9828 (32oz)

◆ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

■ Apply anti-seize compound in bore.


Pump Idler Assembly No. 116-9980

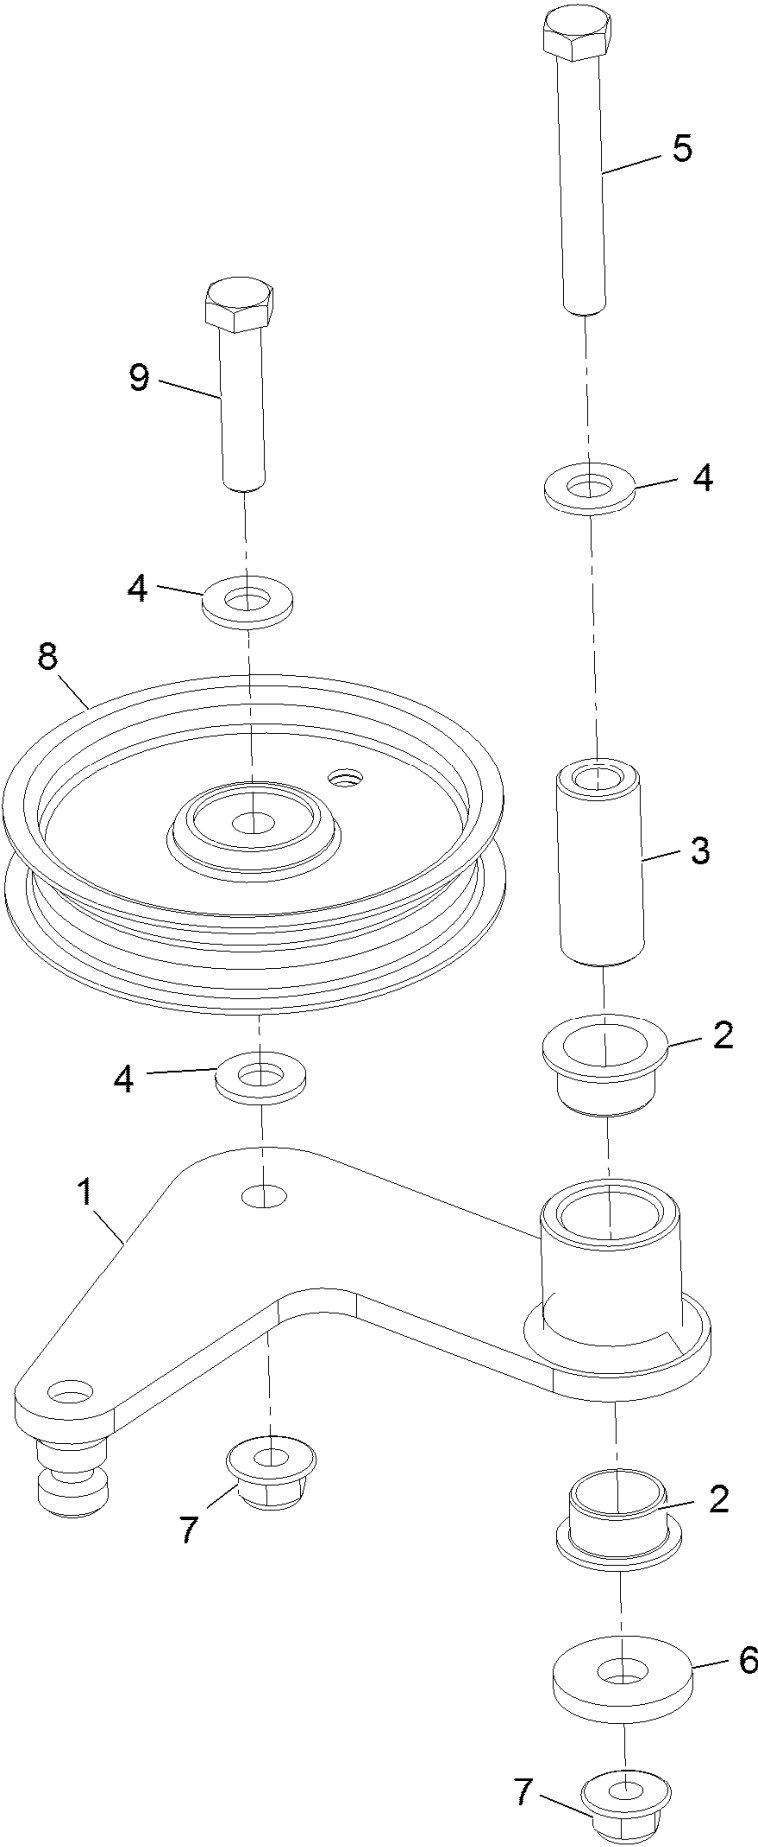

Pump Idler Assembly No. 116-9980 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-8717	1	Idler Arm ASM	6	1-373034	1	Washer
2	109-8054	2	Bushing-Flanged	7	104-8301	2	Nut-Nyloc 3/8-16 Flg
3	116-8718	1	Spacer, Pivot	8	93-1622	1	Pulley-Idler
4	3256-24	3	Washer-3/8 Sae	9	323-9	1	Screw-HH 3/8-16 X 1 3/4
5	323-13	1	Screw-HH 3/8-16 X 2 3/4				


Control Assembly

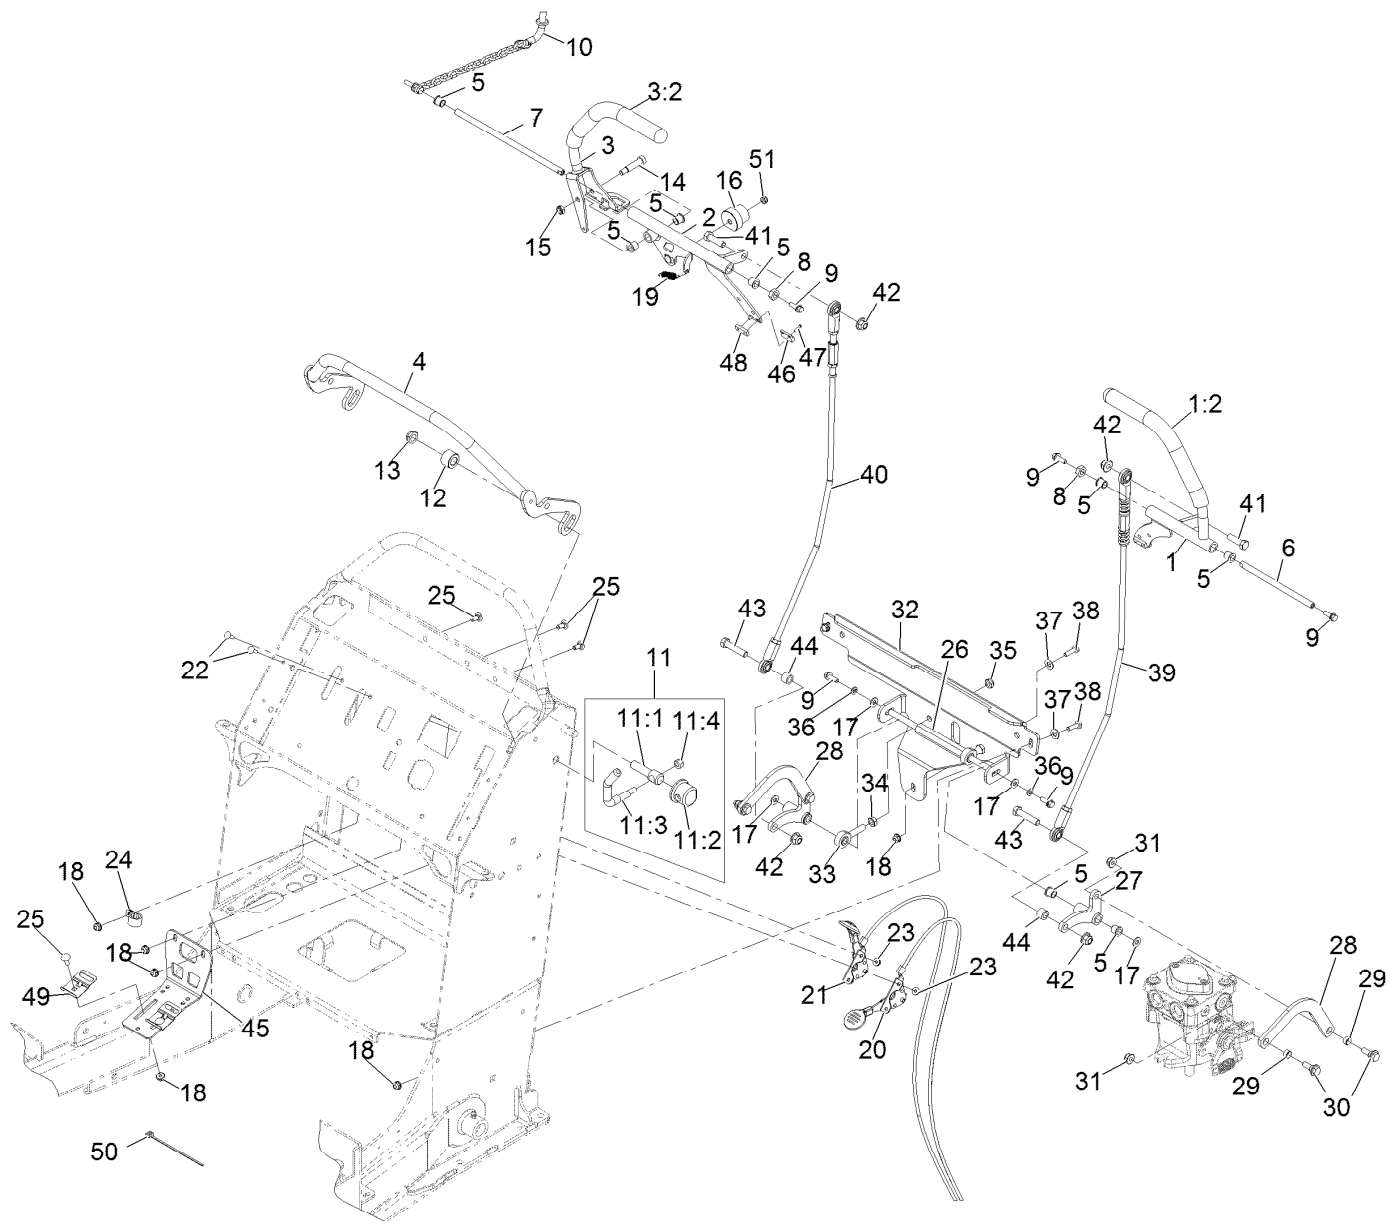

Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-4970	1	Lever ASM, LH	24	2412-87	1	Clamp-Cable
1:2	116-2357	1	Grip-Handle, Control	25	3229-11	5	Bolt-Carriage 1/4-20 X 5/8
2	116-9817-03	1	Weld, Motion Control	26	116-3119	1	Shaft-Bellcrank Pivot
3	116-9815	1	ASM, Lever W/ Grip, Rt	27	116-4975	2	Bellcrank-Control, Motion
3:2	116-2357	1	Grip-Handle, Control	28	116-4973	2	Link-Bellcrank, Pump
4	116-6985-03	1	Tube ASM, Front Speed Control [	29	116-4976	4	Bushing-Sleeve
5	103-9928	10	Bearing	30	116-2670	4	Screw-Shoulder HHF 5/16-18 X .96
6	116-4978	1	Shaft-Pivot, Motion Control	31	104-8300	4	Nut-Nyloc 5/16-18 Flg
7	116-4979	1	Shaft-Pivot, Motion Control	32	116-3202-03	1	Bracket-Bellcrank
8	116-4198	2	Spacer-Shaft, Drive Lever	33	1-613204	2	Balljoint
9	117-8304	5	Screw-Hex Flange 1/4-20 X 3/4	34	3220-3	2	Nut-Jam 3/8-24
10	114-0409	1	HOC Pin ASM	35	3296-5	2	Nut-Nyloc 3/8-24 Thin
11	107-1664	2	Lever ASM	36	3253-3	2	Washer-Lock 1/4
11:1	106-3239	1	Screw-Lock	37	3256-23	3	Washer-5/16 Sae
11:2	107-1644	1	Cap-Lock	38	321-5	3	Screw-HH 1/4-20 X 7/8
11:3	106-3241	1	Lever-Lock	39	116-4936	1	Linkage-Tracking Control, LH
11:4	3296-29	1	Nut-Nyloc 5/16-18	40	116-4937	1	Linkage-Tracking Control, RH
12	116-2319	2	Spacer-Clamp	41	323-7	2	Screw-HH 3/8-16 X 1 1/4
13	3296-45	2	Nut-Nyloc 1/2-13 Thin	42	104-8301	4	Nut-Nyloc 3/8-16 Flg
14	114-0239	1	Screw-Shoulder 5/16-18 X 1/2	43	323-9	2	Screw-HH 3/8-16 X 1 3/4
15	3296-47	1	Nut-Nyloc 5/16-18 Thin	44	52-2480	2	Spacer-Wheel
16	126-1499	1	Cam	45	116-4572	1	Bracket, Reed Switch
17	3256-22	4	Washer-1/4 Sae	46	116-2832	2	Actuator-Switch, Reed
18	104-7201	8	Nut-Nyloc 1/4-20 Flg	47	116-3330	4	Screw-HH #4-40 X 1/2 W/Nylon
19	114-0249	1	Spring-Extension	48	116-3227	2	Plate-Tapped
20	116-4276	1	Control-Throttle	49	116-4573	2	Clamp, Reed Switch
21	116-4277	1	Control-Choke	50	3290-378	1	Tie-Cable
22	1-807533	4	Bolt-Carriage #10-24 X 5/8	51	3296-56	1	Nut-Lock, NI
23	32128-17	4	Nut-Flange #10-24 Top Lock				

LH Tracking Control Linkage Assembly No. 116-4936

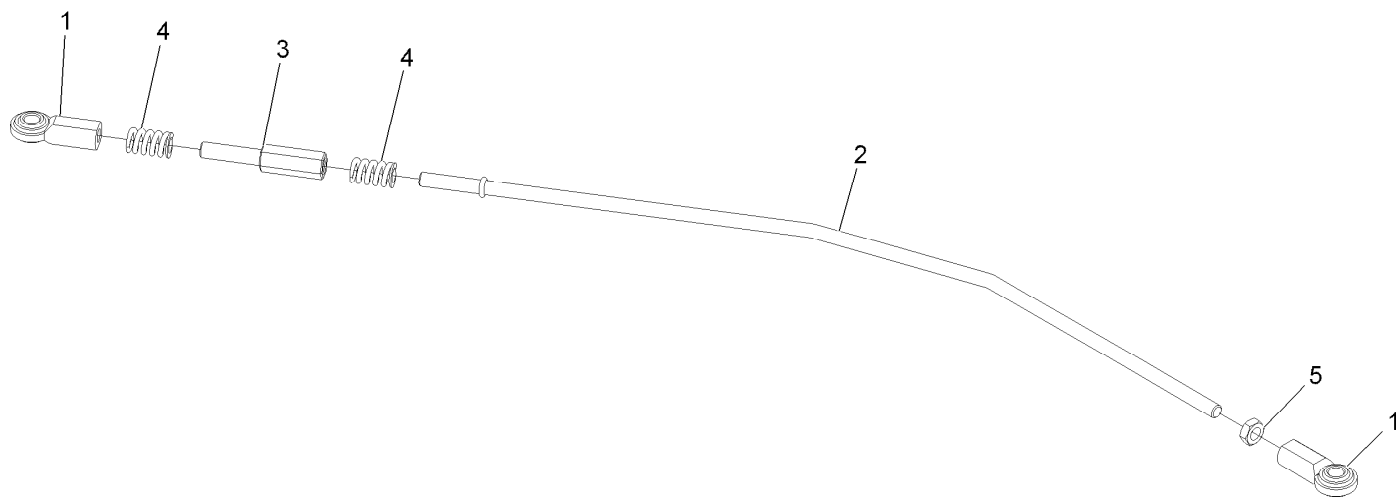


LH Tracking Control Linkage Assembly No. 116-4936 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	103-0608	2	Balljoint
2	116-4938	1	Link-Lower,Motion Control
3	116-4755	1	Rod-Adjustment

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	116-7560	2	Spring-Compression
5	3220-3	1	Nut-Jam 3/8-24

RH Tracking Control Linkage Assembly No. 116-4937

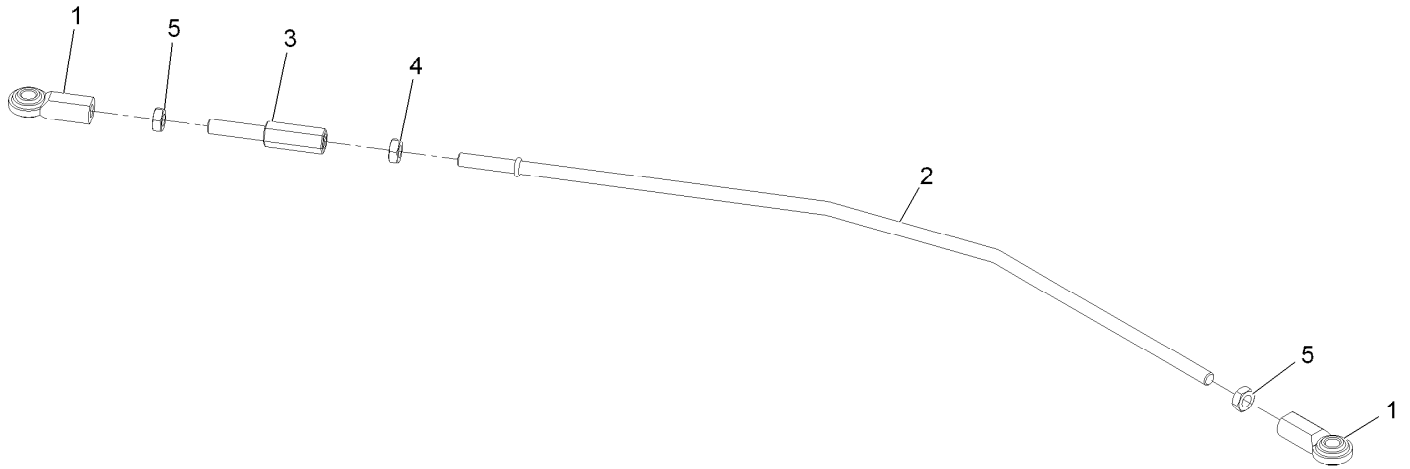


RH Tracking Control Linkage

Assembly No. 116-4937 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	103-0608	2	Balljoint
2	116-4938	1	Link-Lower,Motion Control
3	116-4755	1	Rod-Adjustment

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	3220-16	1	Nut-Jam 3/8-24 LH
5	3220-3	2	Nut-Jam 3/8-24


Fuel Assembly

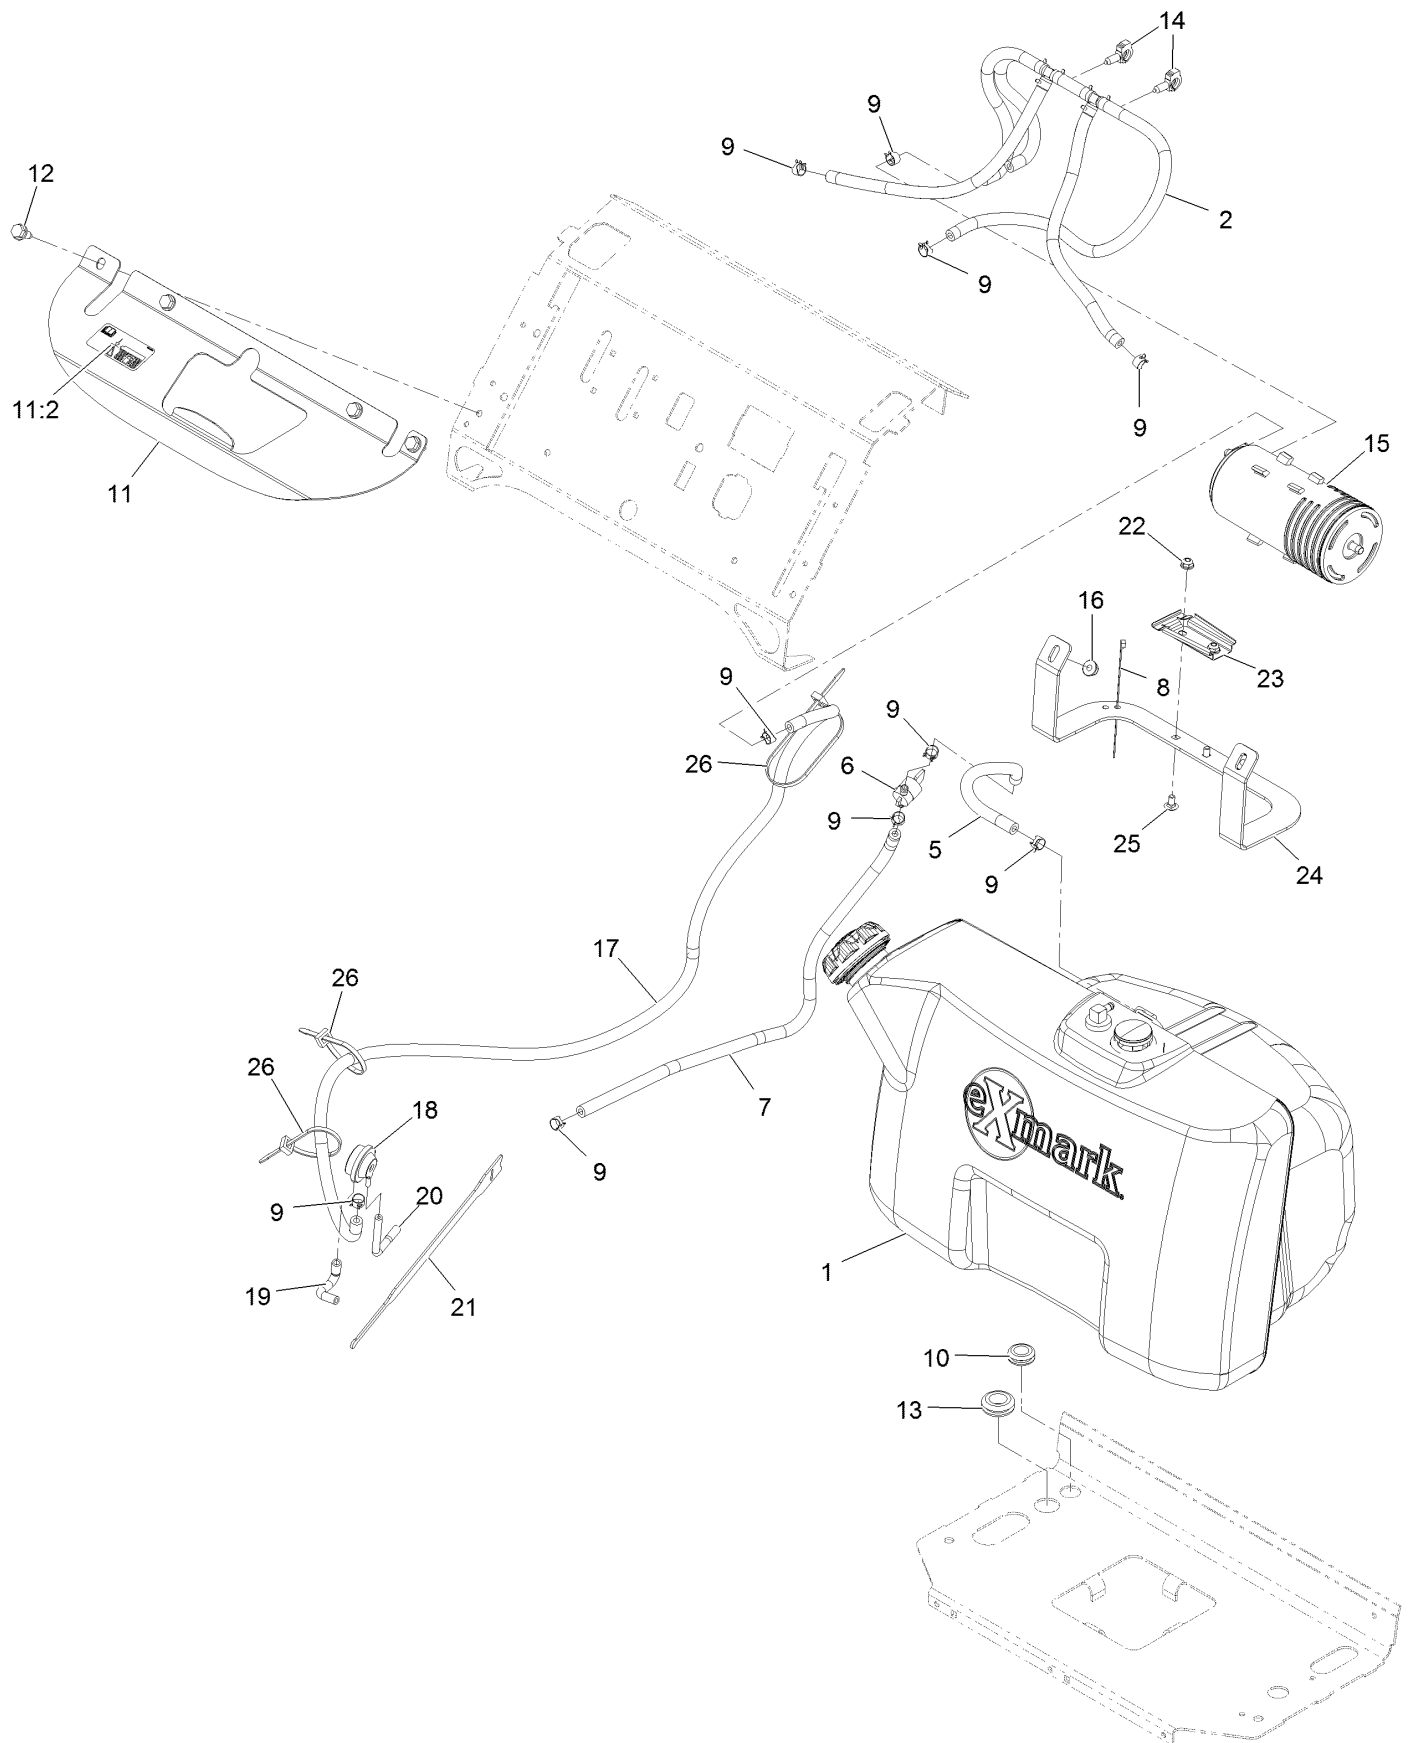

Fuel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	126-6922	1	Tank ASM-	15	117-1221	1	Canister-Carbon, 800Cc
2	116-5170	1	Vent ASM	16	104-8300	2	Nut-Nyloc 5/16-18 Flg
5	107-9297	1	Hose-Fuel	17	63-9720	1	Hose-Fuel
6	1-603770	1	Valve-Fuel	18	116-2232	1	Valve-Control, Vacuum
7	109-0301	1	Hose-Fuel	19	119-8502	1	Hose-Vent, Formed
8	1-303287	1	Tie-Cable 5 1/2 (Small)	20	119-8501	1	Hose-Vent, Formed
9	2412-98	10	Clamp-Hose	21	116-2469	1	Strap-Velcro, Cable Tie
10	112-7069	1	Grommet	22	104-7201	2	Nut-Nyloc 1/4-20 Flg
11	116-3088	1	Bracket-Tank	23	114-0292	1	Bracket-Canister, Carbon
11:2	116-8775	1	Decal-Fill, Fuel	24	116-5600-03	1	Bracket-Canister Mounting
12	32144-70	4	Screw-HWH 5/16-18 X 3/4 Tf	25	116-5611	2	Bolt-Carriage 1/4-20 X 1/2 Short Neck
13	117-2781	1	Grommet	26	3290-378	3	Tie-Cable
14	32180-040	2	Clip-Harness				

Fuel Tank Assembly No. 126-6922

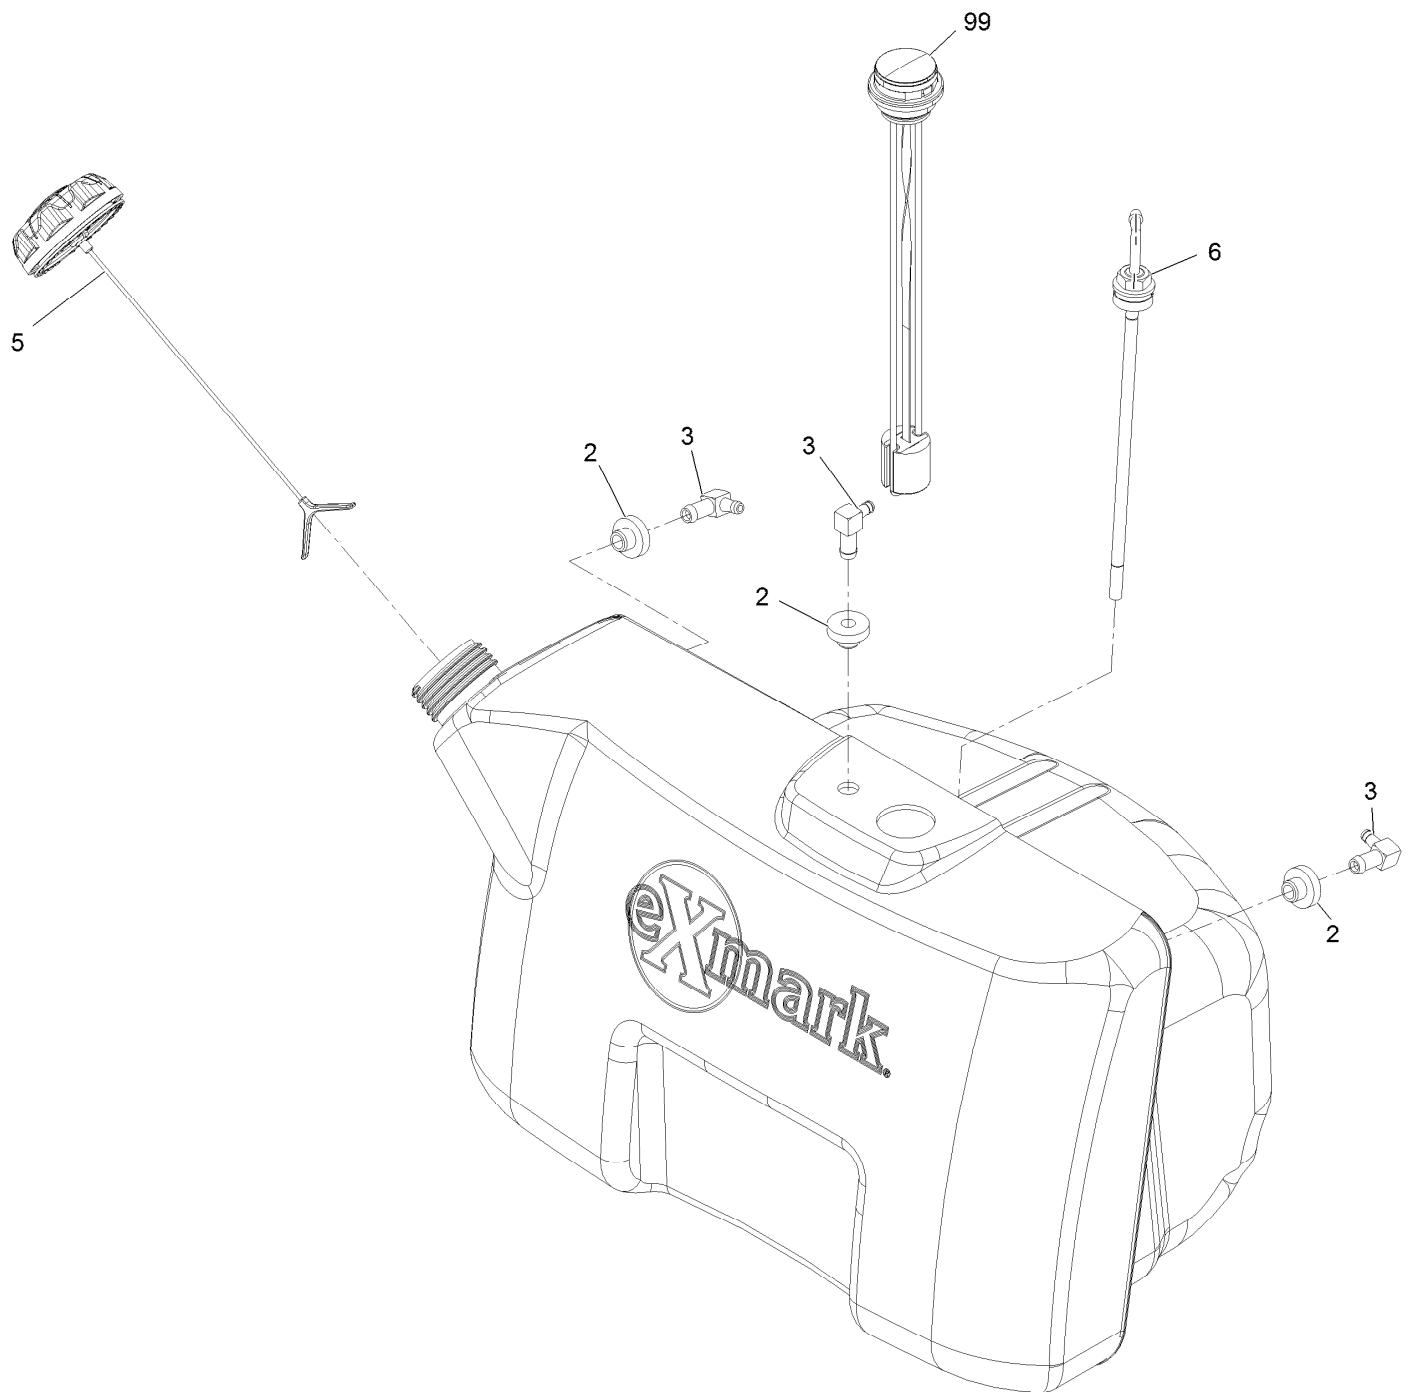


Fuel Tank Assembly No. 126-6922 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	46-6560	3	Bushing
3	1-643172	3	Elbow-90 DEG
5	126-1789	1	Cap-Fuel, Ratcheting

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	116-3408	1	Fitting-Fuel, Bulkhead
99	126-6924	1	Kit, Fuel Gage Replacement

Engine Assembly

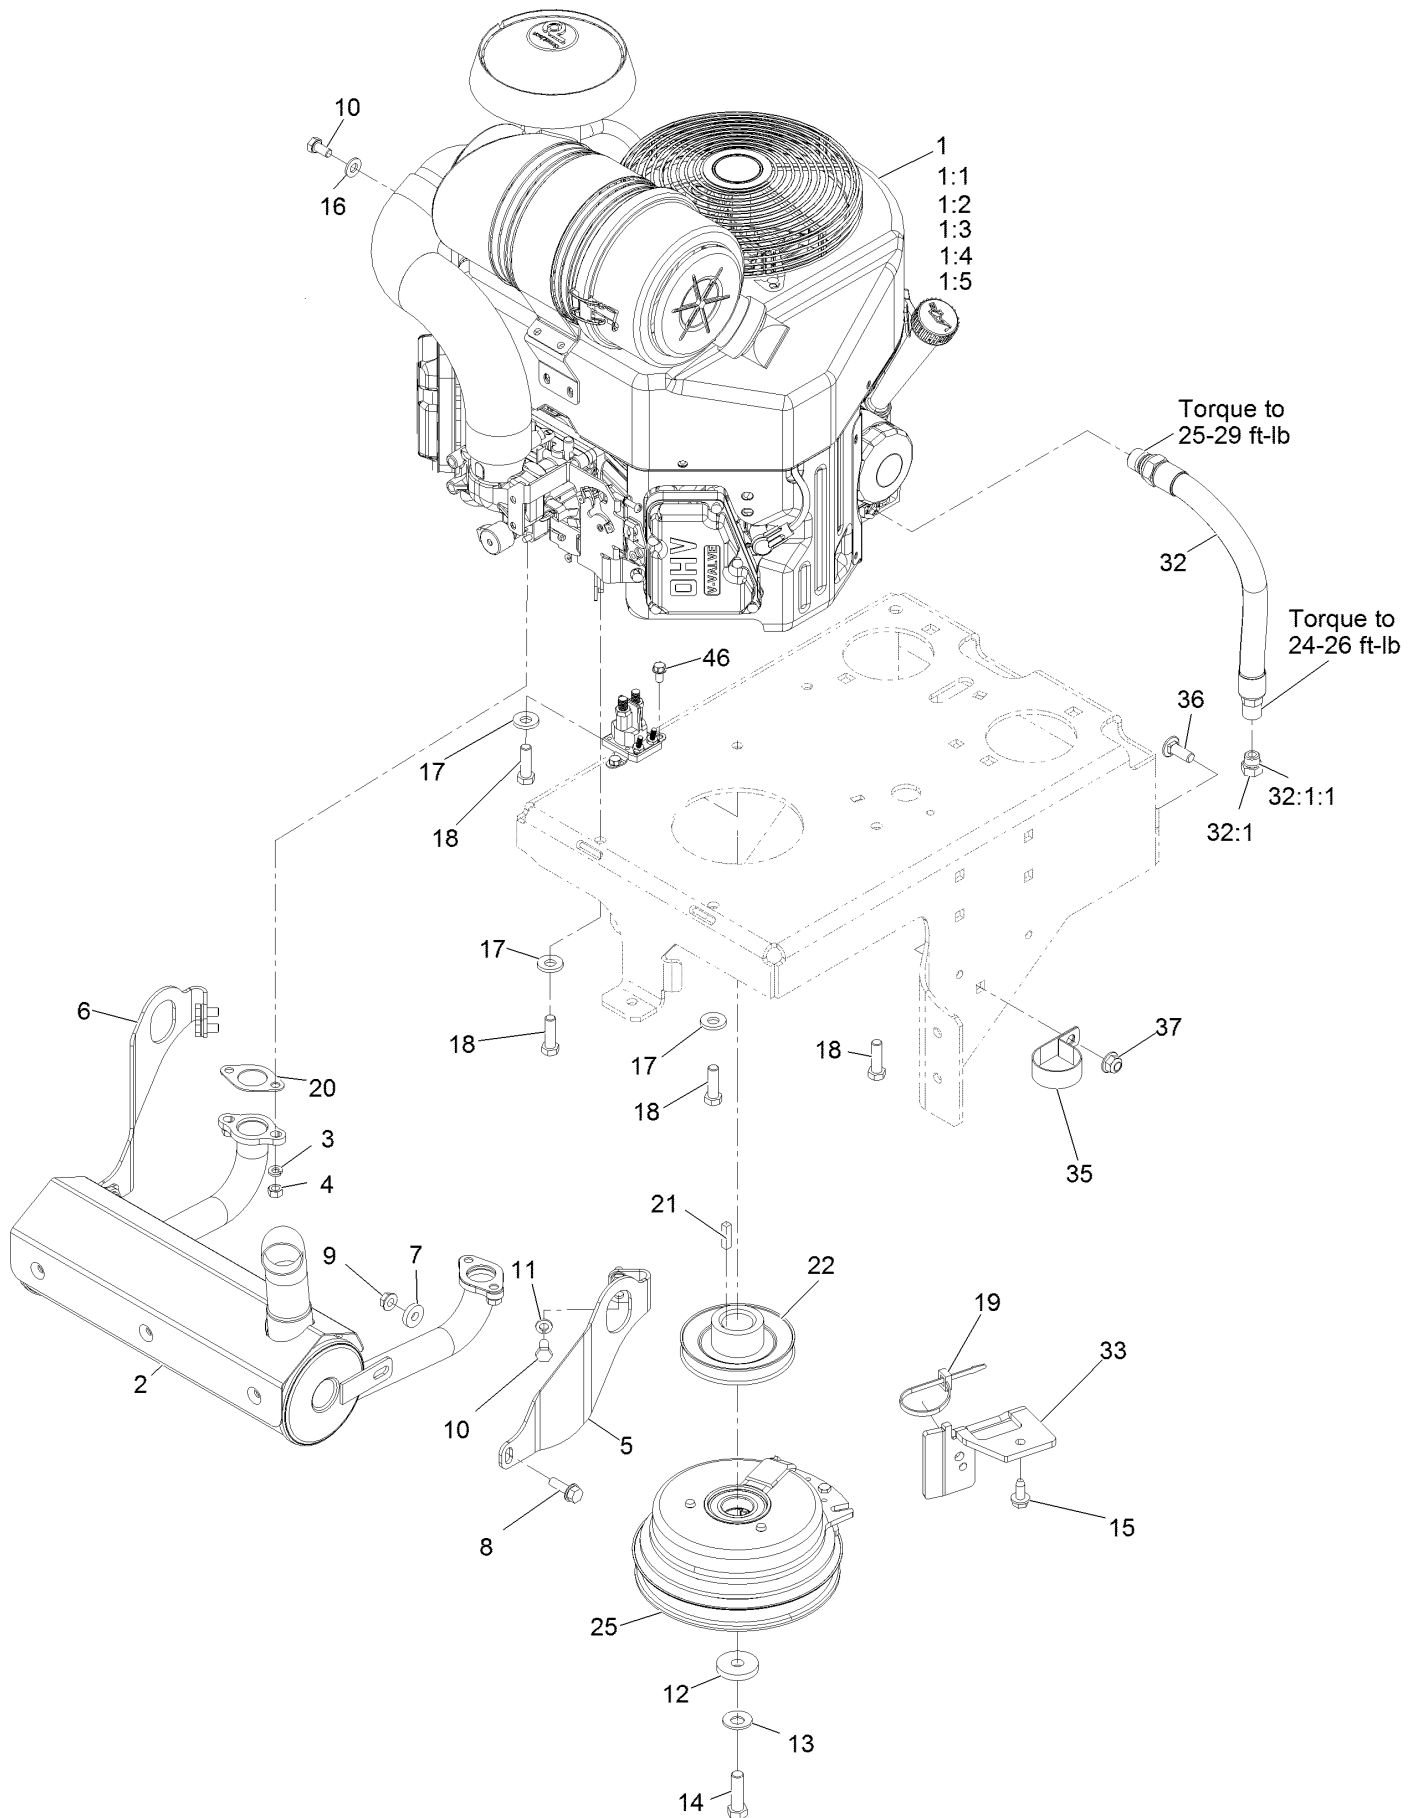

Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Engine-Kawasaki, Fx691V ■▲	15	32144-70	1	Screw-HWH 5/16-18 X 3/4 Tf
1:1	119-5852	1	Filter-Oil	16	33094-00	1	Washer
1:2	92-2153	1	Spark Plug ●	17	98-5975	3	Washer-Spring Disc 3/8
1:3	119-5944	1	Element-Filter, Air (Outer)	18	323-7	4	Screw-HH 3/8-16 X 1 1/4
1:4	119-5945	1	Element-Filter, Air (Inner)	19	3290-378	1	Tie-Cable
1:5	125-6445	1	Filter-Fuel ●	20	1-653313	2	Gasket-Exhaust
2	116-8747	1	Muffler, Kawasaki, 22-26	21	1-807259	1	Key-Machine 1/4 X 1/4 X 1
3	114-3550	4	Washer-Lock, Spring	22	116-3882	1	Pulley
4	114-3549	4	Nut-M8	25	116-8517	1	Clutch-200 Ft-Lb, 1.125 Bore - No D Driv
5	116-2353	1	Bracket-Muffler Mount, LH	32	116-4924	1	Asm-Hose Oil Drain W/Plug
6	116-2354	1	Bracket-Muffler Mount, RH	32:1	353-508	1	Plug-W/O-Ring
7	104-7658	2	Spacer	32:1:1	237-42	1	O-Ring
8	3234-29	2	Screw-HH Flg 5/16-18 X 1	33	116-3811-01	1	Bracket-Anchor, Clutch
9	32128-25	2	Nut-Hex 5/16-18 Side Lock	35	2412-147	1	Clamp
10	33114-016	5	Screw-HH M8-1.25 X 16Mm	36	3231-22	1	Bolt-Carriage 3/8-16 X 1
11	3253-4	4	Washer-Lock 5/16	37	104-8301	1	Nut-Nyloc 3/8-16 Flg
12	107-4136	1	Washer	46	32144-4	2	Screw-HWH 1/4-20 X 1/2 Taptite
13	1-603610	1	Washer-Spring Disc 7/16				
14	3212-6	1	Screw-HH 7/16-20 X 1 1/2 ♦				


● Not illustrated

▲ Obtain parts from www.kawpowerepc.com

♦ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

■ Not serviced separately

Electrical Assembly

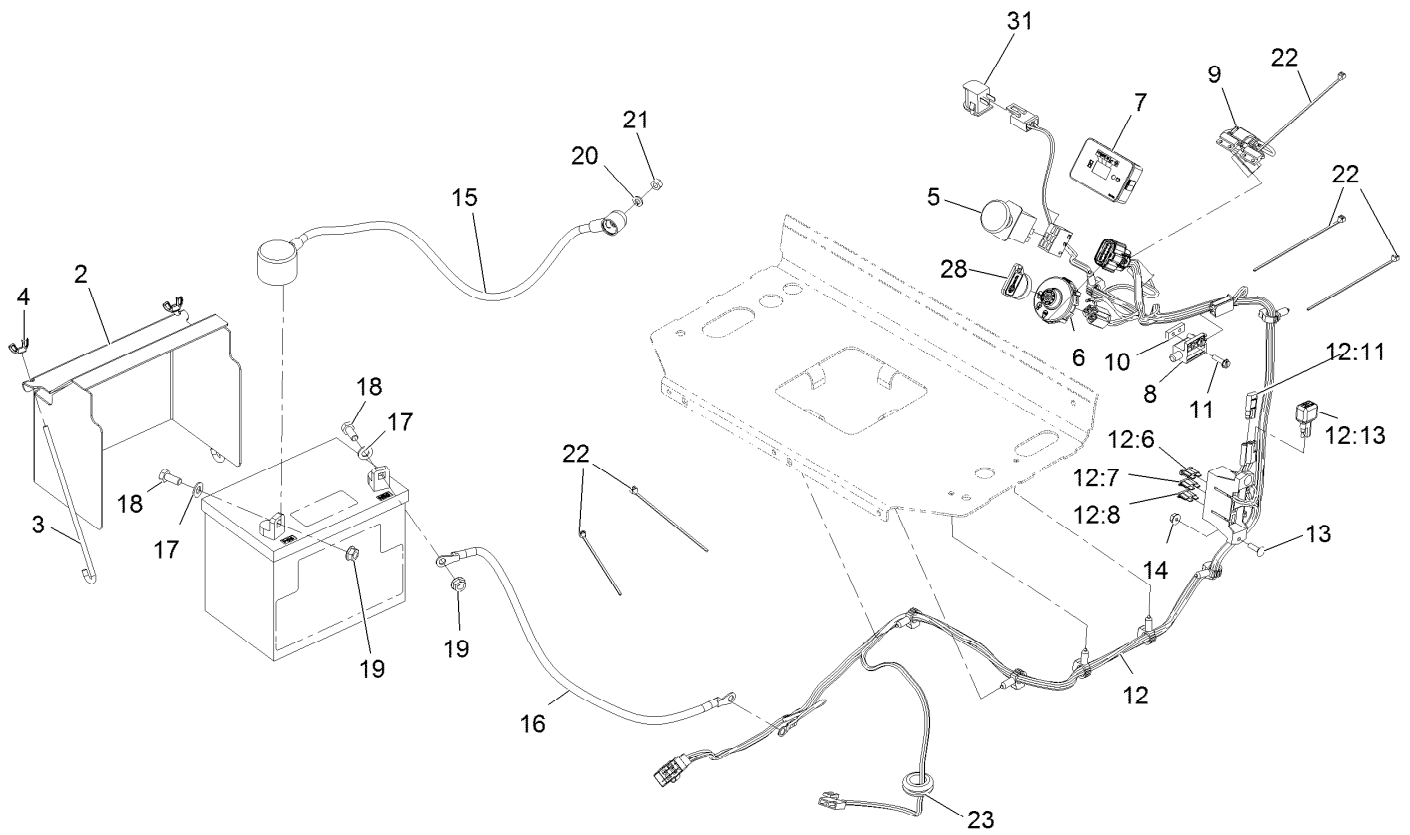

Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	117-0543-01	1	Cover-Battery	12:13	103-3895	1	Diode
3	1-633651	2	Bolt-Holddown	13	3229-20	2	Screw-CARR
4	1-543792	2	Wingnut-Nyloc 1/4-20	14	3290-148	2	Nut-Whizlock #10-24
5	114-0279	1	Switch-PTO	15	115-3864	1	Cable-Battery, Positive
6	117-2222	1	Switch-Ignition	16	105-0836	1	Cable-Battery, Black
7	117-3886	1	Module-Hour Meter	17	3256-23	2	Washer-5/16 Sae
8	1-513152	1	Switch-Closed, Normally	18	322-3	2	Screw-HH 5/16-18 X 3/4
9	116-2833	1	Harness-Switch, Reed	19	109-5715	2	Nut-Hex Flange 5/16-18
10	1-633181	1	Plate-Tapped	20	3253-3	1	Washer-Lock 1/4
11	32105-13	2	Screw-HWH #10-24 X 3/4	21	3217-5	1	Nut-Hex 1/4-20
12	126-1215	1	Harness, Wire ●	22	1-303287	5	Tie-Cable 5 1/2 (Small)
12:6	109103	1	Fuse-Blade, 30 Amp	23	117-2781	1	Grommet
12:7	109102	1	Fuse-Blade, 25 Amp	28	103-2106	1	Key-Exmark Logo
12:8	218-578	1	Fuse-Blade, 10 Amp	31	82-2190	1	Switch-Bail
12:11	116-0053	1	Cap-Plug				

● Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.

Notes:



MAXIMIZE THE PERFORMANCE OF YOUR EXMARK MACHINE.



EXMARK® PREMIUM ENGINE OIL

Exmark now offers a family of engine oil viscosities to perform well in any environment. Each viscosity has the same synthetic formulation to give you what you need in punishing conditions. We designed each grade to the highest quality, making it ideal even for diesel applications. Coupled with Exmark Premium Fuel Treatment, we have the performance products to make your machine hum.

EXMARK PREMIUM ENGINE OIL SAE 30/10W-30

- Meets zero shear requirements of a straight grade SAE 30 as well as the cold temp properties of a 10W-30.
- Most versatile oil in the industry.
- Superior corrosion protection over conventional oil - even in corrosive, humid environments.

EXMARK PREMIUM ENGINE OIL SAE 20W-50

- Perfect for your big block engine, or any application in severe service.
- Same full synthetic formulation as all other Exmark Premium viscosities.
- Also effective for use in severe service small block engines.

EXMARK PREMIUM ENGINE OIL SAE 10W-50

- Full synthetic formulation gives you peak performance. Don't settle for less.
- Wide span multi-grade combines easy starting in cold weather with maximum protection in high temperature operation.
- Reduce friction & wear over standard mineral formulations.

EXMARK PREMIUM ENGINE OIL SAE 0W-40

- The perfect choice for when the weather turns cold or unpredictable, and your Exmark UTV has to perform.
- Commercial quality for severe service.
- Advanced additive package helps prevent corrosion from long-term storage.

EXMARK PREMIUM ENGINE OIL UTV FORMULATION

- 4-cycle high-temp formulation.
- Heavier viscosity, full synthetic, perfect for your UTV.

EXMARK PREMIUM UTV EXTREME CONDITIONS GEAR OIL

- SAE 80W-90, designed to keep your UTV performing at its peak.
- Shear stable, hypoid gear lube.
- Includes a premium additive system to combat wear, oxidation, rust & corrosion.

Available from your local Exmark dealer. Find your closest dealer at exmark.com

EXMARK ACCESSORIES AND OPTIONS*

MID-MOUNT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	OPERATOR CONTROLLED DISCHARGE
FULL SUSPENSION SEAT	SUN SHADE
DECK LIFT ASSIST KIT	TRASH CONTAINER
HITCH KIT	TURF STRIPER
LIGHT KIT	ULTRA VAC COLLECTION SYSTEM
12V POWER PORT	ULTRA VAC QUICK DISPOSAL SYSTEM
MICRO-MULCH SYSTEM	

OUT-FRONT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	SNOW BLADE
DUAL-TAIL WHEEL	SNOWBLOWER
FLOOR PAN EXTENDER	SUN SHADE
HITCH KIT	TRASH CONTAINER
LIGHT KIT	ULTRA VAC COLLECTION SYSTEM
MICRO-MULCH SYSTEM	ULTRA VAC QUICK DISPOSAL SYSTEM
ROLL OVER PROTECTION SYSTEM (ROPS)	WEATHER CAB

WALK-BEHIND ACCESSORIES AND OPTIONS

GRASS CATCHER	TURF STRIPER
MICRO-MULCH SYSTEM	STANDON

*Some accessories and options not available for some models.

Place Model No. and Serial No.
Label Here (Included in the Literature
Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____

© 2015 Exmark Mfg. Co., Inc.
Industrial Park Box 808
Beatrice, NE 68310
All Rights Reserved

Part No. 4502-631 Rev. A
(402) 223-6300
Fax (402) 223-5489
Printed in the USA.



* 4 5 0 2 - 6 3 1 * A

www.exmark.com